

# 2008-2012 NTG4.0 GLK-Class X204 Installation Guide DMP





1. Please power off your Original monitor before installation.



2. Carefully pry out the decorative plate of the air conditioning outlet.



3. Gently pry out the decorative frame from the OEM screen.



4. Remove the fixing screws of the OEM screen.



# 2008-2012 NTG4.0 GLK-Class X204 Installation Guide



5. Carefully pry out the decorative strip from the OEM screen.



6. Remove the fixing screws of the OEM screen.




7. Using the provided photo as a reference, carefully pry out the buckles from the left and right sides of the NTG unit.




8. Disconnect the power harness from the NTG unit and connect it to the Android harness. Please refer to page 8 for the wiring diagram.




# 2008-2012 NTG4.0 GLK-Class X204 Installation Guide

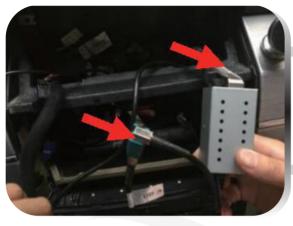

9. Connect the original LVDS cable to the LVDS box provided in the package. Please refer to Page 5 for the LVDS wiring box guide.

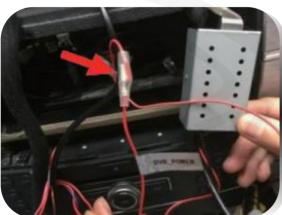

10. Connect the 12V power supply to the LVDS adapter. Please refer to Page 5 for the LVDS wiring box guide.

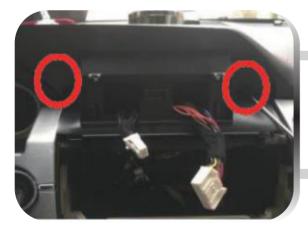


11. Assemble the Android stand securely on the dashboard and ensure that the cables are routed properly.



12. Connect all Android cables properly by referring to the provided photo.




# 2008-2012 NTG4.0 GLK-Class X204 Installation Guide

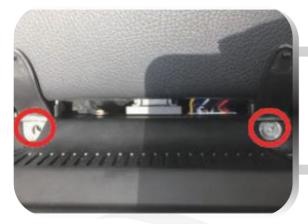

13. Securely fix and install the Android screen onto the stand.



14. Installation Complete

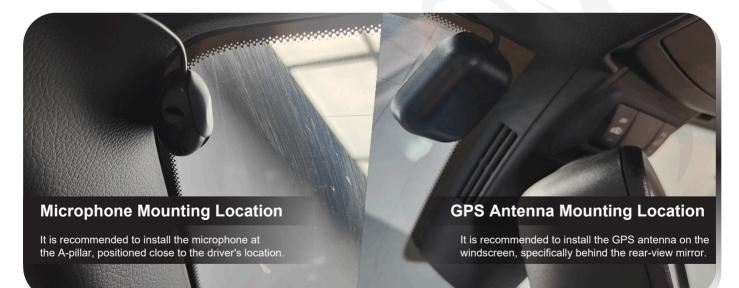



dmpcardesign

- www.dmpcardesign.com
- www.facebook.com/dmpcardesign



## 2008-2012 NTG4.0 GLK-Class X204 Wiring / Setting Guide


### **NTG 4.0 Installation instructions**

## **Car Display**

Car display: Choose According to your NTG Version [12]/[14]/[16]/[18] Settings -- Factory setting-- Password:190627 -- Car Display

Audio	ComTel	Video	System
	89.7 MH	Iz	
8 80	82 84	86	88 90 MHz
	Series .	a la caracteria de la cara	
	Presets		Sound
		<b>89.7 MH</b> 8 80 82 84	89.7 MHz 8 80 82 84 86

Factory Settings	3
Function	Current Selection: [08]NTG5.0_7.0'_8.0'(2016~)(half screen)
Vehicle	[12]NTG4.5_400x240_5.8"(2013~2015)(half screen)
	[13]NTG4.0/NTG4.5_800x480_7"(2013~2015)
Car Display	[14]NTG4.0/NTG4.5_800x480_7"(2013~2015)(half screen)
CAN Protocol	[15]NTG4.0_5.0"(2008-2010)
	[16]NTG4.0_5.0"(2008-2010)(half screen)
UI Configuration	

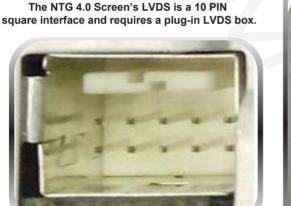

**Original Vehicle LVDS interface** 



### Sound settings

 
the original NTG4.0 system does not support automatic switching, only support manual switching AUX. 1. Press the DISC button on the main panel of the car to switch to the AUX state.







## 2008-2012 NTG4.0 GLK-Class X204 Wiring / Setting Guide




If no sound is heard after the above settings, please check the volume screen and whether the vehicle's fiber optic cable is connected.

- 1) Settings--Volume--Android Volume/OEM Volume
- 2) Settings--Android--Sound



3. If the car plug has fiber optic plug but without speaker cable, then you need to add a small speaker.

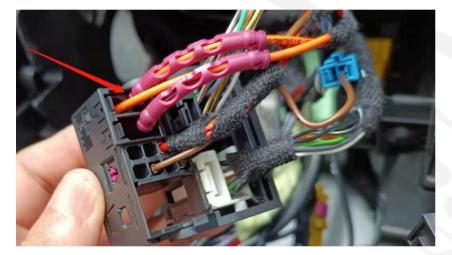



## **CAN Protocol selection**

Settings — Factory (Password 190627) —>Can Protocol : choose 4.0

#### Factory Settings


Function	Current Selection: [2]BC_Protocol_type_4.0
Vehicle	[0]BC_Protocol_type_5.0C
	[1]BC_Protocol_type_5.0A
Car Display	[2]BC_Protocol_type_4.0
CAN Protocol	[3]BC_Protocol_type_4.5
UI Configuration	[4]BC_Protocol_type_3.5
	[5]BC_Protocol_type_3.0

Note: If the wrong CAN protocol is selected, the display of the air conditioner on the Android screen will not work.




# 2008-2012 NTG4.0 GLK-Class X204 Wiring Guide

### **NTG 4.0 Installation instructions**

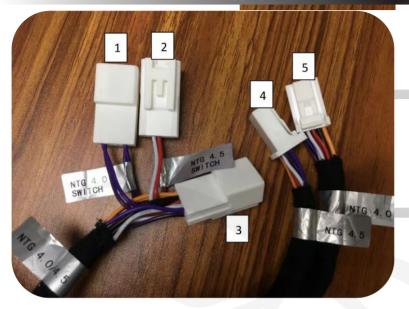

#### Label Recognition:

Label 1: NTG 4.0 SWITCH(Short Connect) Label 2: NTG 4.5 SWITCH (Short Connect) Label 3: NTG 4.0/4.5 (CAN Universal Connect) Label 4: NTG 4.5 (Original Car 4.5 CAN Connect) Label 5: NTG 4.0 (Original Car 4.0 CAN Connect)

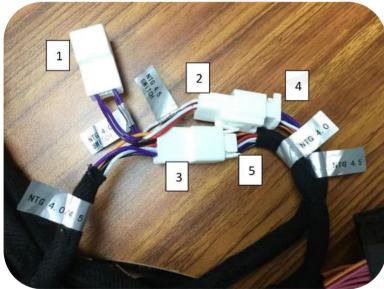

## **NTG 4.0**

NTG4.0 System Connection: Step 1: Label 3 (NTG4.0/4.5) connect Label 5 (NTG4.0) Step 2: Label 2 (NTG4.5 SWITCH) connect Label 4 (NTG4.5) Step 3: Label 1 (NTG4.0 SWITCH) do not connect

## NTG 4.5

#### NTG4.5 System Connection: Step 1: Label 3 (NTG4 0/4 5) connect L

Step 1: Label 3 (NTG4.0/4.5) connect Label 4 (NTG4.5) Step 2: Label 1 (NTG4.0 SWITCH) connect Label 5 (NTG4.0) Step 3: Label 2 (NTG4.5 SWITCH) do not connect

