FANG® HEADLIGHT BEZEL

Parts Included:

| 1 | Fang Headlight Bezel |
| 1 | Hardware Kit Including: |

1	Y-Harness
2	Connectors
4	6" Cable Ties
1	Left Mounting Bracket
1	Right Mounting Bracket
1	Foam Gasket

Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.

2. Place a soft cloth on the front fender, then remove outer-fairing. Set outer-fairing on a non-abrasive surface where you will be able to install Ciro Headlight Bezel.

3. Remove stock headlight trim ring. Set aside retaining screw to be reused.

4. Remove headlight bracket screws, one side at a time. All four screws will be reused.

5. Slide included mounting brackets with grommets facing up into place and reinstall stock screws, one side at a time. Do not over tighten.

6. Clean outer headlight retaining ring with an ammonia-based cleaner, then install included gasket around headlight. Trim gasket as needed.

WARNING:
This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:
This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:
This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:
Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.
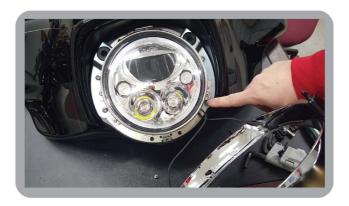Ciro will have no obligation if the customer cannot show proof of purchase.
Warranty will not be granted unless the part is properly installed and maintained.
Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.
Please visit our website Ciro3d.com for our complete warranty policy.

CIRO3D.COM

7. Route wires from Ciro Headlight Bezel through hole below headlight. Tuck wires to inside of fairing. Be sure wires are not pinched.

8. Press darts on bezel into grommets on headlight brackets. Reinstall retaining screw and torque to 9-18 in-lbs.

9. Flip outer-fairing over, being sure to protect painted surface. Temporarily align connector from hardware kit with y-harness. Install wires with terminals into connectors (black wire to black and red wire to yellow). Close locks on connectors, then plug both wires into y-harness.

10. Reconnect headlight, y-harness, and any additional accessories you may have unplugged. Use cable ties where needed.

y-harness

11. Reinstall outer-fairing and windshield per service manual.

G0045200, REV. A