



INSTALLATION INSTRUCTIONS

ROCKSTAR | TOURING®

MINIMUM REQUIRED TOOLS:



FLAT HEAD SCREWDRIVER



1/2", 9/16", 14mm, 7/8" or 22mm WRENCHES



5/16", 1/2", 9/16" SOCKETS AND RATCHET




SNAP RING PLIERS



3/16", 1/4", 5/16" ALLEN WRENCH




TORQUE WRENCH

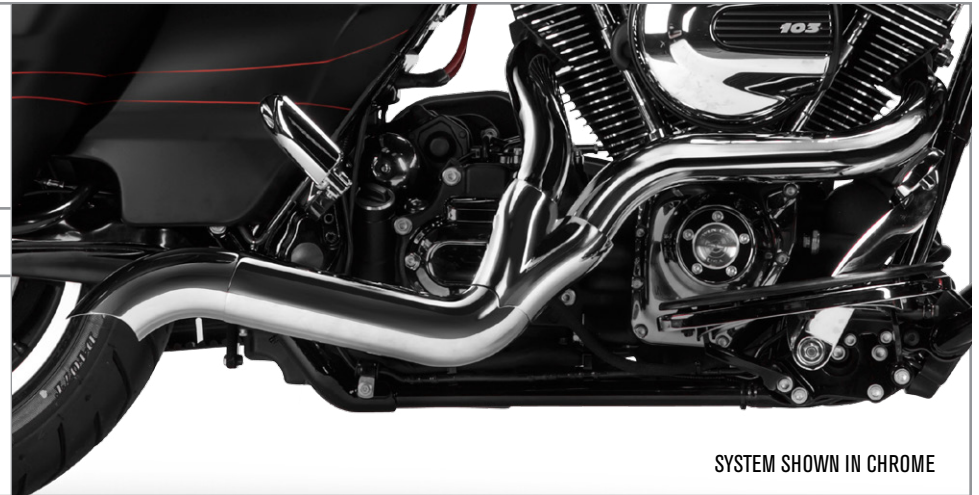

SYSTEM SHOWN IN CHROME

INCLUDED HARDWARE:

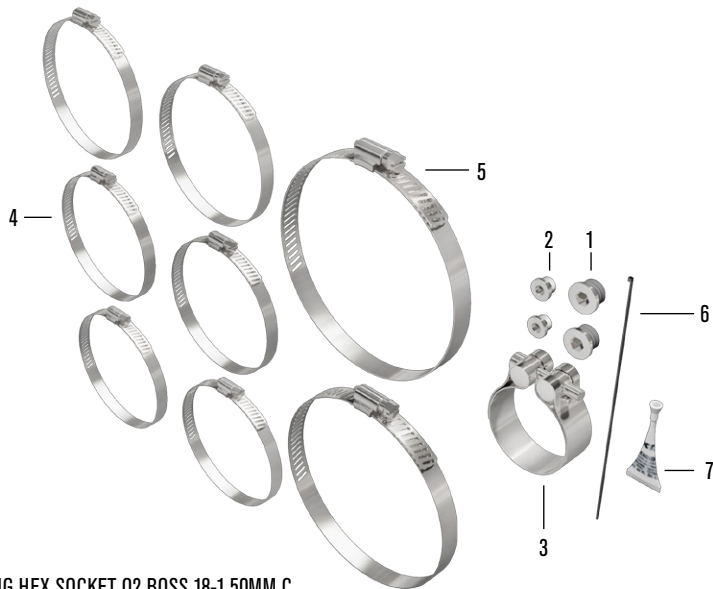


- 1. (2) PLUG HEX SOCKET O2 BOSS 18-1.50MM C
- 2. (2) PLUG HEX SOCKET O2 BOSS 12-1.25MM C
- 3. (1) CLAMP 2.50 BAND MUFFLER SS
- 4. (6) CLAMP 1.75 BAND HS SS
- 5. (2) CLAMP 2.50 BAND HS SS
- 6. (1) ZIP TIE BLACK NYLON
- 7. (1) THREADLOCKER

YEAR 2007-2015

CHROME PART # 7210705

BLACK PART # 7210706

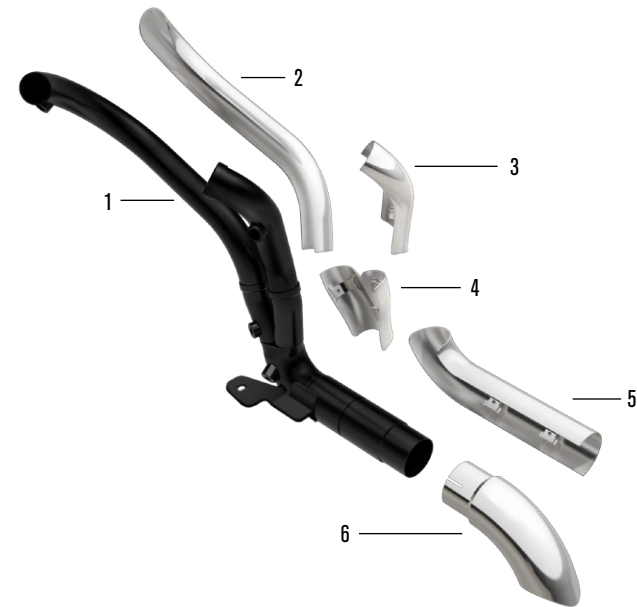

- 1. HEAD PIPES
- 2. FRONT HEAT SHIELD
- 3. REAR HEAT SHIELD
- 4. Y-COLLECTOR HEAT SHIELD
- 5. MID-SECTION HEAT SHEILD
- 6. MUFFLER TIP



IMPORTANT INFORMATION

1. Register your new product at www.magnaflow.com/motorcycle/register.
2. When installing new MagnaFlow exhaust systems, be sure your hands are clean and free of oil, lotion or similar products. After installation is completed and before starting the motorcycle, thoroughly clear the new exhaust system with a clean, soft cloth and cleaning solvent that leaves no residue. Debris, residue or fingerprints left on the system may cause damage to the finish. Damage or discoloration to finish is not covered by warranty.
3. MagnaFlow advises replacing worn or damaged gaskets.
4. Make sure there are no exhaust leaks at the junctions and connecting points of the exhaust pipes and/or mufflers, or at the cylinder.
5. Leaks due to improper installation may cause the engine to overheat. This may cause discoloration.

Maximize your motorcycles performance and efficiency by complementing your new MagnaFlow exhaust system with a fuel tuner management system and or EFI remapping. Remapping is suggested to optimize performance while reducing the possibility of damage to your engine or new exhaust system.

MagnaFlow makes every effort to design exhaust systems which improve the riding experience. However, due to restraints on some motorcycle models, tolerances, ground and or cornering clearance may not improve and in some cases may be reduced. Be sure to carefully follow all installation instructions.

Disclaimer: Some part numbers not available in California. The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related part(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order. Check Federal, State and local laws for compliancy.

Platforms, model names and descriptions including but not limited to Dyna®, Softail®, Sportster®, Touring®, Fat Boy®, Road Glide®, Heritage® and Harley® are registered trademarks of The Harley-Davidson Motor Company®, Milwaukee, WI, U.S.A.

CALIFORNIA EMISSIONS NOTICE

Some part numbers are not legal for sale or use in California. The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related part(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

In California, the sale and installation of motorcycle aftermarket exhaust parts that may have the potential to impact emissions are regulated by the California Air Resources Board (CARB). The sale, installation and use of emissions related aftermarket exhaust parts on motorcycles is prohibited unless the exhaust part is either an OEM "replacement part" as defined by the state California, or is specifically authorized for use by an Executive Order issued by CARB.

(1) Replacement Parts

Replacement Parts are aftermarket parts that are functionally identical to the stock OEM part they are intended to replace, and therefore do not adversely impact emissions when installed and in use. Replacement Parts are permitted for sale, installation and use on motorcycles used on or off the public highways in California. For motorcycles, these parts fall in to two categories:

* No emission control - If the motorcycle's stock exhaust system does not contain any emission control components, then an aftermarket exhaust part is a Replacement Part and no EO is required.

CALIFORNIA EMISSIONS NOTICE (CONT.)

* Upstream emission control devise. If the motorcycle's stock exhaust system contains a catalytic converter, then an aftermarket exhaust part positioned downstream from the catalytic converter (i.e. cat-back) is a Replacement Part as long as it does not remove, replace or adversely affect any emission control equipment originally attached to the stock exhaust system.

(2) Executive Order Parts

All exhaust parts that incorporate or impact any emission control devise require a CARB issued Executive Order allowing the parts to be advertised, sold, offered for sale and installed in California, pursuant to specific application.

For more information please visit <http://www.arb.ca.gov/msprog/aftermkt/motorcycle1/motorcycle1.htm>

WARRANTY:

MagnaFlow motorcycle exhaust products, including Arlen Ness by MagnaFlow exhaust systems, are warranted against defects in material and/or assembly workmanship only for a period of 90 days from invoice date. This warranty is void if the product is not installed properly on the vehicle for which it is designed. This warranty does not apply to any product which has been installed on any commercial or racing vehicle or which has been improperly installed, modified, altered or subjected to misuse or damage from accidents; including excessive heat. Also, cost of labor and any additional parts or components required to complete installation of a replacement product are not covered by this warranty; including coatings, paints and/or finishes, flaws or rust. MagnaFlow including Arlen Ness by MagnaFlow exhaust systems are designed to fit and operate on original OEM motors and chassis with no modifications of any type on the motorcycle.

Proof of purchase from an authorized retailer must accompany any warranty claim. The original product that is deemed to be under warranty may only be returned and/or exchanged for a product of the same part number. No other warranty, expressed or implied (including merchantability), applies to the products, nor is any person including the manufacturer authorized to assume any other warranty. Dealers and distributors are not authorized to make warranty judgments or claims regarding MagnaFlow products. The manufacturer does not assume any responsibility for any consequential damages occasioned by the product, or inconvenience or interruption in any operation, service or shipping. All approved warranty returns must be accompanied by a return authorization number. Parts returned to MagnaFlow without a return authorization and accompanying documentation may be refused. No parts will be accepted with freight due.

This warranty gives you specific legal rights. You may also have other rights which may vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The warranties set forth herein are exclusive and, unless otherwise required by applicable law, no other warranties are made by MagnaFlow or are authorized to be made with respect to the product.

PLEASE NOTE:

Several MagnaFlow motorcycle exhaust systems are designed to be used with O2 and non-O2 sensor applications. If your motorcycle does not come equipped with O2 sensors, simply skip any steps referring to them.

Also, make sure to retain all factory hardware and brackets as they may be used during the installation process.

1. Locate and remove the two D-ring pins inside of each saddlebag. (Figure 1)



Fig.1a



Fig.1b

2. Remove each saddlebag by carefully lifting them up and away from the motorcycle. Safely set saddlebags to the side. (Figure 2)



Fig.2

3. Locate and loosen the factory clamp at the inlet side of the OEM mufflers. (Figure 3)



Fig.3

4. Remove the two 5/16 inch bolts and washers attaching each muffler to the saddlebags mounts. (Figure 4)

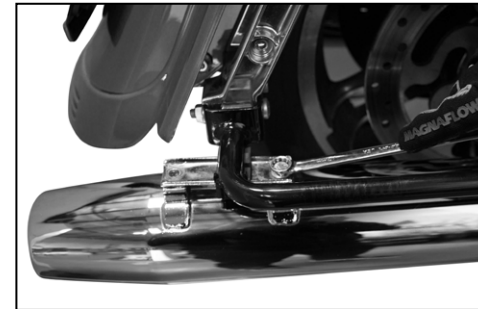


Fig.4

5. Slide each muffler towards the rear of the bike to remove it from the head pipe assembly. *Note: Penetrating lubrication may be necessary to assist in the removal of the muffler. (Figure 5)*

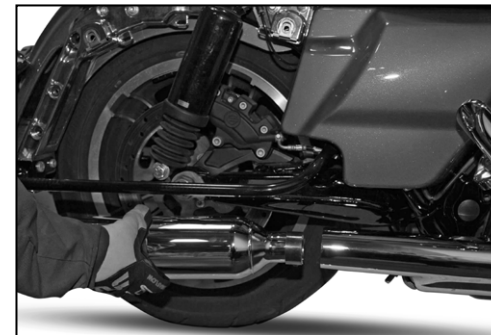


Fig.5

6. Remove the mid section and rear cylinder heat shields by removing the heat shield clamps. (Figure 6)



Fig.6a



Fig.6b

7. Locate and remove the two mounting bolts holding the right floorboard. (Figure 7)

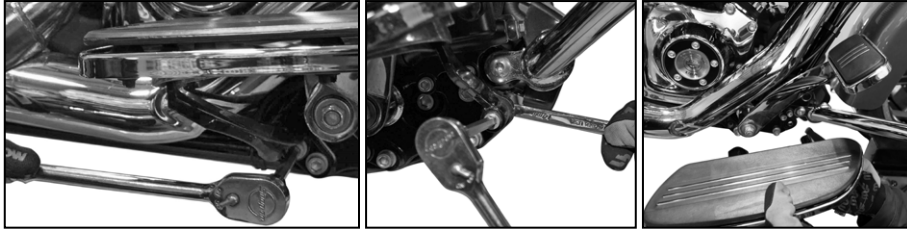


Fig.7a

Fig.7b

Fig.7c

8. Remove the front cylinder heat shield by removing the heat shield clamps. (Figure 8)



Fig.8

9. Locate and remove the left side head pipe mounting bolt and loosen the connector clamp located underneath the motorcycle. (Figure 9)



Fig.9

10. Remove the left side head pipe assembly.

11. Locate and remove the four exhaust flange mounting nuts on each cylinder. (Figure 10)



Fig.10a

Fig.10b

12. Remove the head pipe assembly mounting nut and head pipe assembly. (Figure 11)



Fig.11

13. Remove the two O2 sensors from the head pipe assembly. To insure continued performance from your stock O2 sensors, keep any fingerprints, debris, or chemicals away from the tips. Please
14. From the stock head pipe assembly, remove the circlips and mounting flanges to reuse with the new system. Be sure to replace any reused hardware that is worn or damaged before installing your Magnaflow motorcycle exhaust system. Please reference item 2 on the Important Information page.

PLEASE NOTE:

Several MagnaFlow motorcycle exhaust systems are designed to be used with O2 and non-O2 sensor applications. If your motorcycle does not come equipped with O2 sensors, simply skip any steps referring to them. It will be necessary to install the supplied O2 sensor plugs during the installation process.

Also, make sure to retain all factory hardware and brackets as they may be used during the installation process.

1. Install the factory mounting flanges and circlips, removed from the factory system, on the new head pipes. (Figure 12)

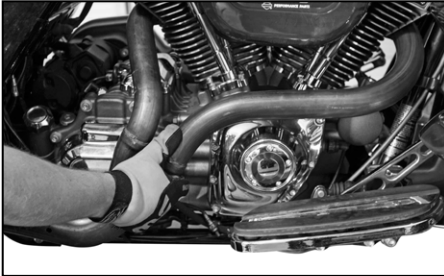


Fig. 12

2. Carefully install the factory O2 sensors into the new head pipes
3. Install the head pipe assembly to the exhaust port using the factory exhaust port nuts. Do not tight the nuts at this time to allow for adjustment. (Figure 13)



Fig. 13

4. Attach the head pipe assembly to the factory mounting bracket located on the bottom side of the transmission, using the factory bolt and nut. Do not tight the nut at this time to allow for adjustment. (Figure 14)



Fig. 14

5. Insert the supplied heat shield clamps to the heat shields by inserting the end of the clamp through the retaining bracket. (Figure 15)



Fig. 15

6. Attach the front, rear, and midsection heat shields to the head pipe assembly using the heat shield clamps. Do not tight the clamp at this time to allow for adjustment. (Figure 16)



Fig. 16a



Fig. 16b

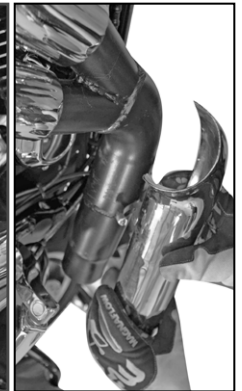


Fig. 16c

7. Attach the Y-collector heat shield to the head pipe assembly by first sliding the bent tab underneath the midsection heat shield, then attaching the heat shield clamps. Do not tight the clamp at this time to allow for adjustment. (Figure 17)



Fig. 17a



Fig. 17b

- Slide the 2.50 inch exhaust clamp on the end of the exhaust tip making sure that the bolt head is facing up. Install the tip onto the head pipe assembly. The tip can be rotated to you to personalize your system. Make sure the tip is not positioned in a manner that may cause harm or damage to the riders or interfere with the operation or proper function of the motorcycle. Do not tight the clamp at this time to allow for adjustment. (Figure 18a, 18b, 18c)

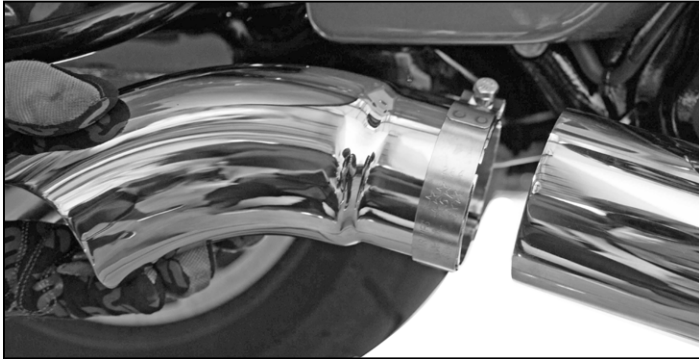


Fig. 18a



Fig. 18b



Fig. 18c

- Adjust the exhaust system as necessary and tighten all of the bolts and clamps.
- Re-route and plug in the O2 sensors to the factory harness. Secure the harness wire using the supplied cable tie.
- Before starting the motorcycle, make sure to check that all of the exhaust components including O2 wiring have been properly installed and have proper clearance to avoid damage. Make sure that all hardware has been tightened to factory specifications. Please reference item 2 on the Important Information page.

Note: Remapping the EFI unit is suggested to optimize performance while reducing the possibility of damage to your engine or new exhaust system.