




**AX1376**


Sabot/Skidplate PHD  
HVA TC125 2016

- 1 PM02-01-034
- 2 PM01-04-138
- 2 NE01-11-001 Screws 6x25mm
- 2 NE01-04-002 Clamped Bolt
- 4 NE01-02-004 TFHC 6x30mm
- 4 NE01-04-003 EM6F
- 4 NE01-03-001 R.M6
- 1 NE04-01-109 STICKER

**FOLLOW AXP RACING ON**

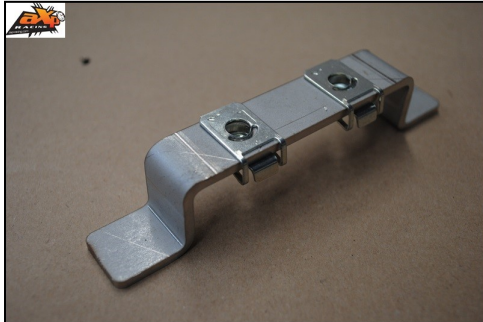

Préparer la fixation avant/ **Prepare the front fixation**

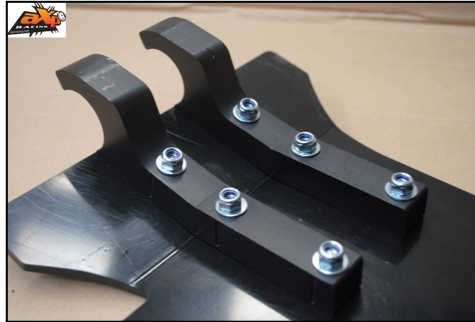

Fixer les fixations arrières/ **Fix the rear fixations**



Clipser et fixer l'avant/ **Clips and fix the front**




**AX1376**

Sabot/Skidplate PHD  
HVA TC125 2016

- 1 PM02-01-034
- 2 PM01-04-138
- 2 NE01-11-001 Screws 6x25mm
- 2 NE01-04-002 Clamped Bolt
- 4 NE01-02-004 TFHC 6x30mm
- 4 NE01-04-003 EM6F
- 4 NE01-03-001 R.M6
- 1 NE04-01-109 STICKER

**FOLLOW AXP RACING ON**

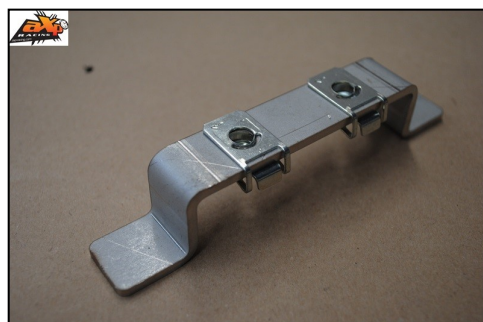

Préparer la fixation avant/ **Prepare the front fixation**



Fixer les fixations arrières/ **Fix the rear fixations**



Clipser et fixer l'avant/ **Clips and fix the front**