



- 6 NE01-02-005 Tfhc 6x35mm
- 8 NE01-04-003 Em6f
- 8 NE01-03-001 Alu ring M6
- 2 NE01-03-006 Alu ring M6 Large
- 2 NE01-06-026 Th 6x25mm
- 2 NE01-02-003 Tfhc 6x25mm
- 2 PM01-04-147 Rear plastic fixation
- 1 PM01-06-017 N°2



**AX1421**  
**Xtreme Skid plate**  
 HVA TE250/300



PM01-06-017 + PM01-04-147  
 Tfhc 6x25 + Tfhc 6x35 + Ring M6 +  
 Em6f

Clipser sur l'arrière du cadre  
**Clip it on the rear frame**


Fixer l'avant du sabot dans le cadre  
**Fit the front of the skid plate in the frame**



- 6 NE01-02-005 Tfhc 6x35mm
- 8 NE01-04-003 Em6f
- 8 NE01-03-001 Alu ring M6
- 2 NE01-03-006 Alu ring M6 Large
- 2 NE01-06-026 Th 6x25mm
- 2 NE01-02-003 Tfhc 6x25mm
- 2 PM01-04-147 Rear plastic fixation
- 1 PM01-06-017 N°2



**AX1421**  
**Xtreme Skid plate**  
 HVA TE250/300

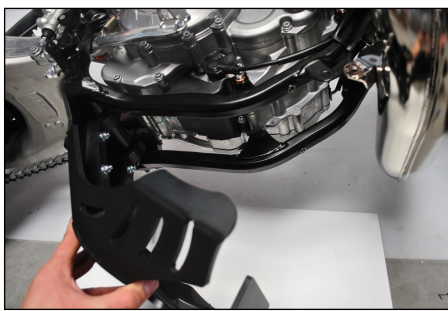

PM01-06-017 + PM01-04-147  
 Tfhc 6x25 + Tfhc 6x35 + Ring M6 +  
 Em6f

Clipser sur l'arrière du cadre  
**Clip it on the rear frame**

Fixer l'avant du sabot dans le cadre  
**Fit the front of the skid plate in the frame**