



AX1429


'11-16 SX/XC

'14-16 TC/TE/TX250-300

Xtrem Skid Plate


2 NE01-01-001 Tbhc 6x16mm
8 NE01-03-001 M6 Washers
10 NE01-04-003 Em6f
6 NE01-02-005 Tfhc 6x35mm
3 NE01-04-002 Clamped Bolt
3 NE01-11-001 Screws 6x25mm
2 NE01-02-003 Tfhc 6x25mm
1 PM02-01-027
1 PM03-04-096
2 PM01-04-131
1 PM01-06-023 Plastic N°8

FOLLOW US ON

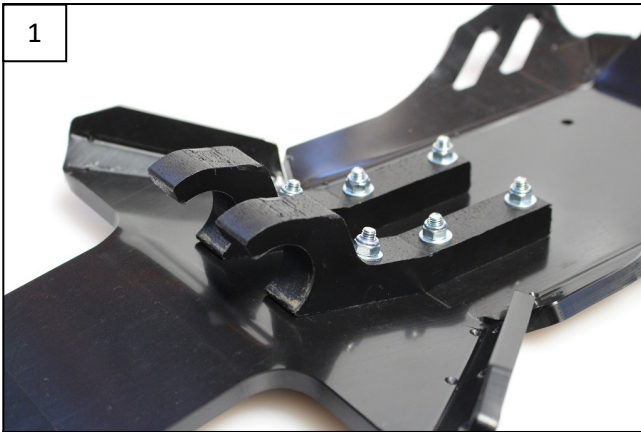


1

Fit the rear plastic brackets with Tfhc 6x35 + em6f + washers

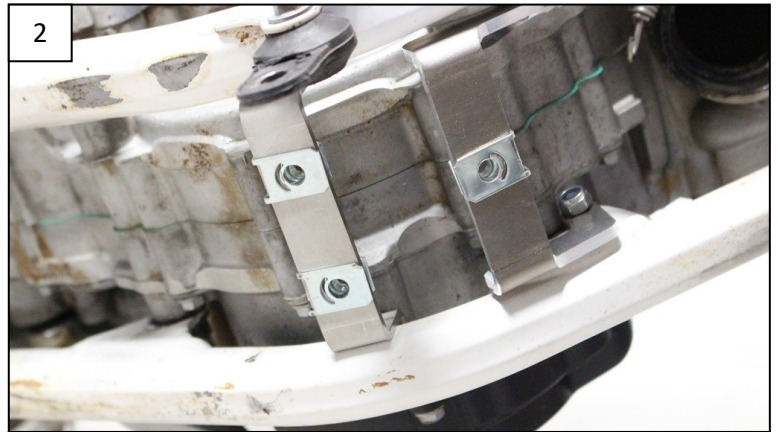


2

Fit the front brackets with Tbhc 6x16mm + em6f
Insert the PM02-01-027 between tubes

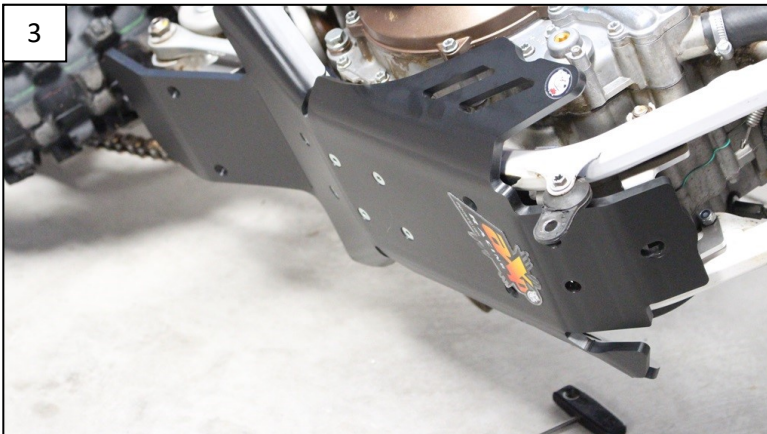

3

Clip the rear of the skid plate to the rear tubes and be ready to fit the front

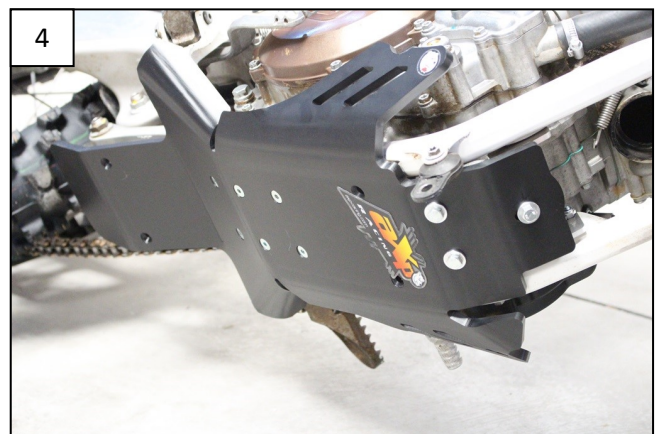

4

Fix the front with TH6x25 mm + Alloy spacers



5

Fix the PM01-06-023 N°8 with Tfhc 6x25mm + washers + em6f