




- 2 PM01-04-160
- 1 PM01-04-161
- 1 PM01-06-026 — N°11
- 1 PM02-01-013
- 2 NE01-11-001 — Screws 6X25
- 2 NE01-04-002 — Clamped bolts
- 8 NE01-03-001 — M6 Washers
- 8 NE01-04-003 — Em6f
- 4 NE01-02-003 — Tfhc 6x25mm
- 4 NE01-02-004 — Tfhc 6x30mm

**AX1440**  
 Xtrem Skid Plate  
 YZ250/YZ250X/WR250Z

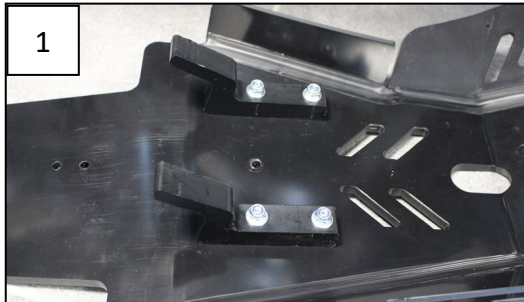

2 PM01-04-160 + TFHC 6x30mm + Washers + Em6f



PM02-01-013 + Clamped Bolts



Put the skid plate in place  
*Insérer le sabot sur la poutre AR*



2 NE01-11-001



Put back the bike straight  
*Remettre la moto droite*



PM01-04-161 + TFHC 6x25mm + washers + em6f  
 Put the rear plastic mount in place  
*Mettre le contre crochet en place*



TFHC 6x25mm + washers + em6f  
 Put the reinforced plate in place  
*Mettre la plaque de renfort en place*

