




- 2 PM01-04-170 - Plastic rear mounts
- 1 PM01-06-035 - Part N°19
- 2 NE01-11-001 - Screw 6x25mm
- 6 NE01-02-005 - Tfhc 6x35mm
- 4 NE01-02-003 - Tfhc 6x25mm
- 8 NE01-03-001 - R.M6
- 8 NE01-04-003 - Em6f
- 4 NE01-04-002 - Clamped bolt
- 1 PM02-07-001 - Metal bracket
- 1 PM01-04-181 - Front bracket





AX1546




HVA TC250/TX300
Blue Xtrem Skid Plate

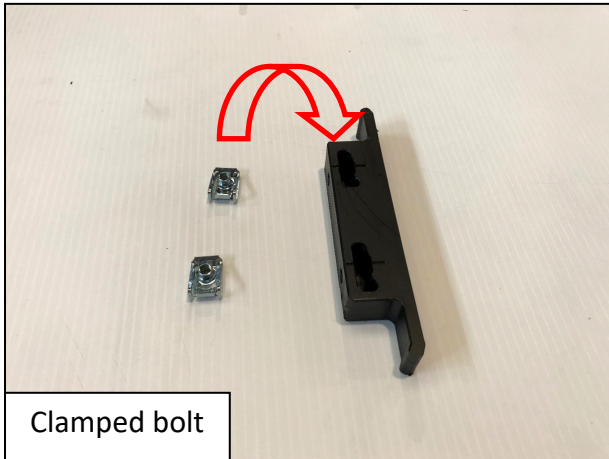


Clamped bolt


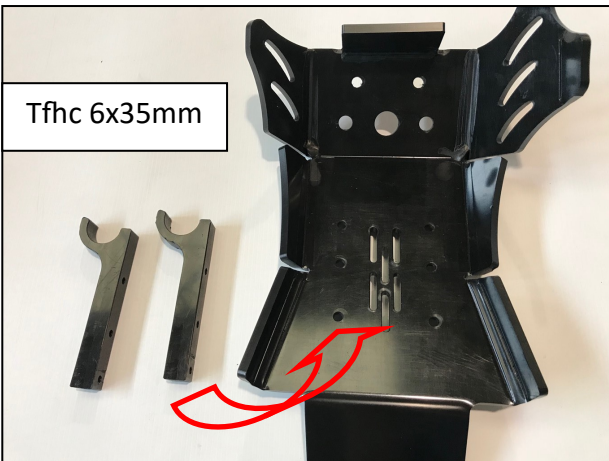



Tfhc 6x35mm

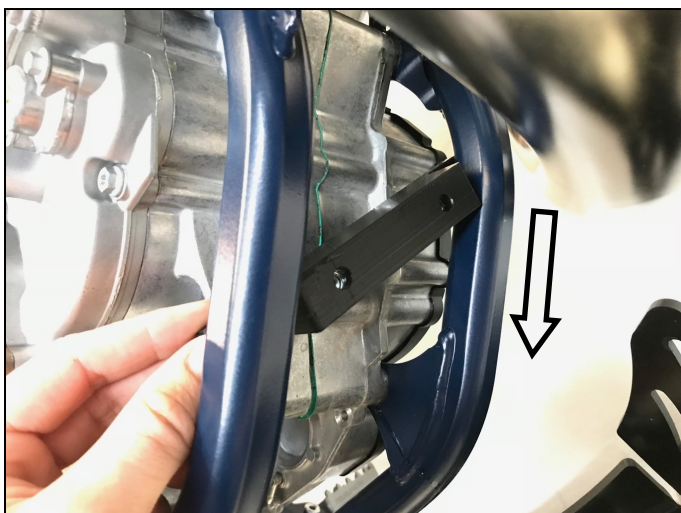

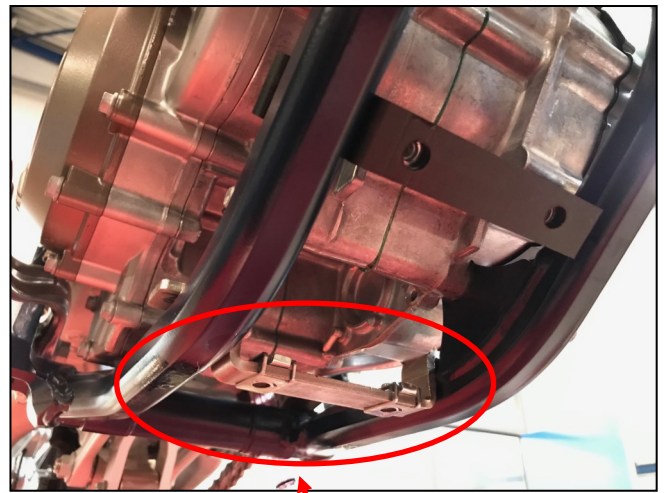

Put the metal bracket in place
Mettre la bride inox en place

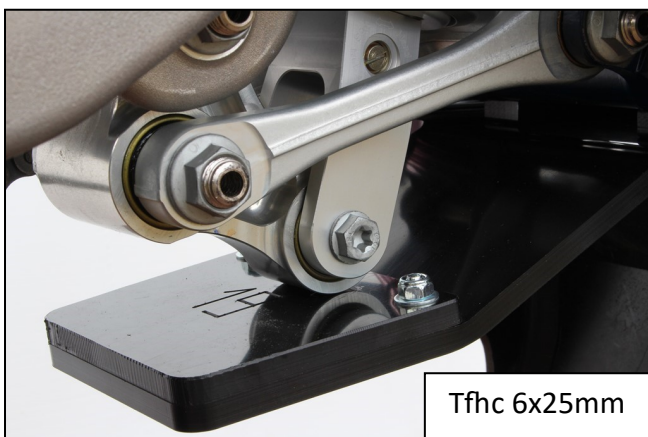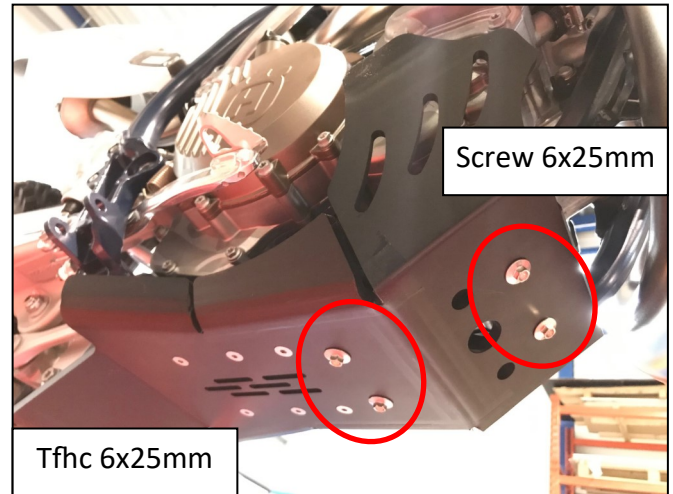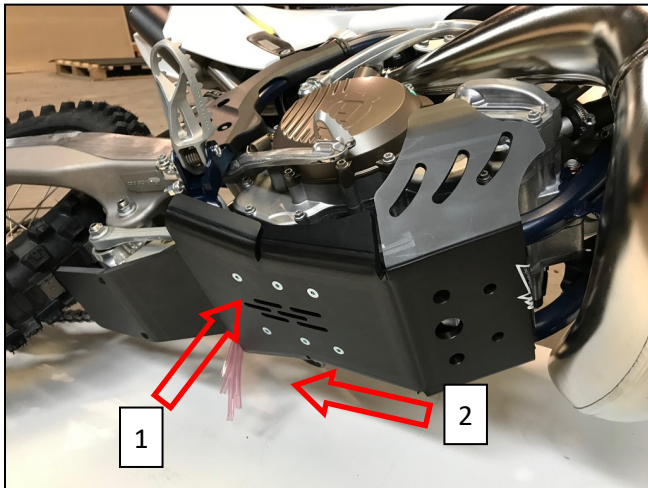

A TUTORIAL VIDEO IS AVAILABLE ON OUR YOUTUBE CHANNEL