




## LIGHTED WINDSHIELD TRIM

### Parts Included:

- 1 **Lighted Windshield Trim**
- 2 **Y-Harnesses**
- 1 **Dielectric Grease Packet**
- 6 **6" Cable Ties**
- 1 **Hardware Kit Including:**
  - 2 **1/4-20 x 3/4" Button Head Screws**
  - 1 **1/4-20 x 2-1/4" Button Head Screw**
  - 3 **1/4" Narrow Flat Washer**

### Installation Instructions:

1. **Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.**
2. **Remove outer fairing and set on a non-abrasive surface until needed later.**
3. **Remove turn signal bar and unplug. Apply a small amount of the included dielectric grease to the connector and plug the supplied y-harness in line with it. Route long end of y-harness to central area of inner fairing. Repeat on other side.**

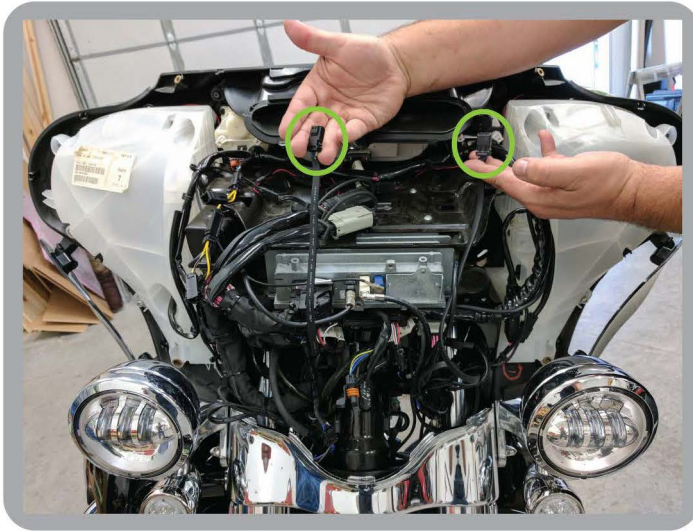

4. **Plug in left end of trim to left signal and right end of trim to right signal. Secure wires with included cable ties where needed.**

**Note:** An extra set of hands are helpful for the next step.

### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:

Giro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Giro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products. Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

**CIRO3D.COM**

**5. Reinstall outer fairing. Be sure to plug in any previously disconnected electrical plugs. Turn motorcycle on to accessory power to verify that all lighting is functioning as expected.**

**Note:** Wires exiting on the left and right sides of the windshield trim should fit between the inner and outer fairing without being pinched.



**6. Install the 3 supplied button head screws and washers to secure the windshield trim. Reinstall the 4 original fasteners on the inner fairing.**

