Part Number: BMW-F65GS-8-(E) & BMW-F7GS-14-E

Description: Canyon Dual Sport Saddle

Fitment: 2008-2013 BMW F650 GS, F700 GS & F800 GS

Revision: 3



Tools Required	Parts List
#2 Phillips Screwdriver Side cutters or scissors (for trimming zip ties) T-25 torx combination wrench	1 #SWH-IN-LINE-F Wire Harness 3 6" Zip Ties

- 1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.
- 2. Install your Corbin saddle just like stock with brackets preinstalled on the saddle.
- 3. To remove the saddle, use your stock key at the rear of the bike.


Heater Installation:

- 1. Remove the top tank panel to expose the battery (*Figure 1*).
- 2. Lift up cover.

NOTE: We recommend you get a second pair of hands to help assist you.

- 3. Remove the bolt on the left side of the gas tank panel (*Figure 2*).
- 4. Route pigtail to seat area under the left panel (*Figure 3*). Be sure to route wiring where it will not get pinched by anything, keeping in mind potential pinch points when mounting the front and rear saddles on the bike.
- 5. Install the wire harness by attaching the wire with the fuse to the positive terminal of the battery and the wire without the fuse, to the negative terminal (*Figure 4*).



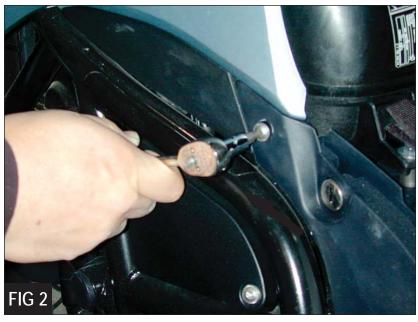


- 6. Bundle loose wiring and secure to the existing cables with the included zip ties (*Figure 5*). Do not tighten excessively or you may damage the wiring...just secure it in place for cleanliness.
- 7. Plug in the seat and test. To do this, just plug the pigtail into the seat and flip the switch on the saddle. If the switch illuminates, the saddle heater is working.
- 8. If the seat is working properly, reinstall your left side panel and top tank panel.

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

WARNING: The heated seat will **NOT** turn off when the ignition is turned off. You must turn off your heated seat when not in use.

Enjoy your new saddle!



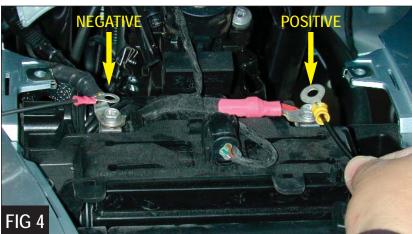



Questions? Give us a holler... 800-223-4332 tech@corbin.com

WARNING

Heater elements should
NEVER be installed in
motorcycle seats
used by riders that
cannot sense
heat.