

Part Number: CA-RKY-S & CA-RKY-PAD

Description: Solo Saddle & Trunkrest Pad

Fitment: 2019 Can-Am Ryker

Revision: 2



Tools Required	Parts List
13mm Socket Wrench Drill Gun and 1/4" Drill Bit 4mm Allen Wrench T-30 Torx Wrench Painters Tape	1 #A01297 Mounting Bracket 1 #SP00231 8mm x 16 Hex Head Bolt 1 #SP00109 5/16" Flat Washer 1 #SP00244 6mm Allen Bolt 1 #SP01080 6mm Flat Washer

NOTE: We recommend the use of Loctite® or similar thread lock product when assembling parts on your motorcycle.

SOLO SEAT INSTALLATION:

1. Begin by removing your stock seat. Refer to your owners manual if necessary.
2. Install the Corbin bracket under the bike seat base and secure with the provided 8mm x 16 hex head bolt and 5/16" flat washer (*Figures 1 and 2*).
3. Unbolt and remove the speed nut and clip on the rear right side of the bike seat base (*Figure 3*).
4. To install your Corbin seat, insert the front tongue on the bottom of the seat, into the bracket you just installed. Then lower the back end and secure from under the bike seat base, using the supplied 6mm Allen bolt and 6mm flat washer (*Figure 4*).



FIG 1

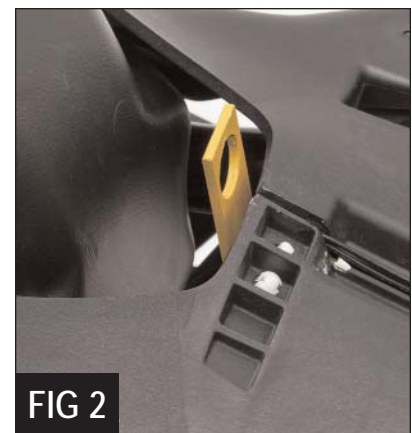


FIG 2



FIG 3

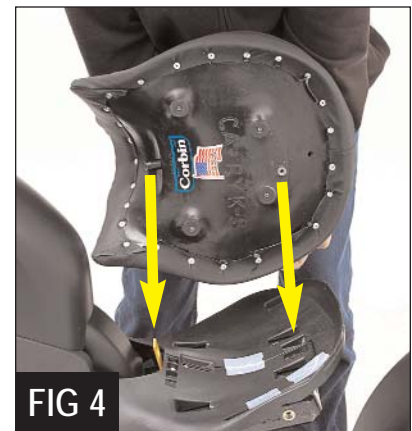


FIG 4

TRUNKREST PAD INSTALLATION:

1. Remove all contents from your trunk and then close the lid.
2. Put a piece of painters tape on the front of the trunk (*Figure 5*).



FIG 5

3. Mark the two bolts on the back of the trunkrest pad with a pen (*Figure 6*).

4. Center the trunkrest pad on the front of the trunk (*Figure 7*) and gently press it up against the tape, so it leaves a mark on the tape (*Figure 8*).

5. Drill a 1/4" hole where the bolts left a mark (*Figure 9*).

6. Remove the bolts and washer from the trunkrest pad, open the trunk lid and secure the trunkrest pad from the inside of the trunk using the bolts and washers you just removed.



Questions? Give us a holler...
800-223-4332
tech@corbin.com