

Part Number: D-SF-V4

Description: Gunfighter Saddle

Fitment: 2021 Ducati 954 Streetfighter V4

Revision: 1

Corbin

Tools Required	Parts List
3mm Allen Wrench 4mm Allen Wrench	1 #SA01325 Bracket Lock Kit 2 #SP02567 m5 x m30 Button Head Allen Bolts 2 #SP00793 Small Flat Washers 2 8" zip tie


1. Remove your stock rear seat using the OEM key. Remove the stock front seat by removing two bolts, using a 4mm Allen wrench (*Figure 1*).



2. Next, you will need to remove the tail panel. Start by removing the two lower bolts on each side, using a 3mm Allen wrench (*Figure 2*). Then remove the two bolts on top (*Figure 3*). Discard the two top bolts or put them in a safe place. You will not be reusing them with the Corbin saddle. Remove the tail panel (*Figure 4*).



3. Remove the two bolts on the right side panel, using a 4mm Allen wrench (*Figure 5*). Gently flex back the panel to gain access to the key lock cable end.

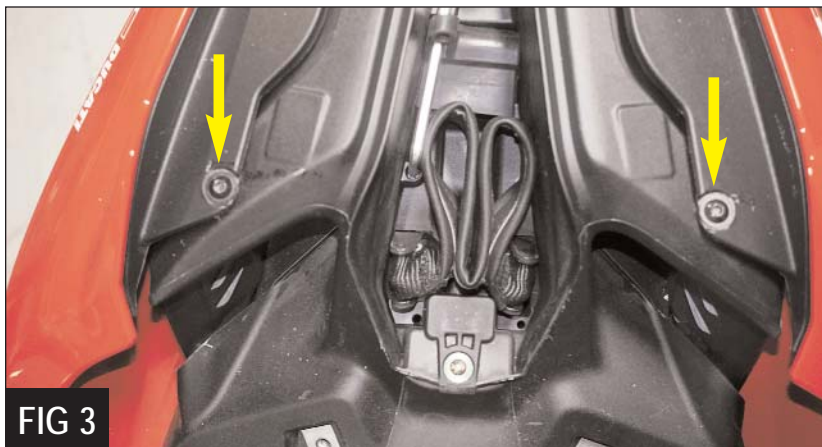

4. Locate the locking mechanism on the right side of the bike and disconnect the cable and push it out of the way (*Figure 6*).

NOTE: Does not need to be removed from the bike.

5. Route the Corbin cable towards the right side of the the frame (*Figure 7*) and connect it to the OEM locking mechanism where you just disconnected the cable in step 4 (*Figure 8*).



6. Reinstall right side cover.



7. Slide the tail panel back into place, making sure the rear tab on the bike slides into the rear of the tail panel (*Figure 9*).




8. Install the Corbin bracket on to the tail section and secure with the supplied m5 x m30 Allen bolts and flat washers, using a 3mm Allen wrench (*Figure 10*).

NOTE: We recommend placing a towel over your bike to help prevent from scratching.

9. Zip tie cable to the frame (*Figure 11*).

10. Reinstall the lower bolts onto the tail panel.

11. To install your Gunfighter saddle, slip the two front pegs in the front mounting points, align the Corbin locking pin to the Corbin locking mechanism and push down on the saddle until you hear the lock click (*Figure 12*).

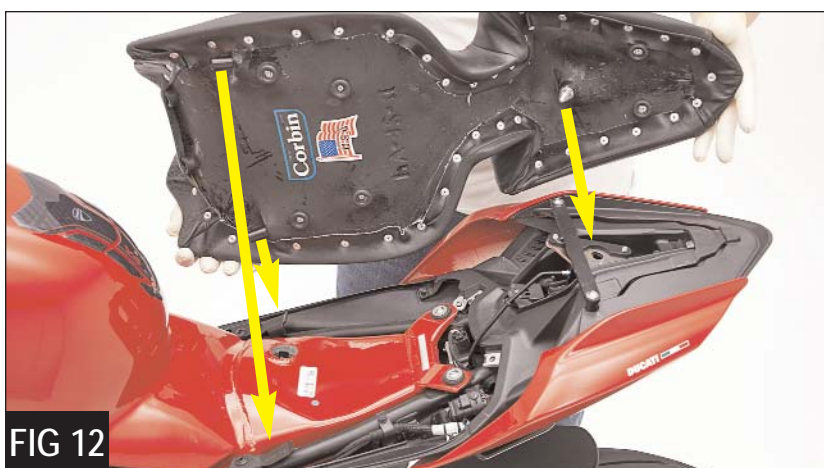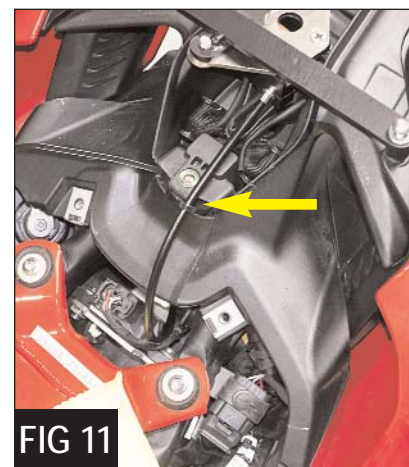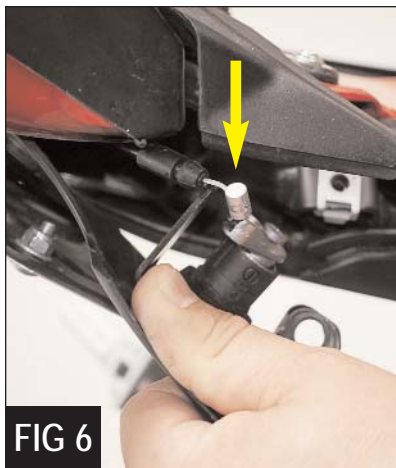

Questions? Give us a holler...
800-223-4332
tech@corbin.com

#D-SF-V4

PUT ON seat

SP01080	m6 fender washer zinc finish
QTY (1)	



SP00235	nylon cup washer black finish
QTY (1)	



SP11015	latch pin stainless
QTY (1)	



SP00119	1/4x20x1 1/4 cap head bolt black finish
QTY (2)	




SP00945	nylon spacer Black finish
QTY (2)	



SEND w/ seat

SA01325	bracket lock kit black brkt finish
QTY (1)	

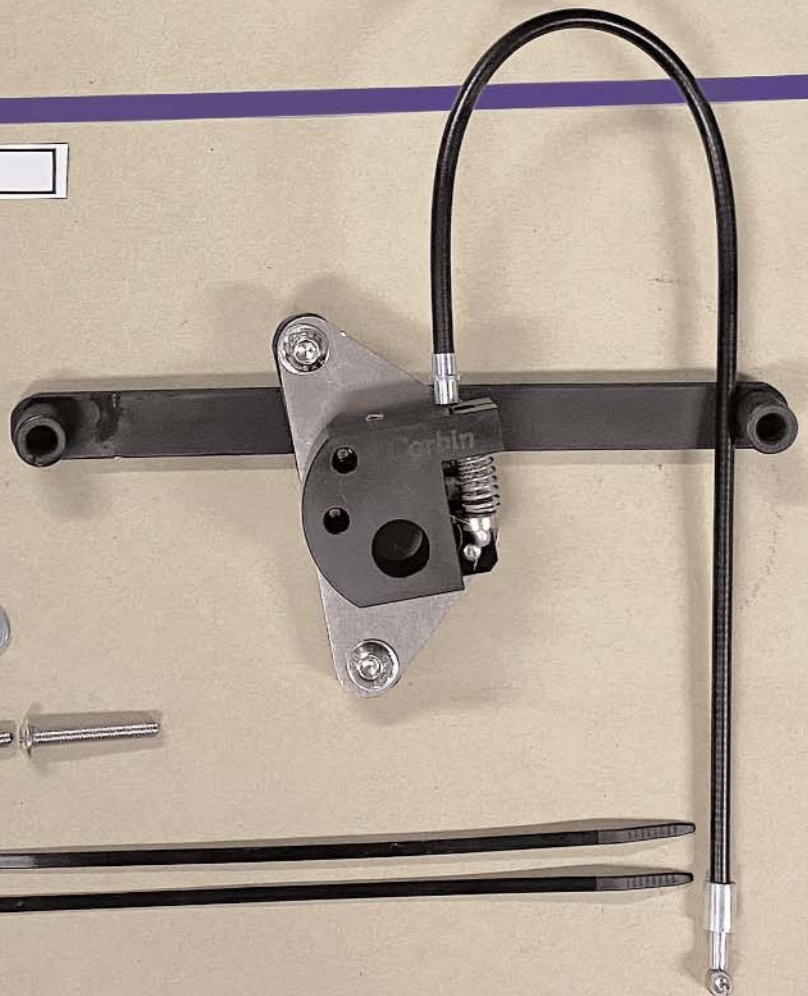

SP00793	small washer zinc finish
QTY (2)	



SP02567	m5xm30 bton head allen bolts Black finish
QTY (2)	



QTY (2)	8' zip ties black finish
-----------	-----------------------------

