

Part Number: I-S-25-DT(E), I-S-25-S(E) & I-S-25-H

Description: Dual Tour Saddle, Solo Saddle & Hollywood Saddle

Fitment: 2025 Indian Scout

Revision: 1



Tools Required	Parts List
5mm Allen Wrench	1 Indian Extension Wiring Pigtail (2018+ Models) 1 #A01384 Front Seat Mounting Bracket 1 #A01382 Rear Seat Mounting Bracket 6 #SP00215 5/16" Flat Washer 2 #SP00973 m8 x 40 Allen Bolts 4 #SP00248 m8 x 16 Allen Bolts

1. Begin by removing your stock seat(s). Refer to your owners manual if necessary.

2. Remove the rear mounting bolt, using a 5mm Allen wrench (*Figures 1 & 2*).

3. Install the rear bracket and secure with the 5/16" flat washers and m8 x 16 Allen bolts, using a 5mm Allen wrench (*Figure 3*).



FIG 1



FIG 2

NOTE: Slide the OEM connector out of the way to gain access to the hole in the rear mounting bracket (*Figure 4*).

4. Put the connector back in place.

5. Install the front bracket and secure with the 5/16" flat washers and m8 x 40 Allen bolts, using a 5mm Allen wrench (*Figure 5*).



FIG 3

6. To install your new Corbin saddle, start by sliding the two front tabs **under** the front mounting bracket you just installed, making sure its pushed all the way forward. Next lower the rear of the seat and secure with the supplied 5/16" flat washers and m8 x 16 Allen bolts (*Figures 6 & 7*).

HEATER INSTALLATION:

1. Pull out the small connector on the bike (*Figure 8*). Connect the supplied pigtail (*Figure 9*) into the OEM connector (*Figure 10*).



FIG 4


2. Tuck excess wires out of the way.

3. Plug the wiring pigtail on the Corbin saddle into the wiring harness you just installed. Flip the switch on the saddle. If the switch illuminates, the saddle heater is working.

4. Proceed with saddle mounting as outline above.

NOTE: The heater is controlled by the switch along the side of the saddle. The temperature is regulated by an internal thermostat when the heater switch is turned on.

Enjoy your new saddle!

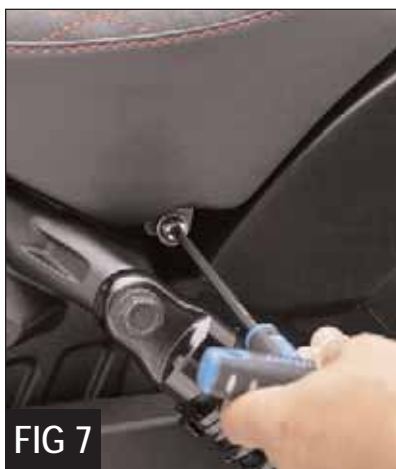

Questions? Give us a holler...
800-223-4332
tech@corbin.com

I-S-25-DT-E

I-S-25-H

I-S-25-S-E

SEND w/ seat

SP00215 5/16 flat washer
QTY (6) zinc finish



SP00973 8m x 40m allen bolt
QTY (2) zinc finish




SP00248 8m x 16m allen bolt
QTY (4) zinc finish



A01384 Mounting bracket
QTY (1) black finish



A01382 Mounting bracket
QTY (1) black finish

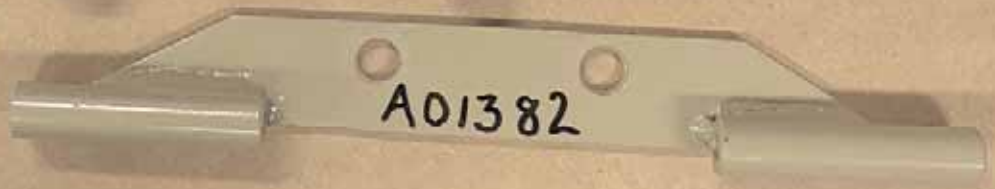

Indian Extension Wiring Pigtail (2018+ Models)