

Part Number: S-BLVD-5-DT-E
S-BLVD-5-FLIP-E



Description: Heated Dual Touring Saddle

Fitment: 2005 Suzuki Boulevard C-90

Revision: 2

Tools Required	Parts List
5mm Open end wrench or socket wrench 5mm Allen wrench #2 Phillips screw driver	1 6' Wire Harness with Fuse 7 8" zip ties

1. Remove your stock front and rear seats.

2. To install the seat without heater unit. Set the seat in place and secure the left and right side of the front seat bracket using the stock bolts. For the rear of the seat you will be using the stock bolt that came out of the fender. Be sure the saddle is all the way forward and does not leave a gap at the tank. The rear mounting bracket is adjustable if needed.


3. If you have a heater unit in your new Corbin seat you will need to install the included pigtail. This is a one time installation that can stay on the bike even when you remove the saddle.

4. Connect the ground (black wire) wire to the location shown in *Figure 1*.

5. Then connect the Hot (Red wire) to the positive post on you battery. You will need to route the wire from the bottom of the seat area to the front of the bike where the battery is located. *Figure 2* is showing the way we routed the wire... for clarity we are showing the bike with the fuel tank removed.

NOTE: You need to make sure the wire does not make contact with the motor as it can get hot and melt the wire and cause a short. Review the following steps to remove the tank panel for best results in routing the wire.

6. Figures 3 , 4 and 5 show the bolts that need to be removed in order to take off the tank panel. Keep the bolts organized to make it easier to remember which goes where, when you are putting it back together. There are five bolts to remove this panel.

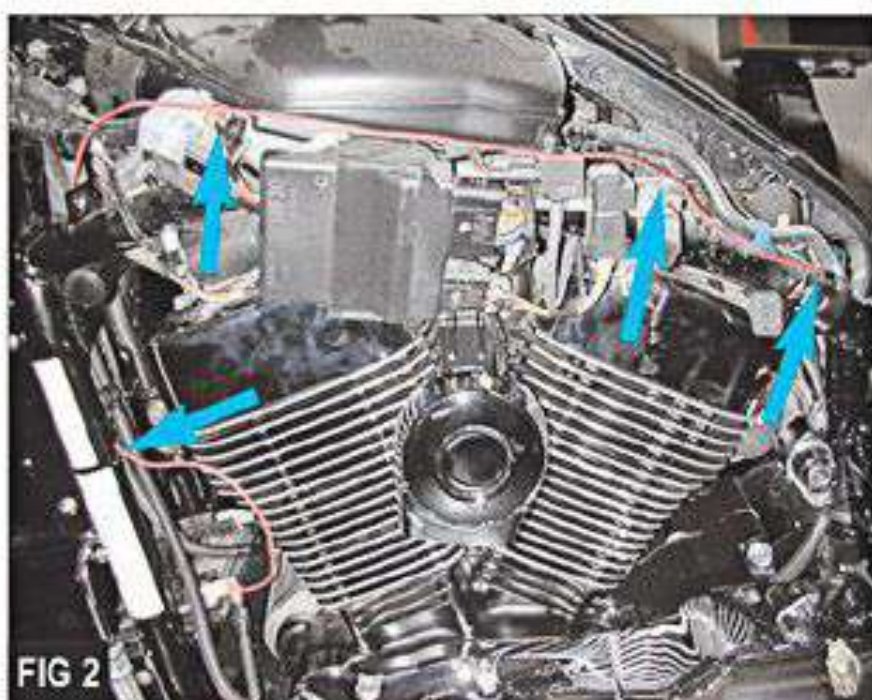

7. The first two bolts to remove are at the front of the tank. Remove the bottom one first, this bolt is holding the small cover down that needs to be removed. Take out the bolt and unhook the panel off. Then remove the top bolt that is on the chrome gauge cover at the very front. Refer to *Figure 3*.

8. Open the door to where the gas tank filler is. There you will find the next three bolts to remove. The two on the top left side and the last one at the bottom left side. Once these bolts are out, the tank panel will slide out to the side. *Figure 4*.

9. Now you are ready to zip tie all the wiring securely. *Figure 2* shows the areas we used to zip tie, securing the wire and out of the way of the hot motor.

10. Now you are ready to attach the wire end to the battery. Remove the plastic cover of the battery by removing the two screws on the left and right side. See *Figure 5*. This will expose the positive terminal on the battery.

11. Attach the wire end as shown in *Figure 6*.


12. You are now done connecting the wiring harness. Before you reinstall the battery cover and tank panel, set your seat in place and test the seat heater switch to make sure it is functioning correctly. Once you have checked if everything is functioning properly, you can go ahead and reinstall the battery cover and tank panel.

13. Refer to step 2 and install your saddle.

NOTE: Heater controller shuts off automatically after 1 hour. Turn switch off and on to restart for another hour.



SURFACE TEMPERATURE PERFORMANCE

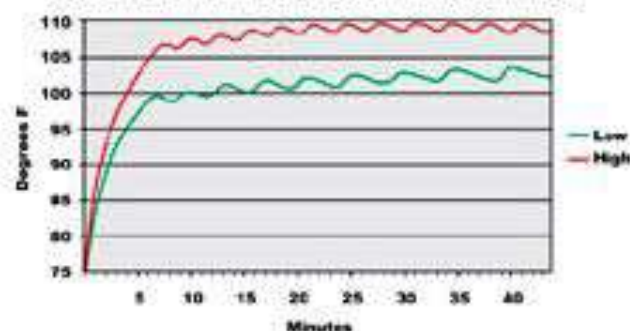

Questions? Give us a holler...
800-223-4332
tech@corbin.com