

Part Number: Y-R-8-BAG

Description: Fleetliner Saddle Bags

Fitment: 2008 Yamaha Raider

Revision: 1



Tools Required	Parts List	
5/8" Open wrench 12mm Socket wrench 14mm Socket wrench 6mm Hex key (Allen wrench)	5 #P00070 Stainless steel studs 5 #P10071 Stainless steel spacers 1 #A00984 Fender bracket 1 #A00983 Left lower mounting bracket 2 10mm x 1.25 x 55mm Hex head bolts 8 3/8" Flat washers 8 3/8" Split lock washers	8 3/8" x 16 Chrome Acorn nuts 2 m6 x 1 x 30mm Chrome button head Allen screws 2 6mm Chrome flat washers 2 m6 x 16mm Flat head screws 2 m6 Chrome Flat washers 2 m6 Nylock nuts

NOTE: We recommend the use of Loctite® or similar thread lock product when assembling parts on your motorcycle.

1. Start by removing the two bolts on the fender struts (*Figure 1*), using a 6mm hex key. Discard the bolts.



2. Replace the fender rail bolts with the supplied stainless steel studs and spacers (*Figure 2*), using a 5/8" wrench. Use Loctite® and tighten to 12 ft. lbs.



3. Remove the left side passenger footpeg with a 12 mm socket wrench.

4. With the footpeg bracket removed, install the supplied lower mounting bracket (#A00983) between the frame and the footpeg. Secure with the stock bolts (*Figure 3*). Use Loctite® and tighten to 18 ft. lbs.



5. On the right side, remove the bolt on the exhaust hanger with a 6mm hex key. Discard the bolt, but you will be reusing the flat washer

6. Secure the exhaust hanger with the stock washer, the supplied spacer and stainless steel stud (*Figure 4*). Use Loctite® and tighten to 12 ft. lbs.





7. Remove the license plate hanger (Figure 5). Discard bracket and bolts.

8. Now install Corbin bracket (#A00984) and secure it with the supplied m6 x 1 x m16 flat head screw, flat washer and nylock nut (Figure 6). Use Loctite® and tighten to 8 ft. lbs.

9. You are now ready to install the saddlebags. Carefully align the bags with the four mounting studs and secure with a flat washer, lock washer and chrome acorn nut (Figure 7). Use Loctite® and tighten to 8 ft. lbs.

10. Reinstall your license plate onto the two threaded barrels on the Corbin bracket #A00984.

11. That's it, you're ready to roll. Have a great ride and keep the Corbin side up!

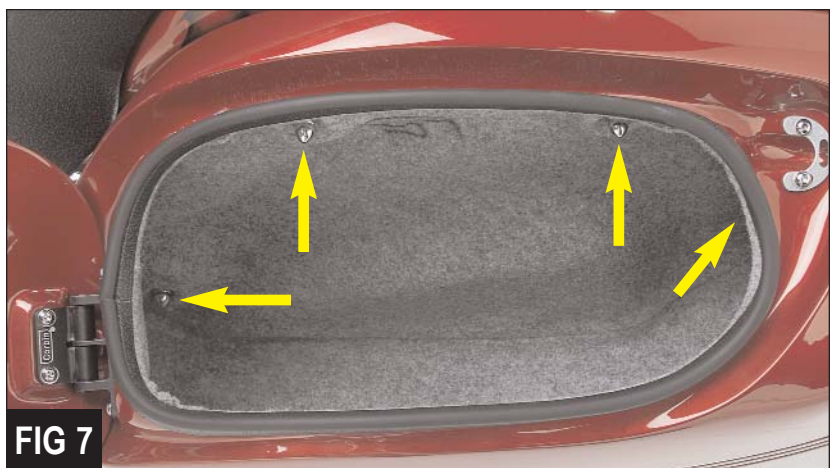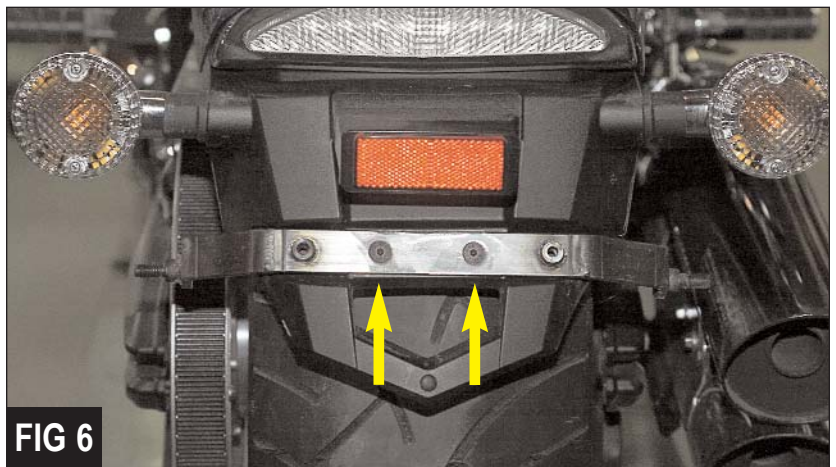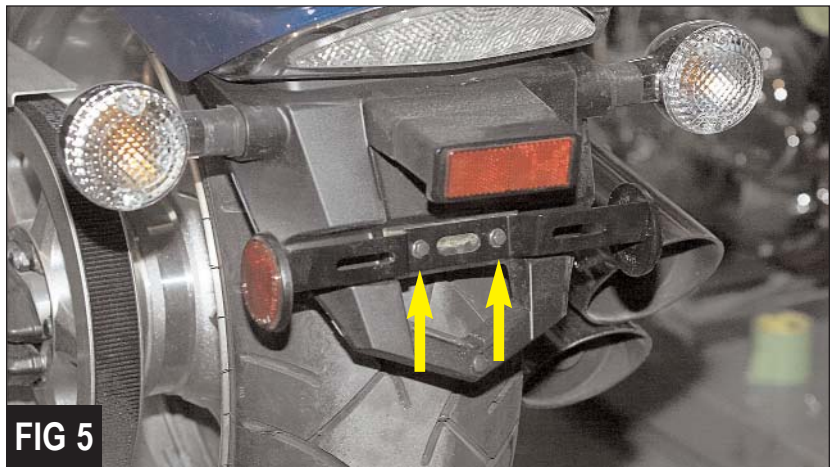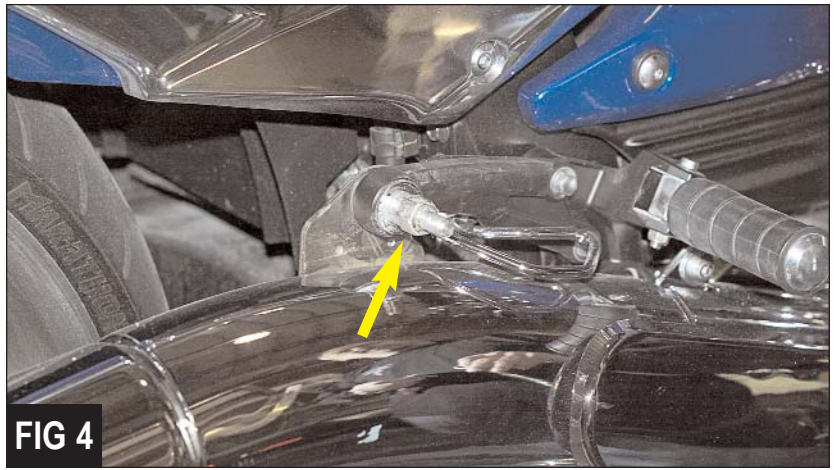

Questions? Give us a holler...
800-223-4332
tech@corbin.com