



## Custom Dynamics® ProBEAM® Scout Front Turn Signals Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® Scout Front Turn Signals! Our LEDs offer maintenance free service and higher visibility. Our ProBEAM® product line utilizes the latest technology and automotive grade components to ensure the highest level of reliable service. Custom Dynamics® offers one of the best warranty programs and customer support in the industry. If you have any questions during the installation of this product please call us at 1(800) 382-1388.

Part Number: **PB-SCOUT-AW-BS**  
**PB-SCOUT-AW-CS**

US Patents: D830,597 D830,595

Chinese Patents ZL201830045649.4, ZL201830045624.4

### Package Contents:

- ProBEAM® Scout Front Turn Signals (Pair)
- Instructions



**Fitment:** 2015-2022 Indian® Scout, Scout Sixty, Scout Bobber, Scout Bobber Sixty & Scout Bobber Twenty. 2022 Indian® Scout Rogue & Scout Rogue Sixty .

Custom Dynamics® ProBEAM® Scout Turn Signals can **ONLY** be used with ProBEAM® Bullet Style Turn Signal Lenses. Bullet Bezel Turn Signal Adapters are not compatible with ProBEAM® Scout Turn Signals.

### Installation:

1. Remove motorcycle seat and disconnect the negative battery cable from the battery. Consult your owners manual if unsure of this process.
2. Remove the headlight and nacelle to expose the turn signal wiring and connections. Consult your owners manual if unsure of this process.
3. Locate the Left and Right Front Turn signal connectors in the headlight bucket and disconnect them. See Photo 1.



## ATTENTION

Please read all Information below before Installation

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.



Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

## Installation Instructions - Page 2

- Remove both front turn signals by removing the mounting bolt from both front turn signal mounts. Remove both turn signal mounts from the fork legs along with the wiring harnesses from the headlamp bucket. See Photo 2.



- Remove the existing Turn Signal Housings from the mounts by removing the bolt on the inside mounts. See Photo 3.




- Install the new ProBEAM® Turn Signal housings using the existing OEM mounting bolts to the turn signal mounts. Be sure to use a thread locking agent to prevent the mounting bolts from loosening.
- Reinstall both turn signal mounts to the fork leg using the existing OEM bolts and hardware.

- Route the new Turn Signal wires through the hole on each side of the Headlight bucket.
- Connect the 2 pin connector from each turn signal housing to its associated left or right connector in the headlight bucket.

- Now connect the Left and Right turn signal running light wires. Locate the -12vdc Position Light wire inside the headlight bucket (Black Wire). See photo 4.



- Connect the spade connectors from each turn signal running light wires in line to the -12vdc Position Light spade connector. See Photo 5.

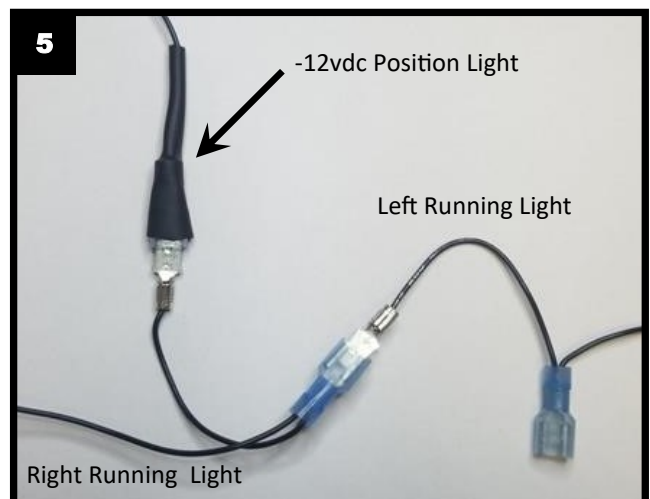

- Test the operation for Run and Turn functions of both front turn signals.
- Reinstall the headlight.
- Reconnect the negative battery cable to the battery and install the seat.
- Test all lighting for proper operations before riding.