



EVOTECH®
P E R F O R M A N C E


Installation Instructions


KAWASAKI Z1000 2014 ONWARDS TAIL TIDY


Product Reference - 12745


Kit Contents

- | | |
|------------------------------------|---|
| A 1 x Tail Tidy | H 2 x M3 - 8 Socket Countersink Screws |
| B 1 x Wiring Cover Plate | I 2 x M3 - 12 Socket Button Heads |
| C 1 x Light Bracket | J 2 x Plastic Screws and Nuts |
| D 1 x LED Light Unit | K 2 x Male Bullet Connectors |
| E 1 x Reflector and Bracket | L 4 x M6 x 25 Black Screws |
| F 1 x M4 Flange Nut | M 4 x M6 Flange Nuts |
| G 1 x Wiring Connector | N 5 x Cable Ties |

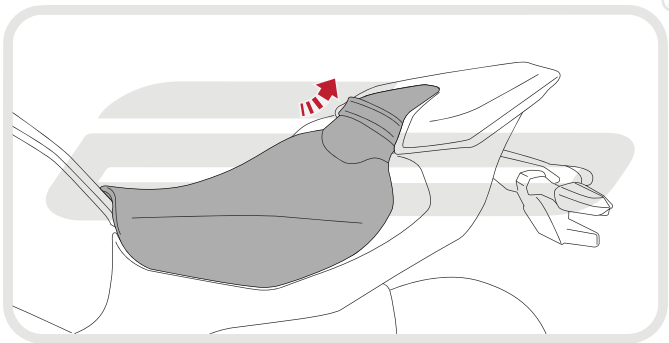

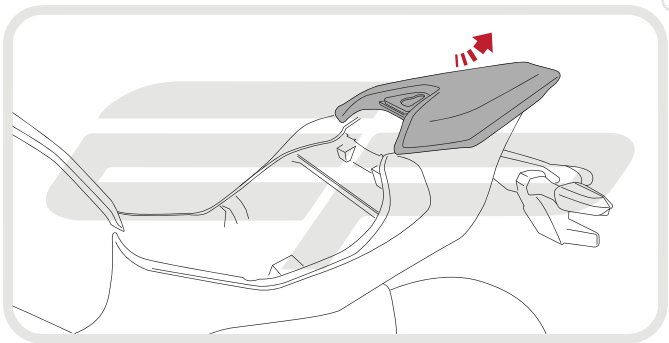

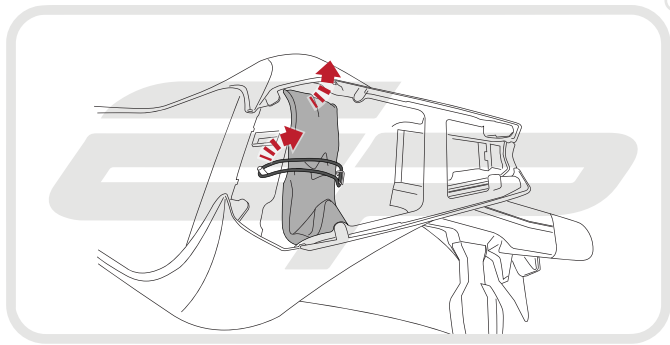


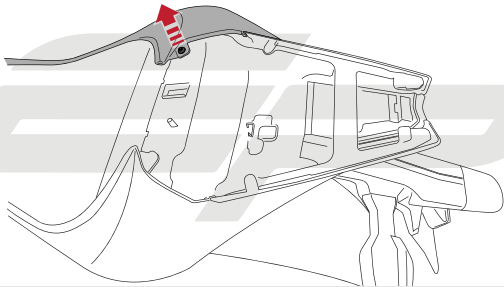






Caution


DO NOT Remove fairing piece, only release it to access fairing behind

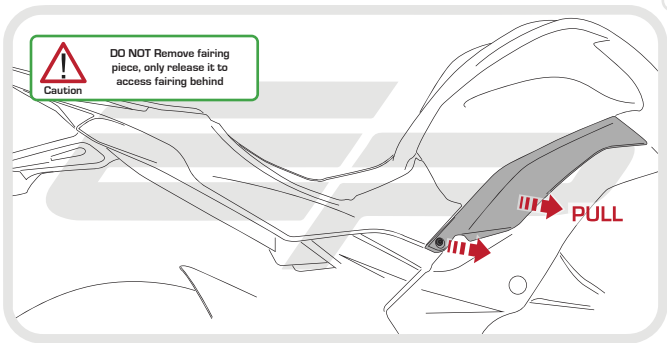


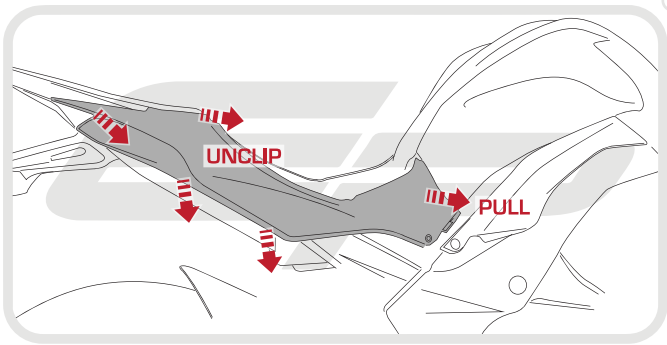

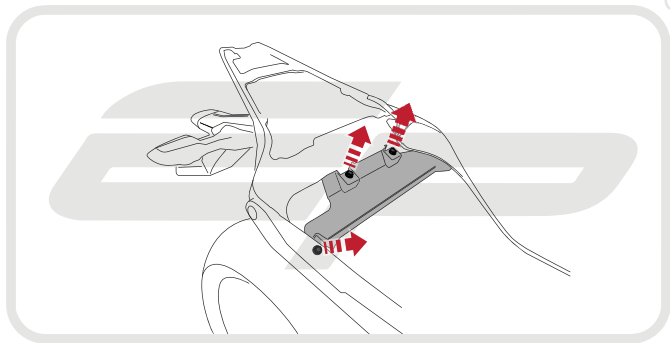


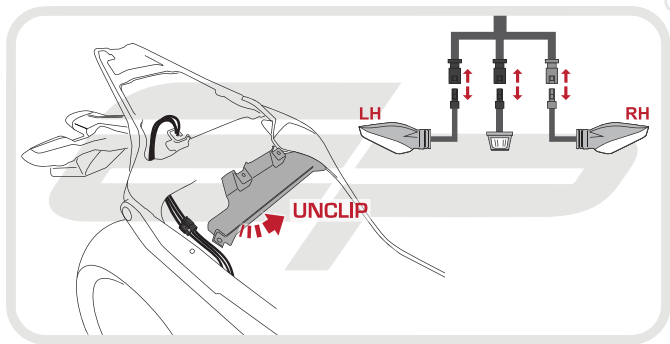

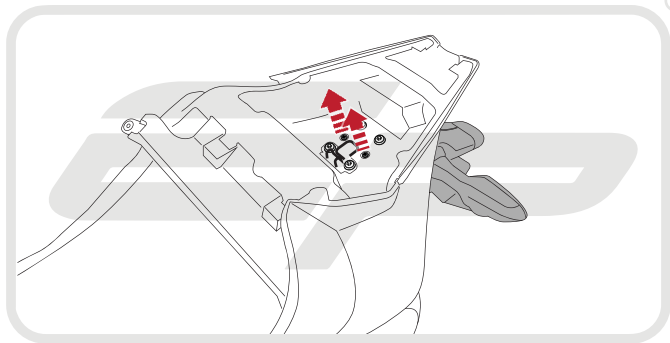

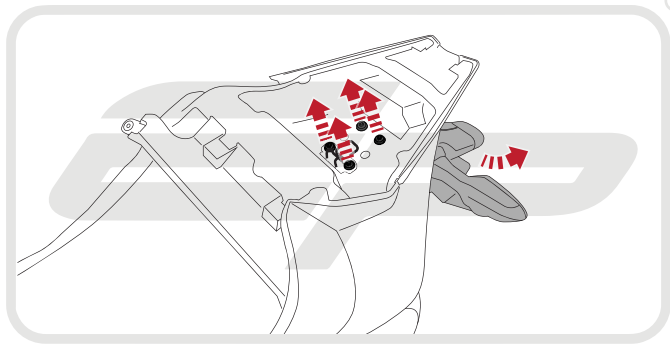


EVOTECH[®]
P E R F O R M A N C E

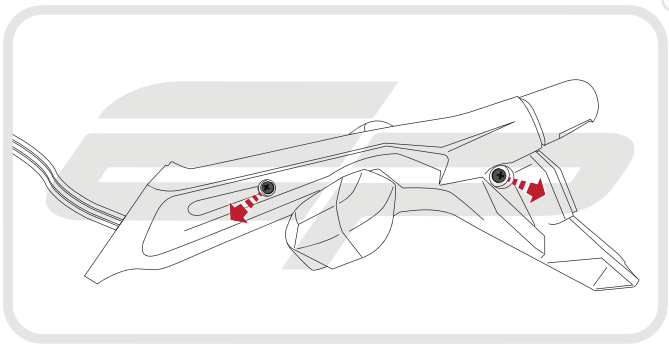

UNCLIP ← |||


||| → UNCLIP

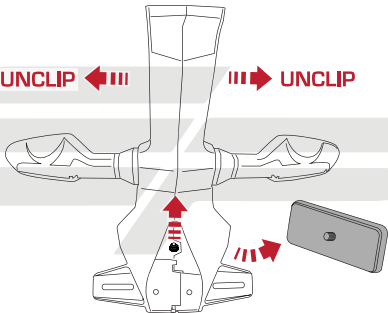



Caution


Remove both indicators
from OEM unit.
Take note of LH and RH

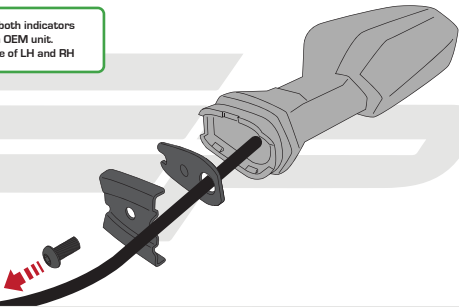





Caution


Fit both indicators
to EP Tail Tidy.
Take note of LH and RH

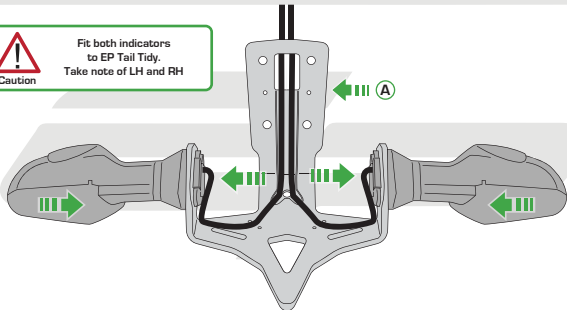

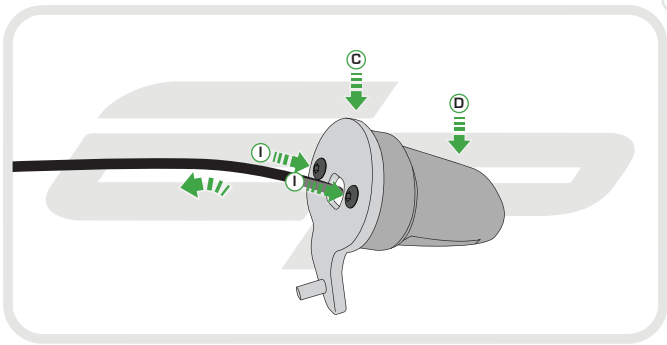



EVOTECH[®]
P E R F O R M A N C E

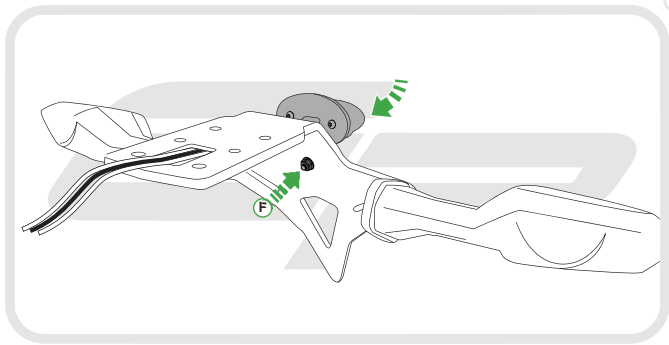


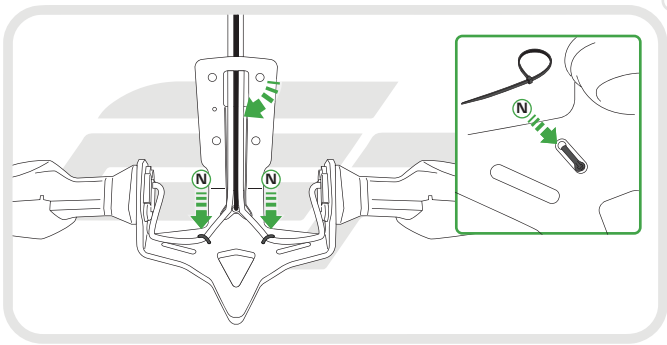


EVOTECH[®]
P E R F O R M A N C E

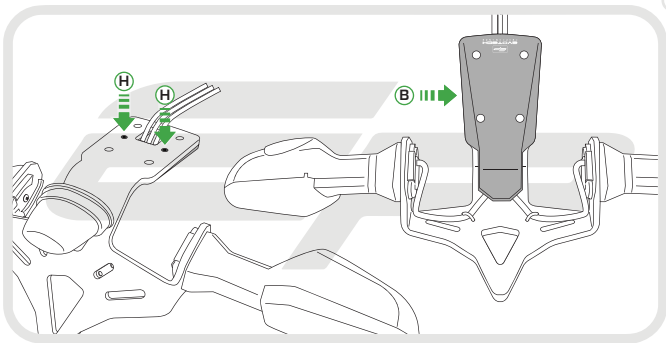

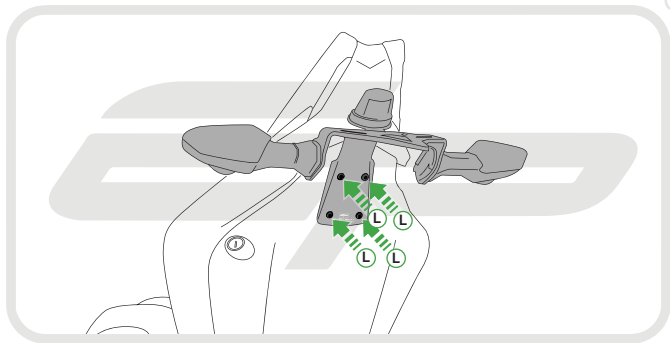

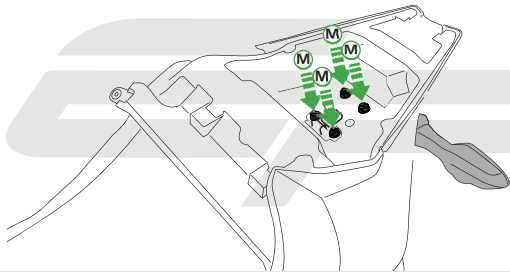

EVOTECH[®]
P E R F O R M A N C E

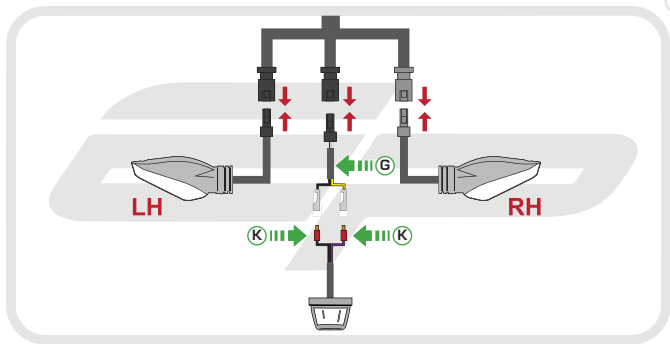




Reverse Stages

7 - 1

Reflector Bracket Installation

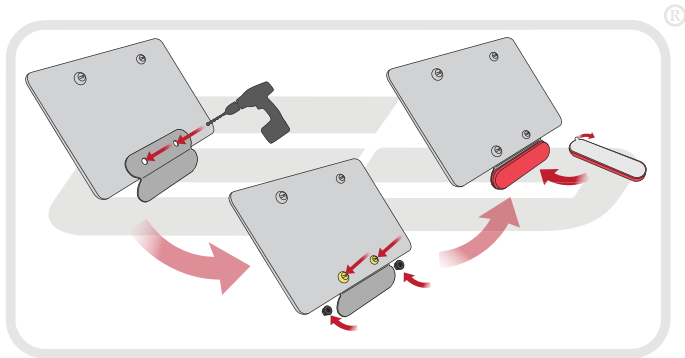

EVOTECH[®]
P E R F O R M A N C E



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com