



Front Spindle Bobbins
M12 Spindle Nut Version

Installation Instructions





FRONT SPINDLE BOBBINS PRN012816


Kit Contents

- A** 1 x Spindle
- B** 1 x Spindle Nut
- C** 1 x Bobbin Spacer
- D** 2 x Bobbin Heads
- E** 2 x Nyloc Nuts
- F** 2 x Washers

Bobbin spacer design may vary depending on bike make, model and year

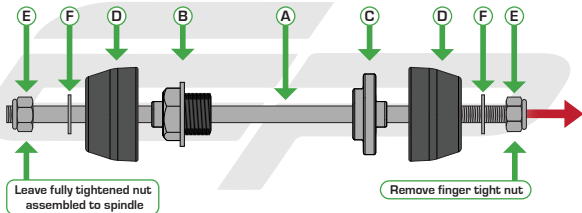

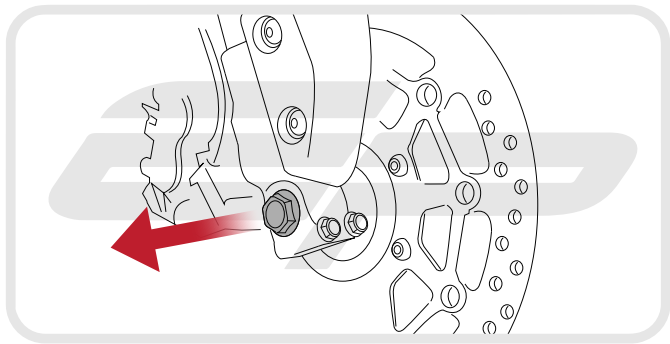

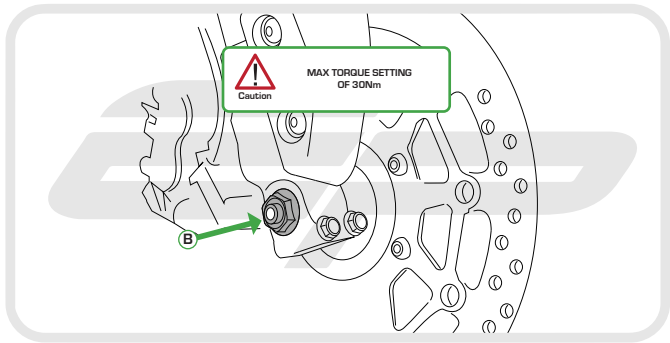



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com