



EVOTECH®
P E R F O R M A N C E

Installation Instructions




YAMAHA MT-03 2016 CRASH PROTECTION

Product Reference - 13062

Kit Contents

- Ⓐ 2 x Bobbin Heads
- Ⓑ 2 x Bobbin Spacers
- Ⓒ 2 x Impact Absorbing Washers
- Ⓓ 2 x M10 - 130 x 1.25 Cap Head Bolts
- Ⓔ 2 x M10 Washers

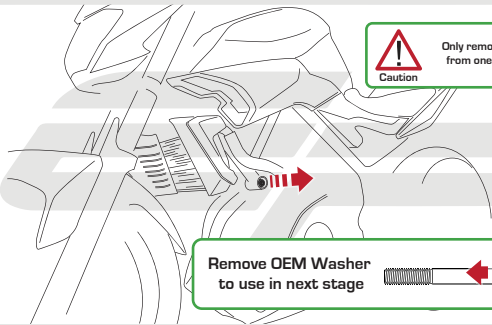



Caution

Only remove engine bolts
from one side at a time

Remove OEM Washer
to use in next stage



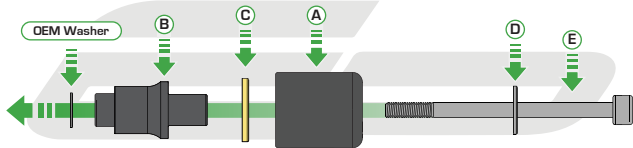

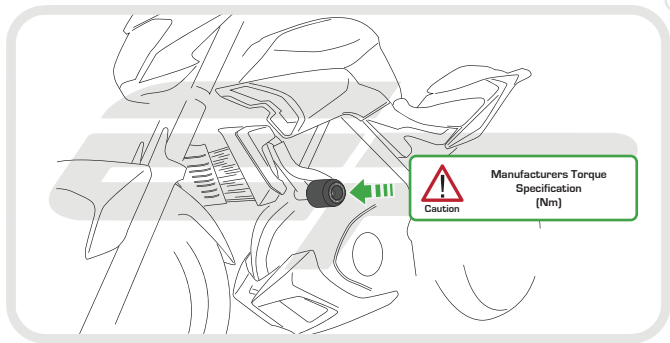




Caution

Only remove engine bolts
from one side at a time



Remove OEM Washer
to use in next stage

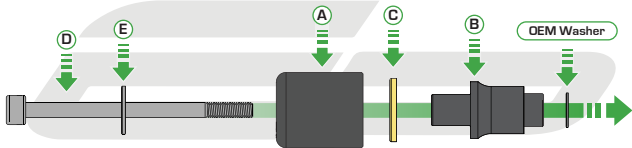



Manufacturers Torque
Specification
(Nm)





ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com