



EVOTECH®
P E R F O R M A N C E


Installation Instructions

SUZUKI SV 650 2016
REAR SPINDLE BOBBINS

Product Reference - 13186

Kit Contents

- A** 1 x M8 Spindle
- B** 1 x RH Hub Stop
- C** 1 x LH Bobbin Spacer
- D** 1 x LH Bobbin Head
- E** 1 x Hub Stop Spanner
- F** 1 x M8 Washer
- G** 2 x M8 Nyloc Nuts

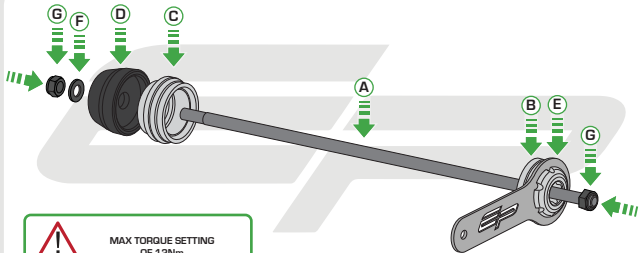

Caution

MAX TORQUE SETTING
OF 12Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all nuts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com