



KTM Superduke 1290


Engine Guard


Installation Instructions




## Kit Contents PRN013616


- (A) 1 x Lower Bracket
- (B) 1 x Upper Bracket
- (C) 1 x M8 x 16 Black Button Bolt
- (D) 1 x M8 Washer
- (E) 2 x M6 Washer
- (F) 2 x Spacer
- (G) 2 x Grommet
- (H) 4 x M6 x 12 Black Button Bolt

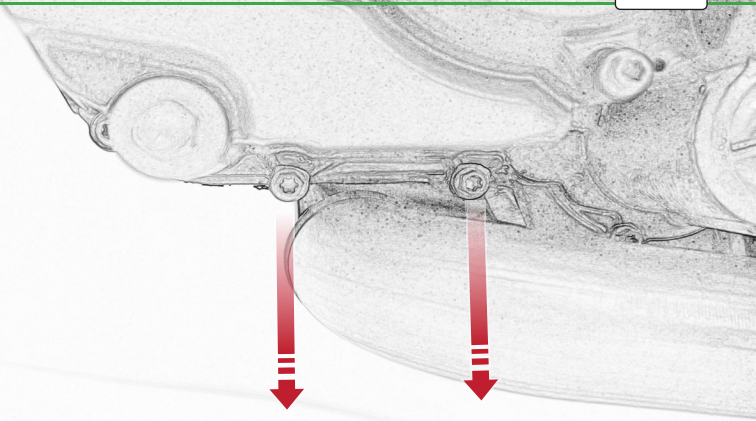


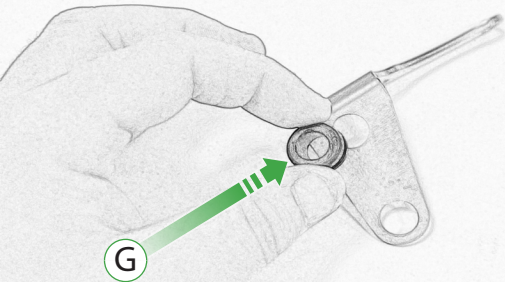





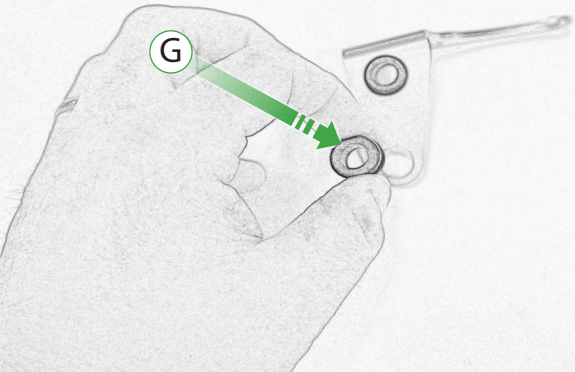

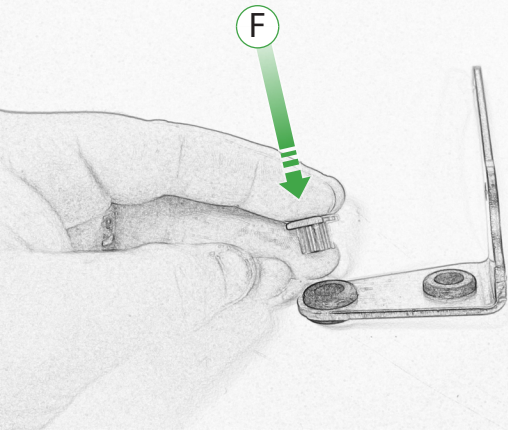


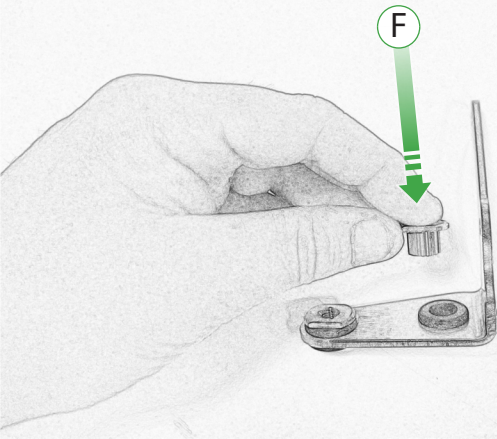


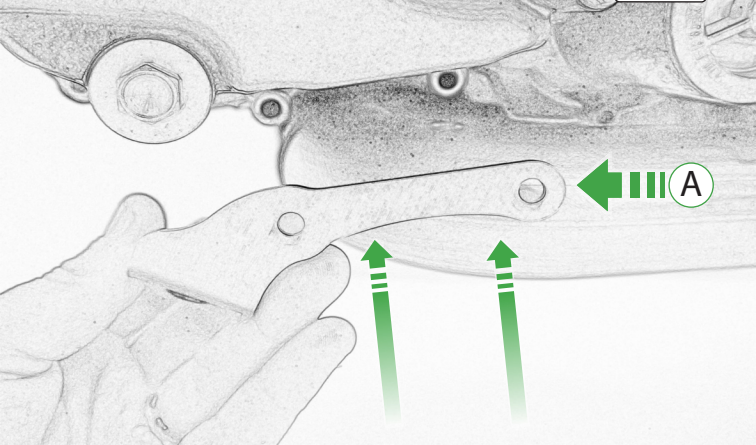

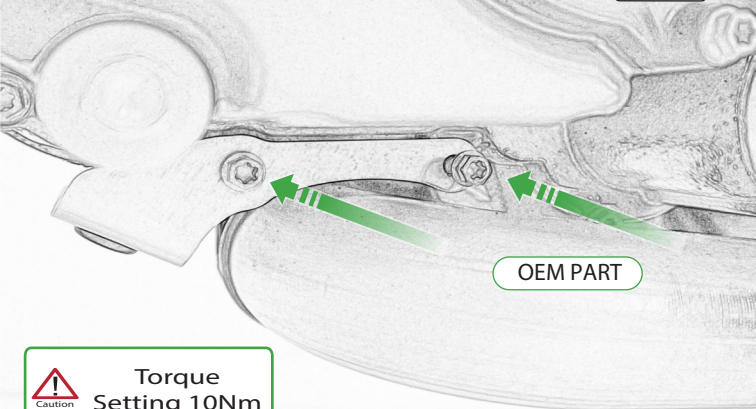

**Torque  
Setting 10Nm**

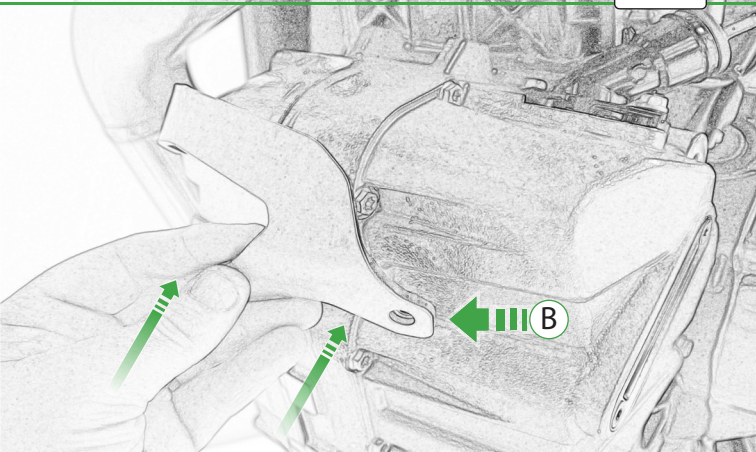


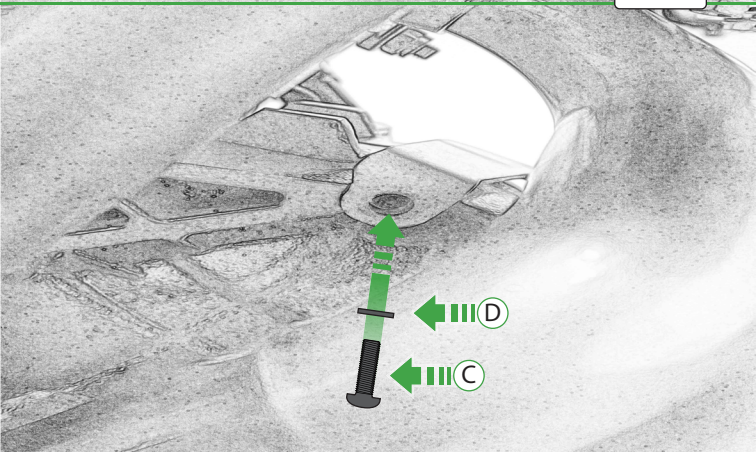



Do Not Fully Tighten



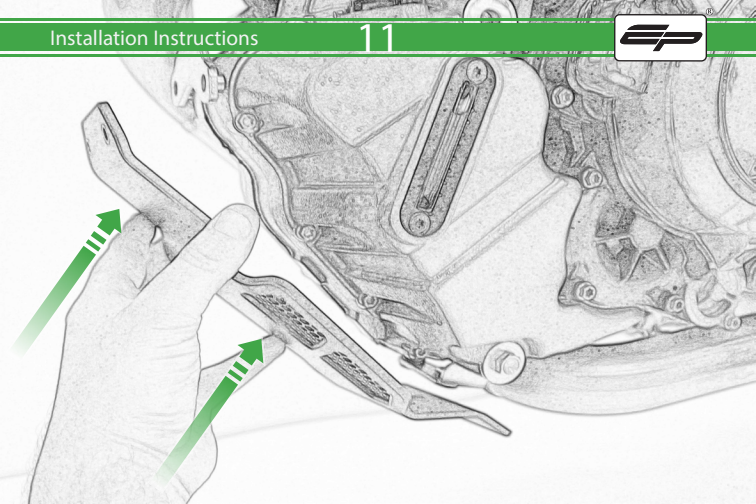




H






H




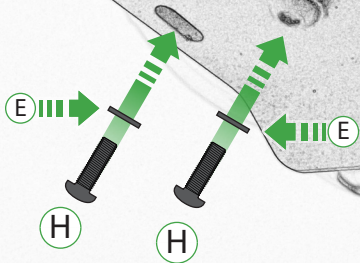


Do Not Fully Tighten

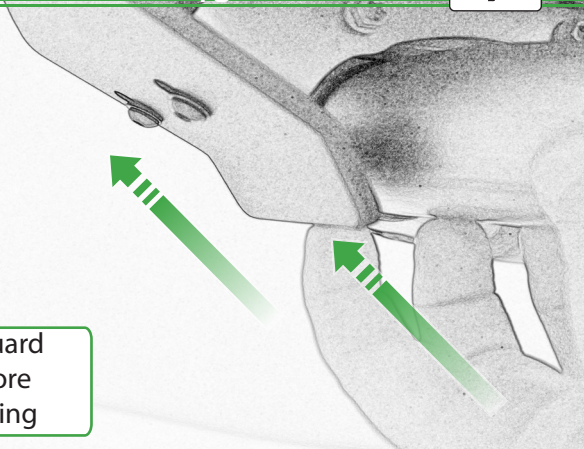

Push Guard  
Up Before  
Tightening

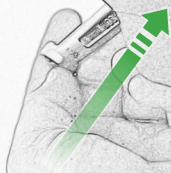

Fully  
Tighten

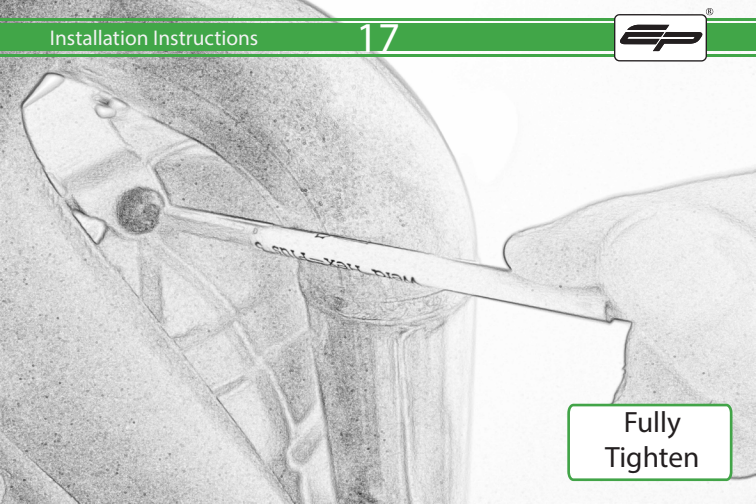

Fully  
Tighten



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)