



EVOTECH®
P E R F O R M A N C E

Installation Instructions

YAMAHA TRACER 700 2016 CRASH PROTECTION

Product Reference - 13369


Kit Contents


- Ⓐ 2 x Bobbin Heads
- Ⓑ 2 x Bobbin Spacers
- Ⓒ 2 x Impact Absorbing Washers
- Ⓓ 2 x M12 - 130 x 1.25 Cap Head Bolts
- Ⓔ 2 x M12 Washers





Caution


Only remove engine bolts
from one side at a time

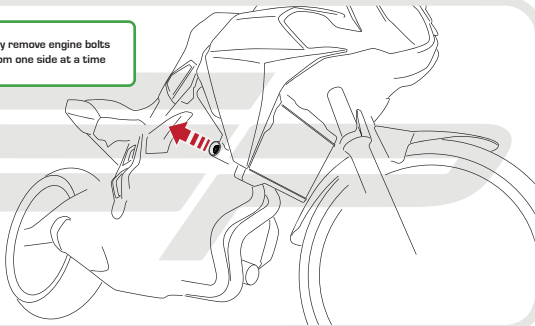


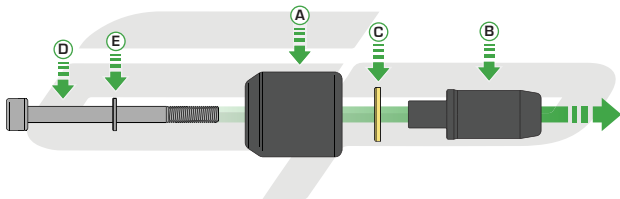


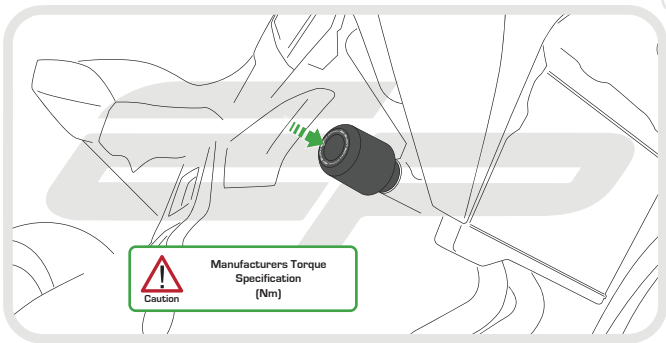

 **Manufacturers Torque Specification (Nm)**
Caution

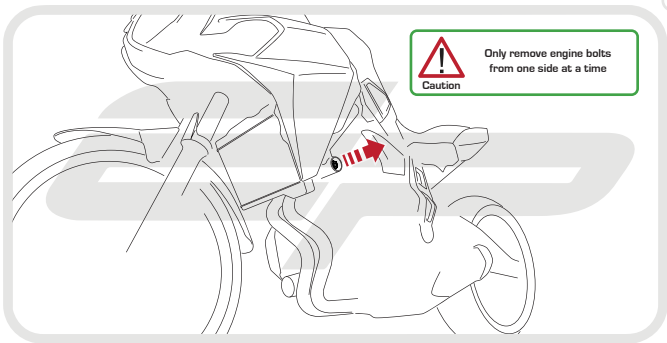

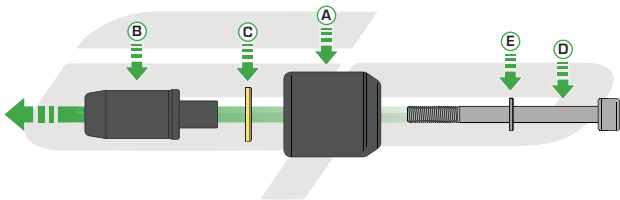

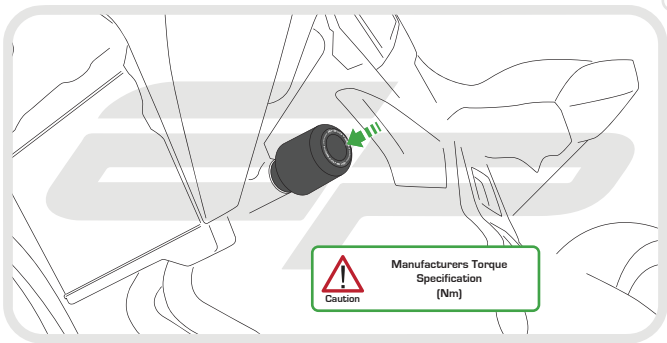



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com