



EVOTECH®
P E R F O R M A N C E

BMW S 1000 RR

Tail Tidy


Installation Instructions



Kit Contents PRN014343


- (A) 1 x Rubber Bung
- (B) 1 x Retro Light
- (C) 1 x Loom Connector
- (D) 2 x M4 Flange Nuts
- (E) 2 x Indicator Spacers
- (F) 2 x M6 x 16 Black Button Head Bolts
- (G) 2 x M5 x 16 Black Button Head Bolts
- (H) 5 x M5 x 10 Black Button Head Bolts




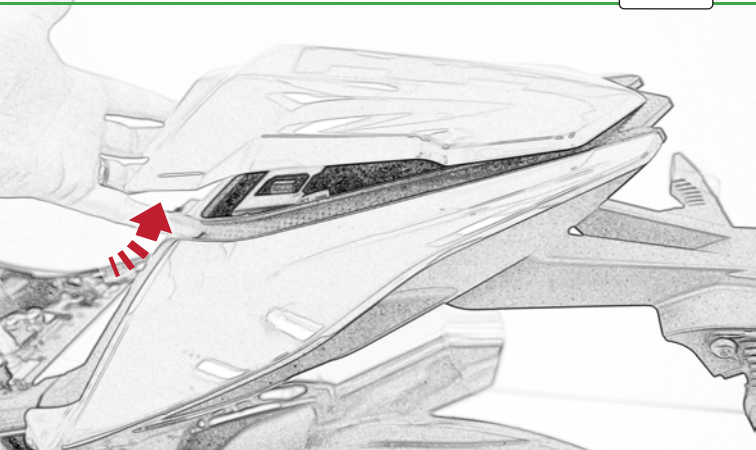



Repeat
Both Sides

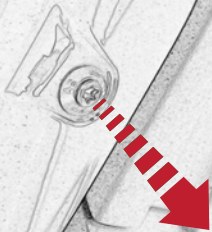


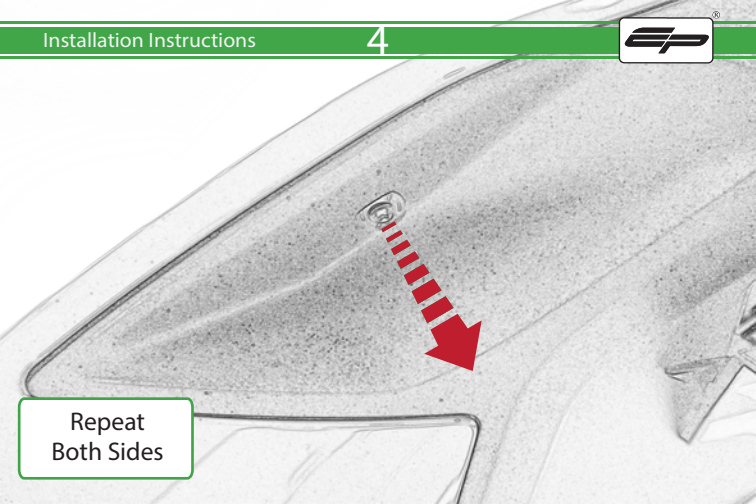

Repeat
Both Sides




Repeat
Both Sides

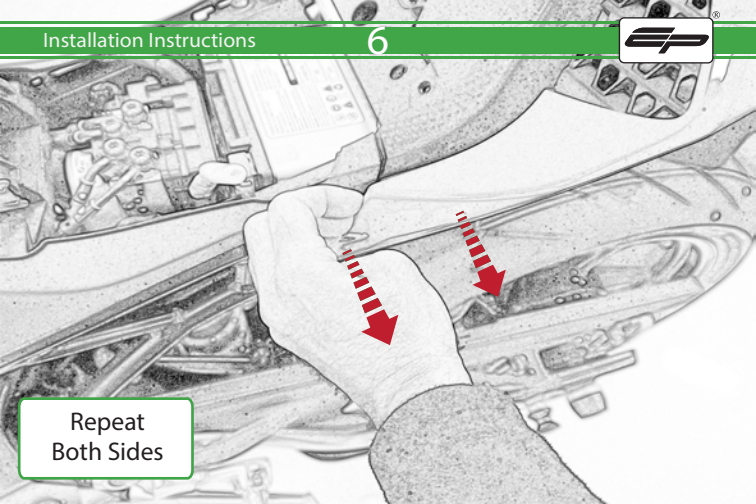


Repeat
Both Sides







Repeat
Both Sides

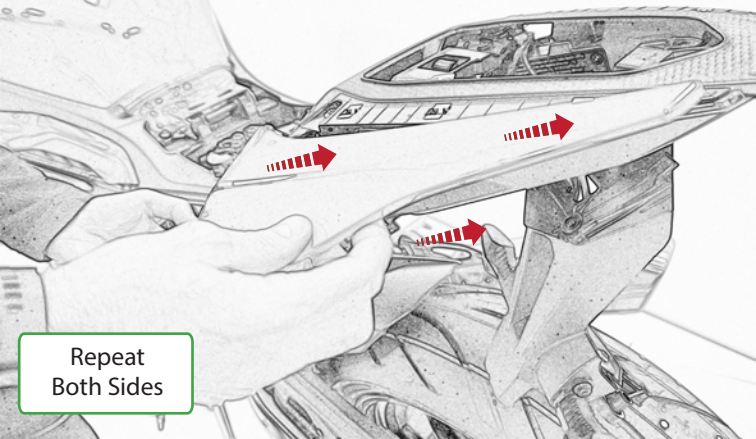

Repeat
Both Sides

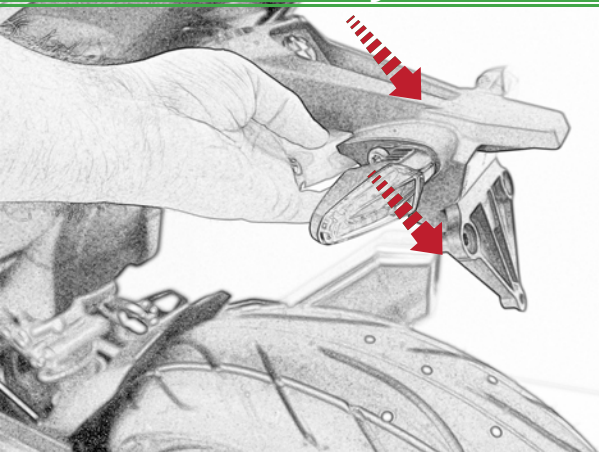


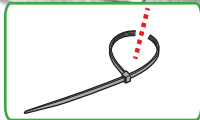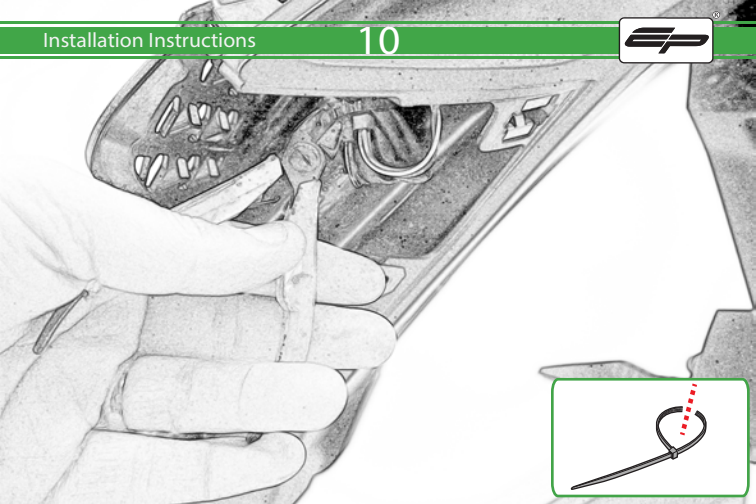


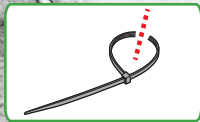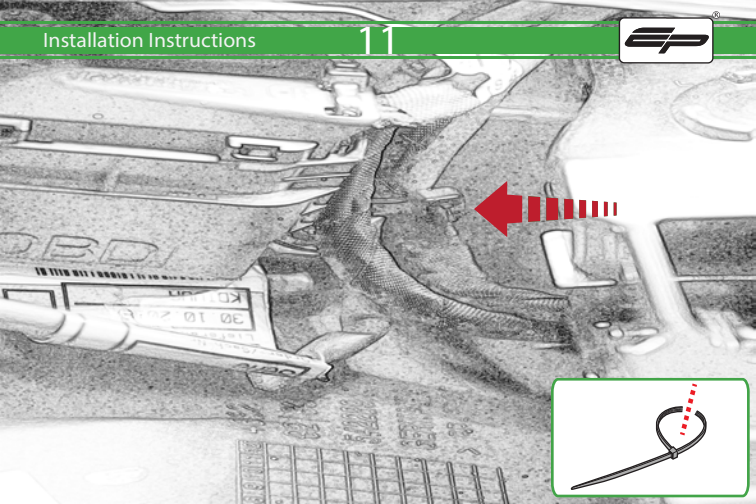





Repeat
Both Sides




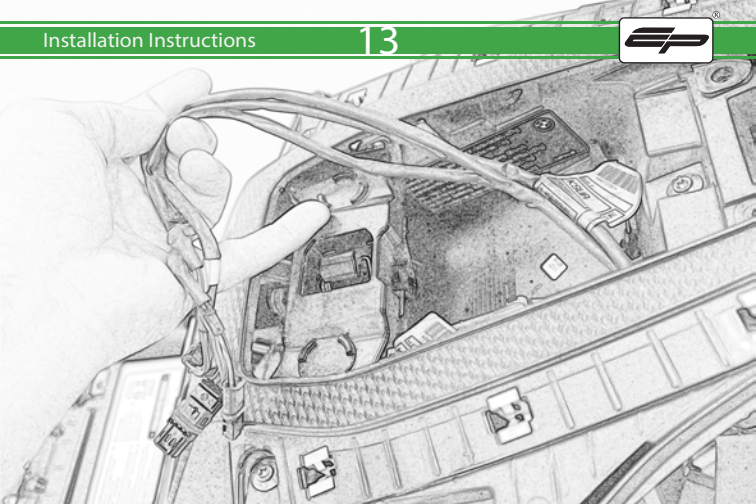


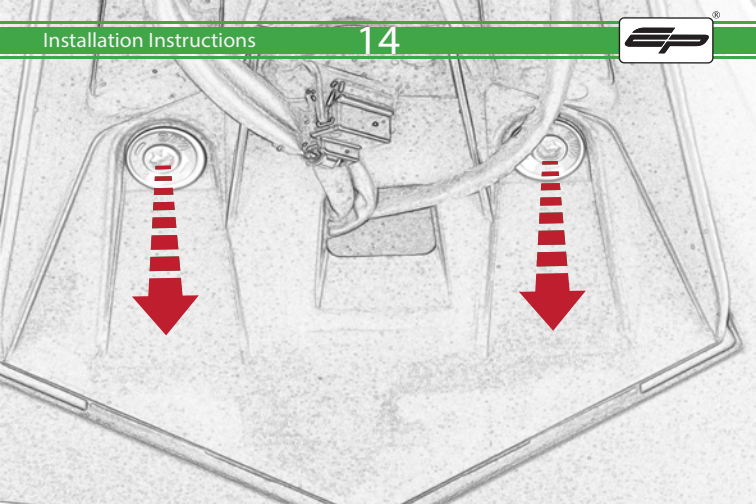


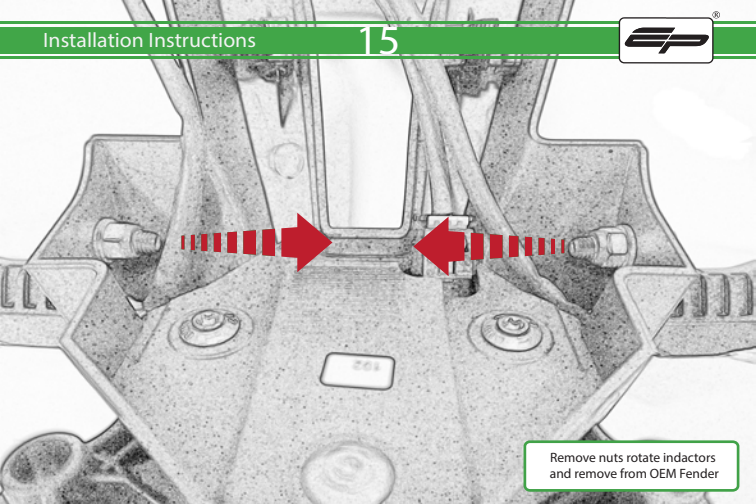


Remove nuts rotate inductors
and remove from OEM Fender

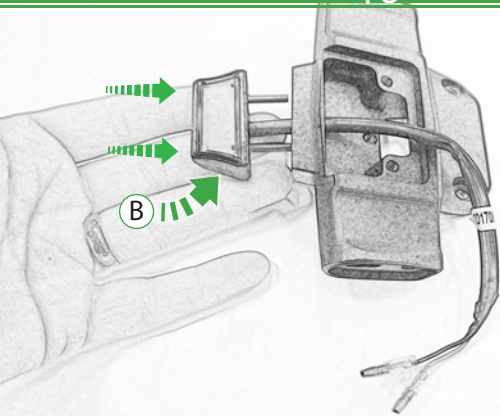

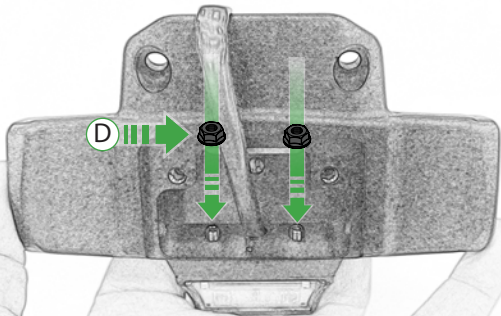


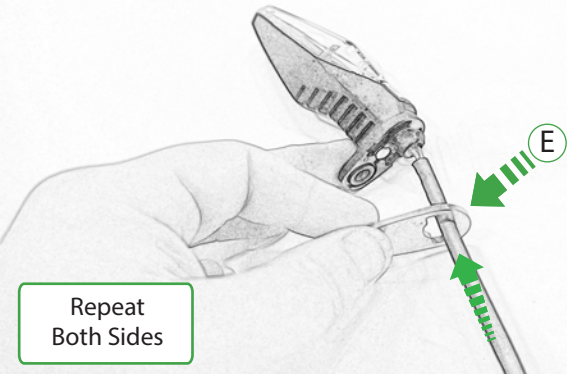


Repeat
Both Sides

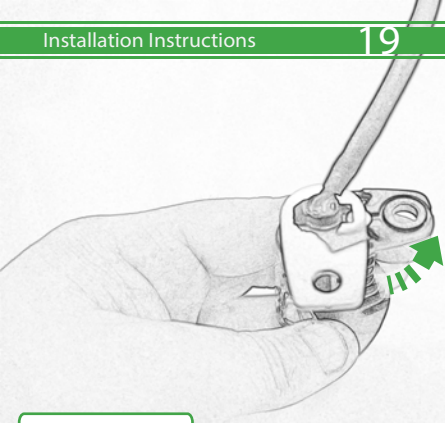


Repeat
Both Sides

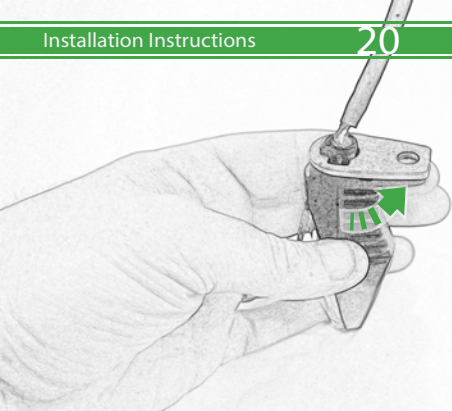


Repeat
Both Sides

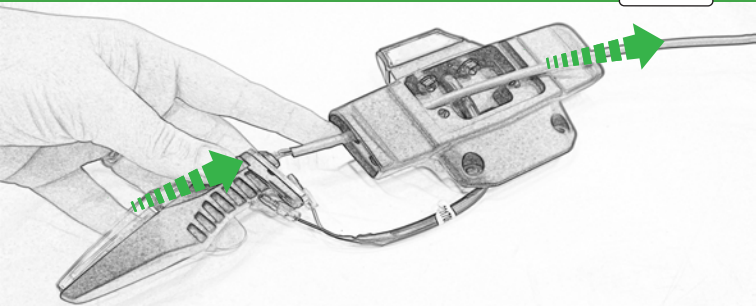


Repeat
Both Sides

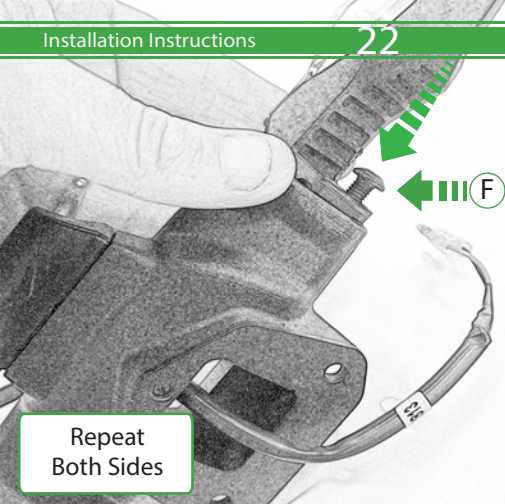




Repeat
Both Sides

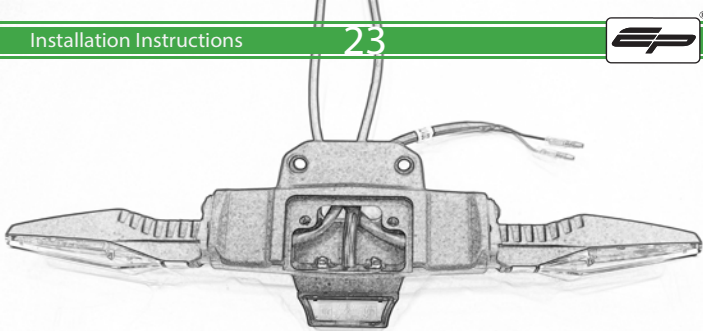


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

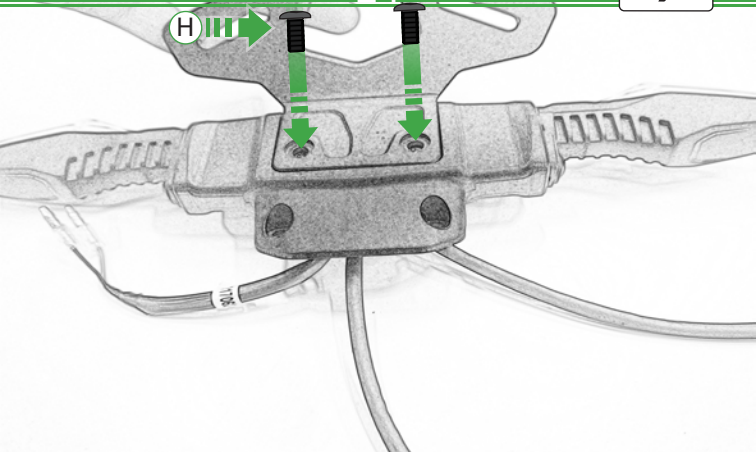


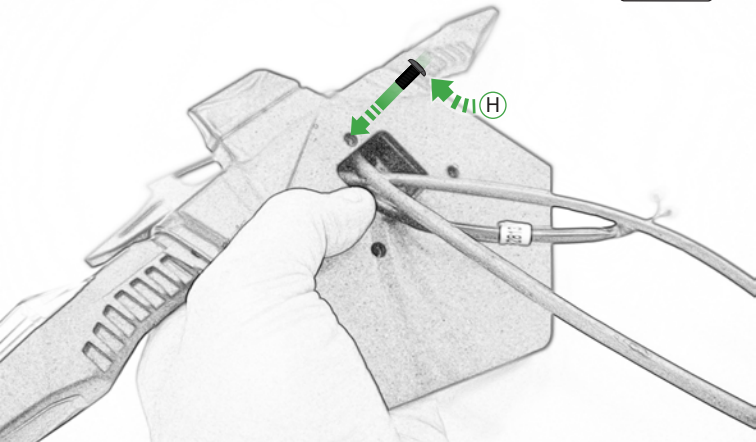

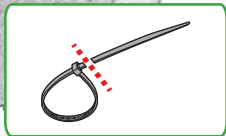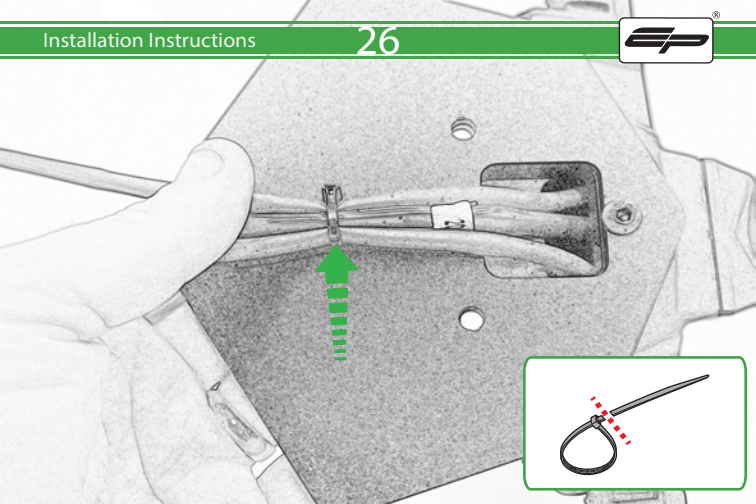


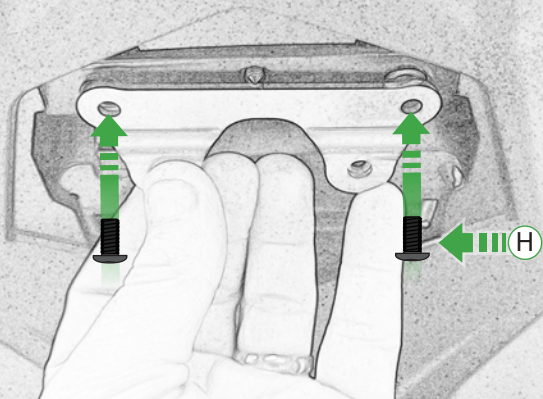




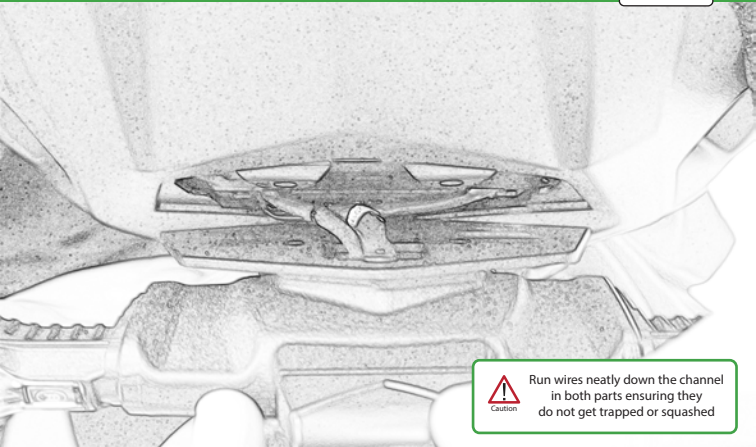


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

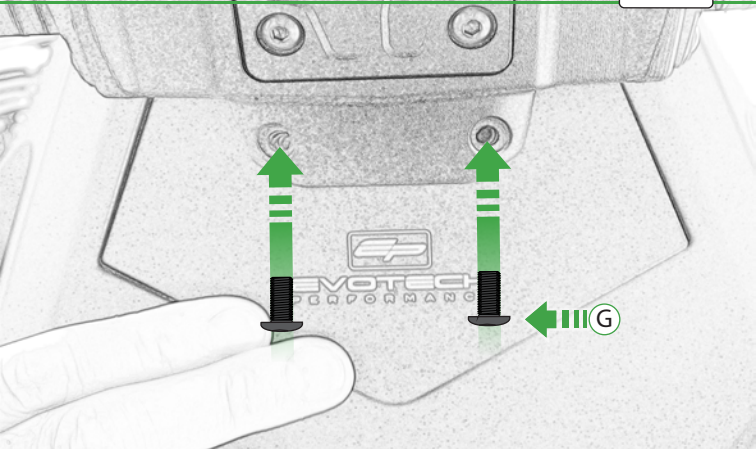








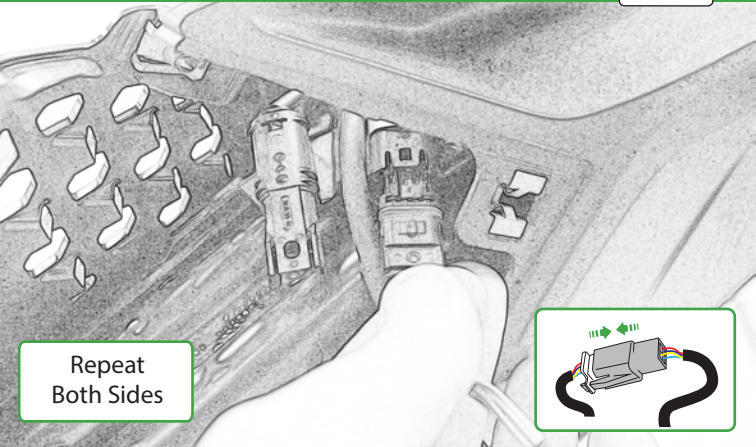


Repeat
Both Sides

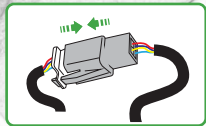

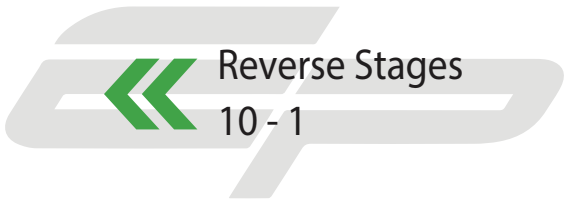

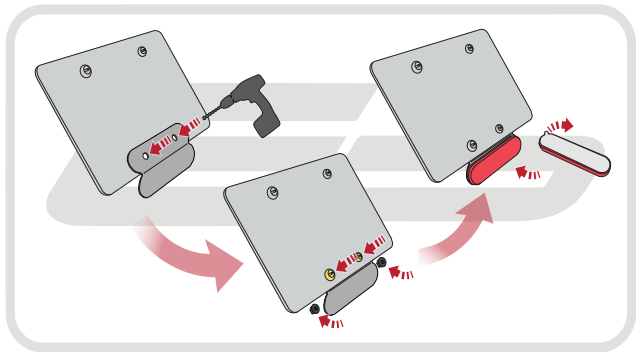

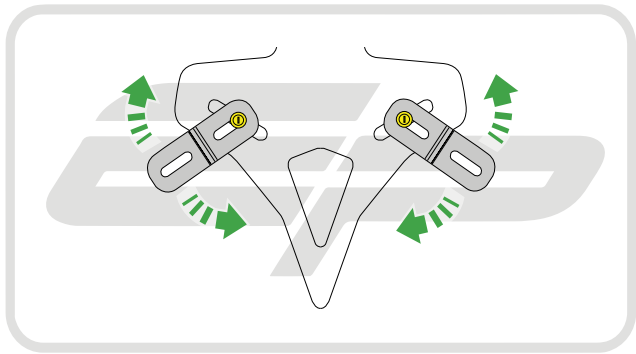



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com