



EVOTECH®
P E R F O R M A N C E


Honda CB650R - CBR650R
Tail Tidy


Installation Instructions






Kit Contents PRN014447

- (A) 1 x Reflector Kit
- (B) 1 x Retro Light
- (C) 1 x Loom Connector
- (D) 2 x M4 Flange Nuts
- (E) 2 x 6.5mm P-clip
- (F) 2 x M4 x 12mm Black Button Head Bolts
- (G) 2 x M5 x 20mm Black Button Head Bolts
- (H) 3 x 8mm P-clip
- (I) 4 x M8 x 20mm Black Button Head Bolts
- (J) 4 x Spacers
- (K) 5 x M4 x 6mm Black Button Head Bolts

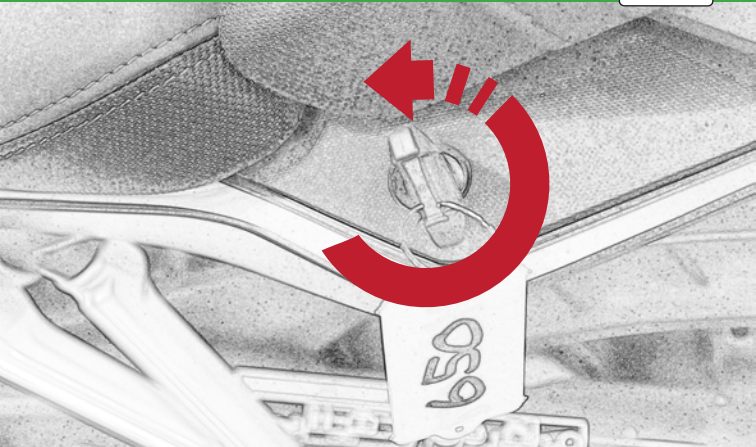


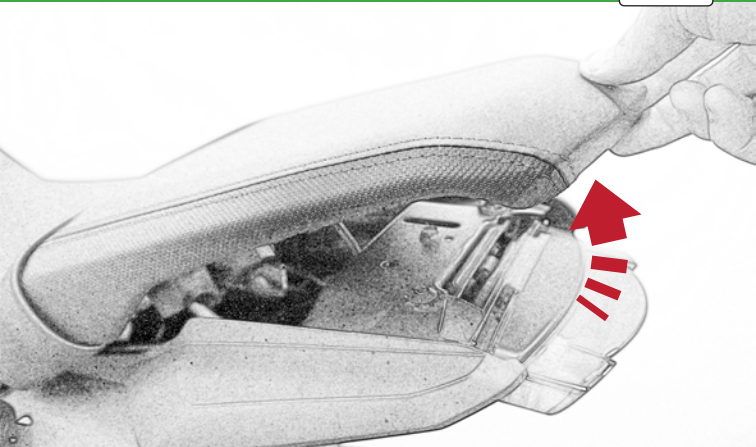


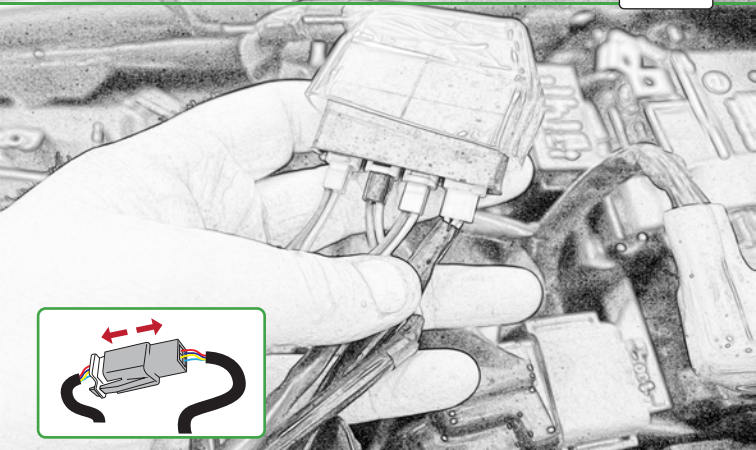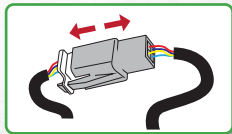


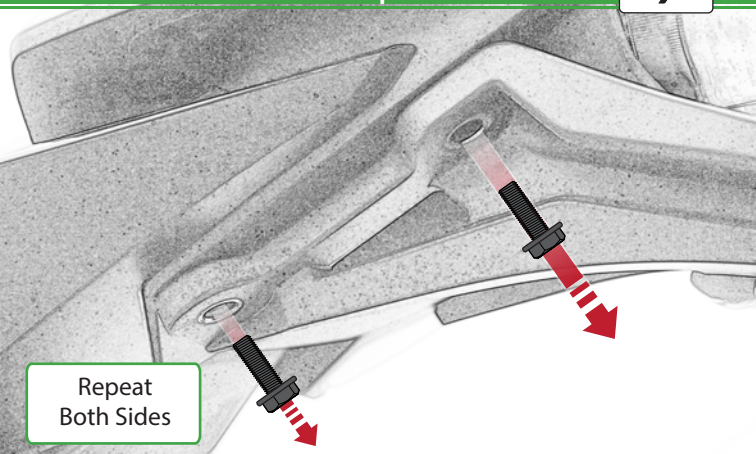



Repeat
Both Sides

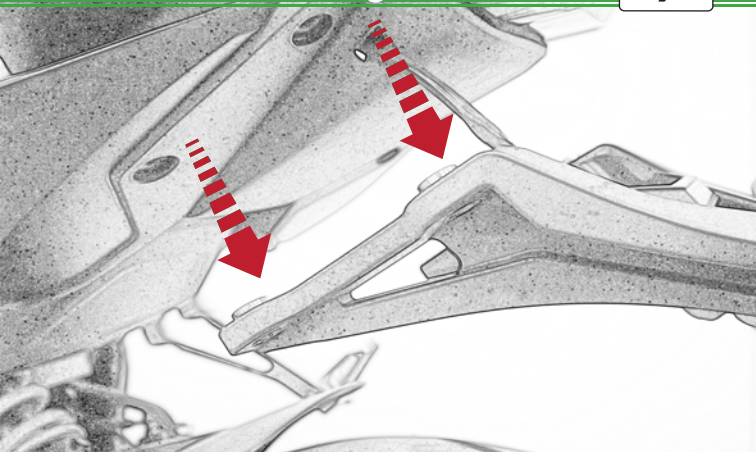


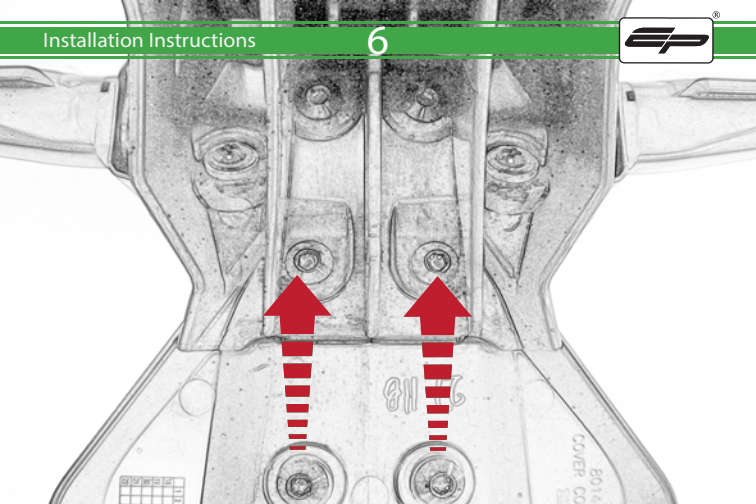


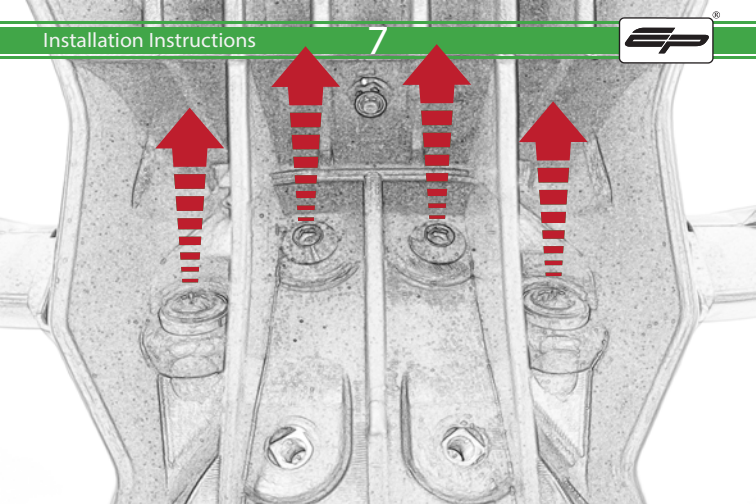


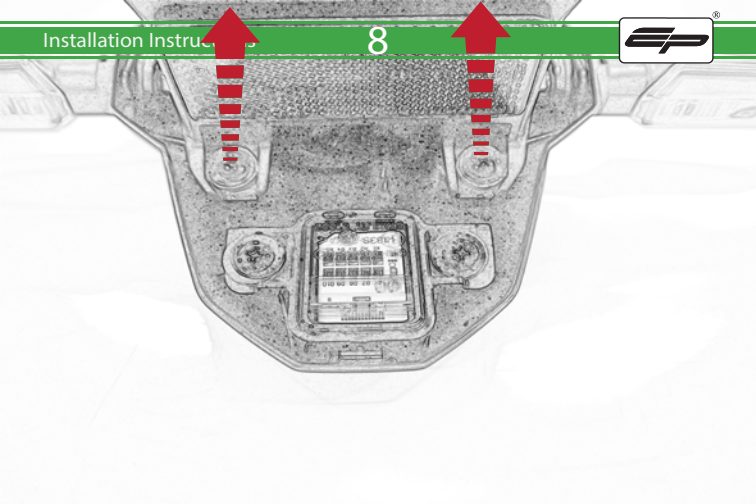


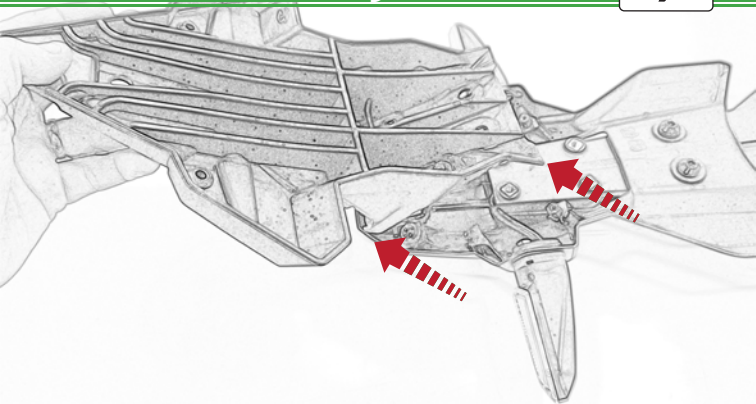


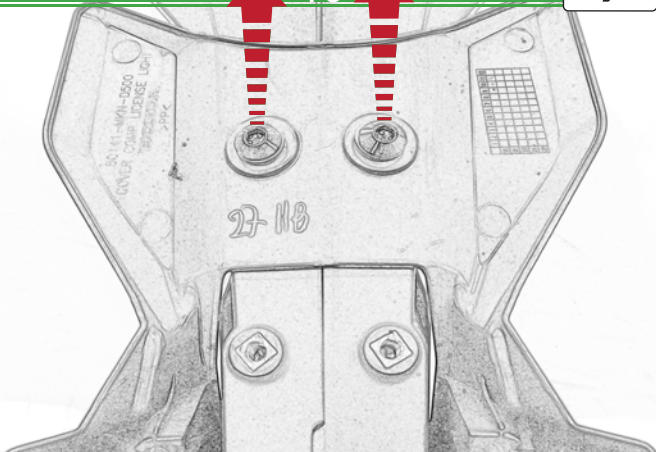


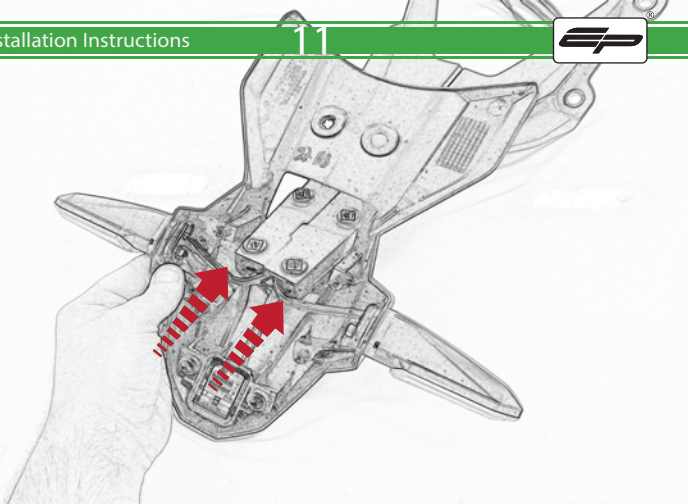

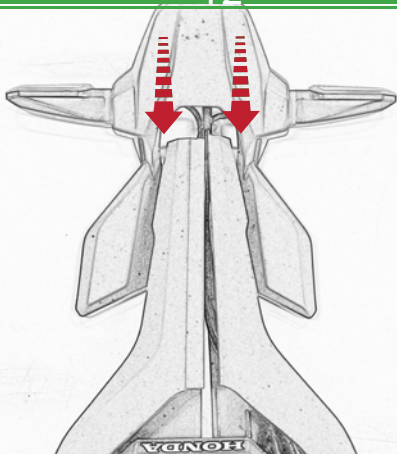


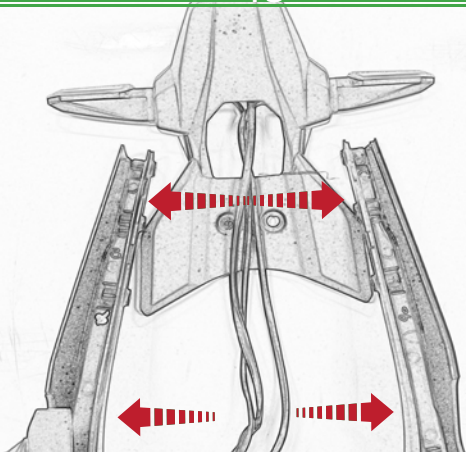

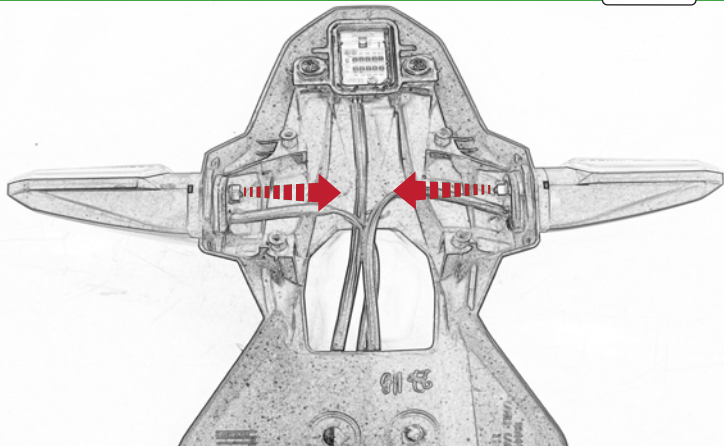


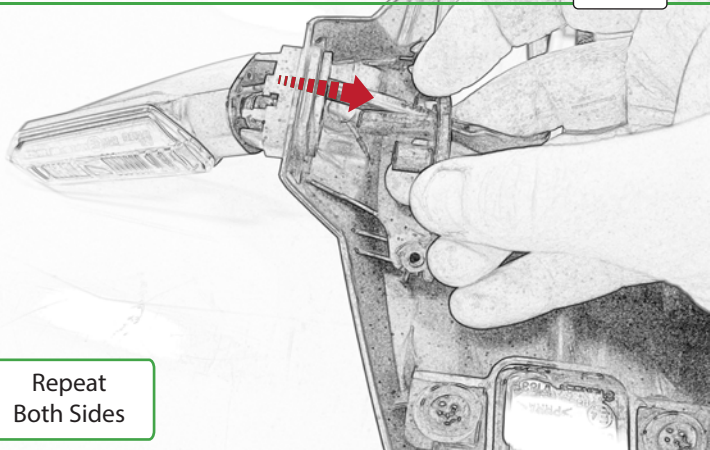


Repeat
Both Sides

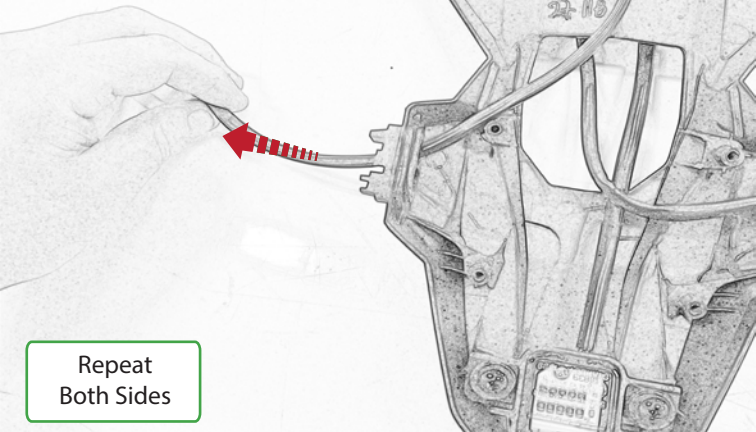



Repeat
Both Sides

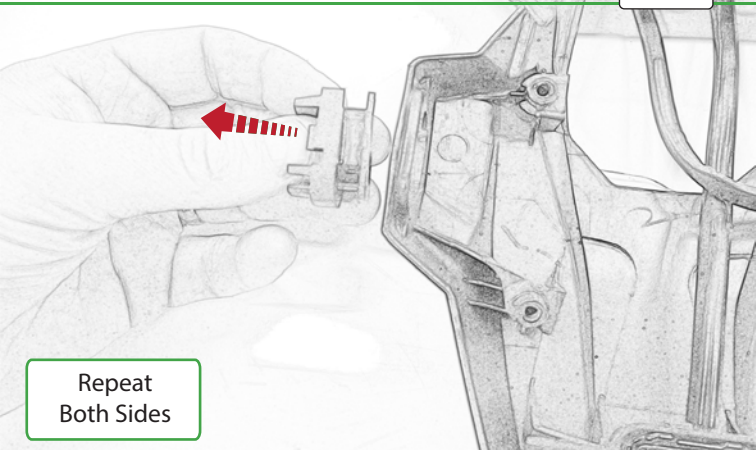



Repeat
Both Sides

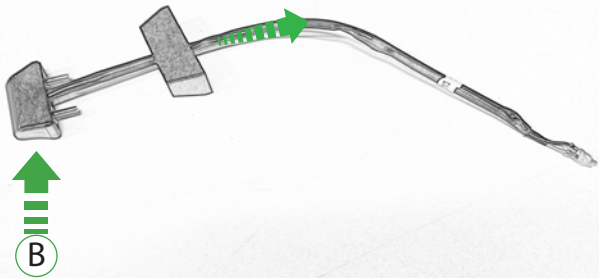

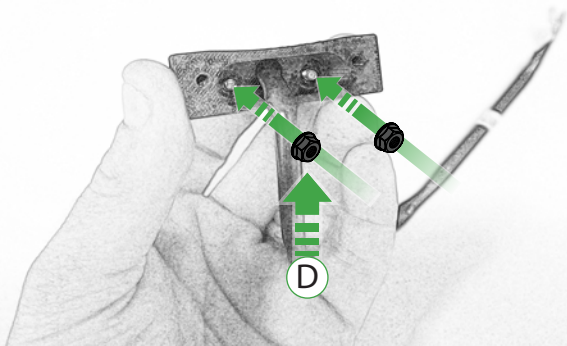


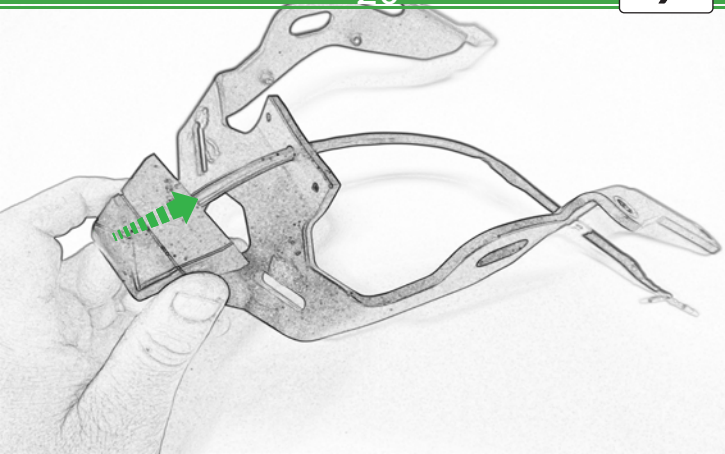

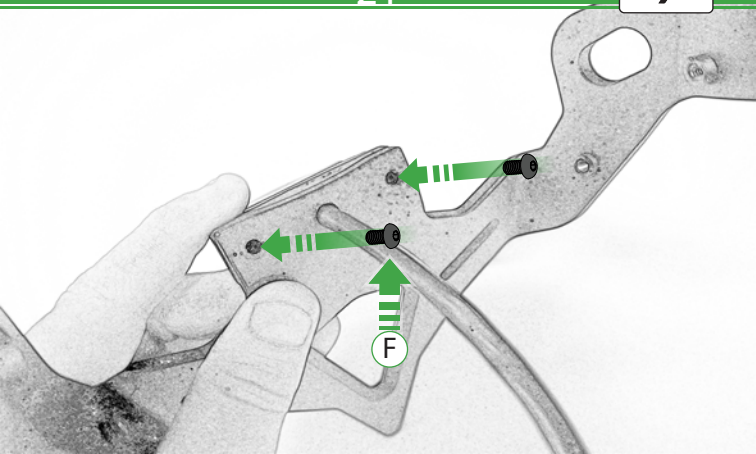


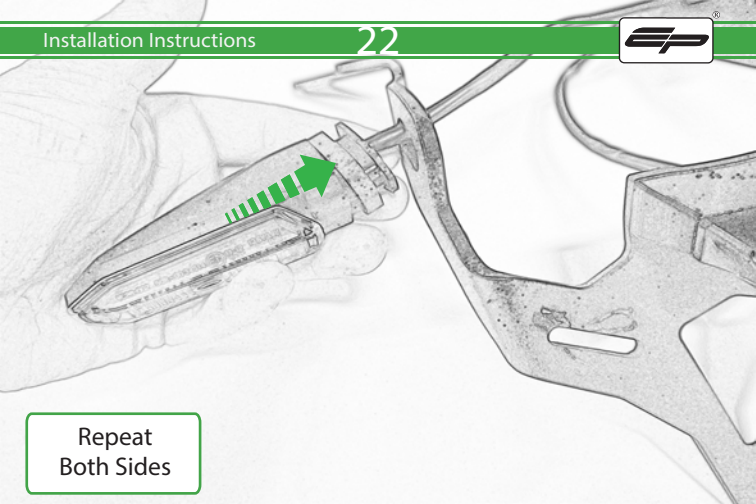


Repeat
Both Sides

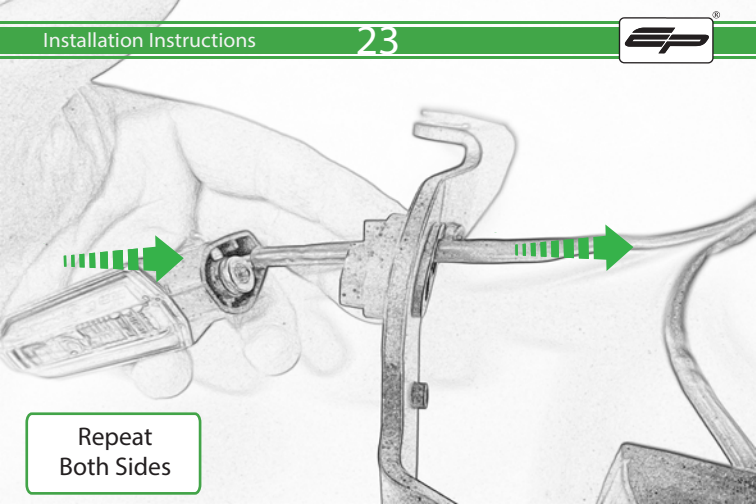

Repeat
Both Sides

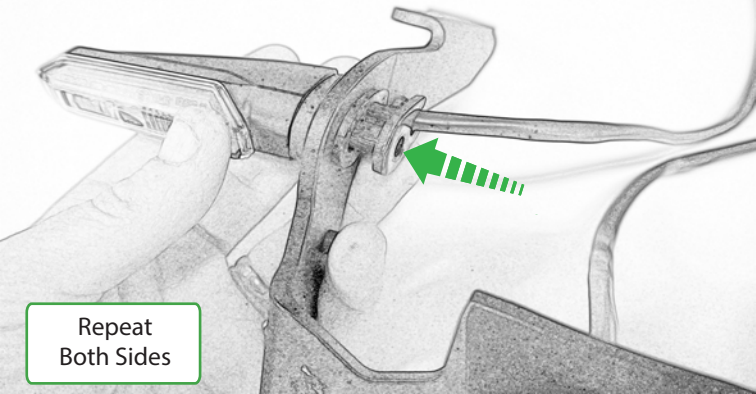


Repeat
Both Sides

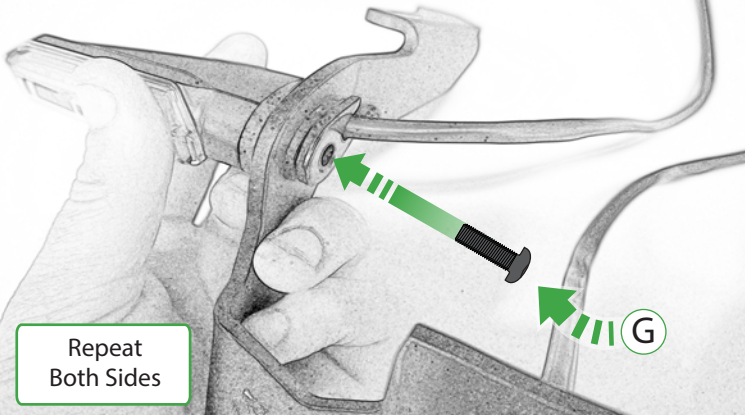

Repeat
Both Sides



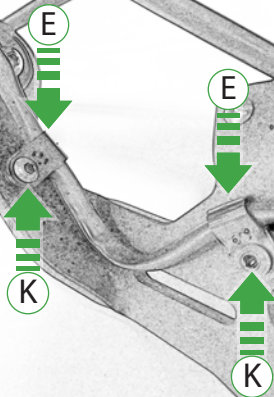


Caution

Run wires through the P-clips ensuring they do not get trapped or squashed




Caution

Run wires through the P-clips ensuring they do not get trapped or squashed

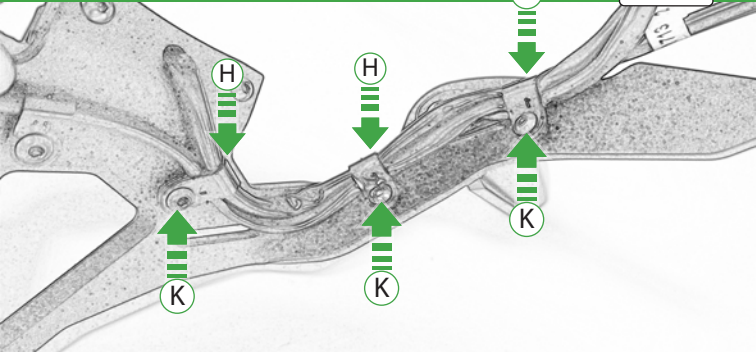


Caution

Run wires through the
P-clips ensuring they
do not get trapped or squashed

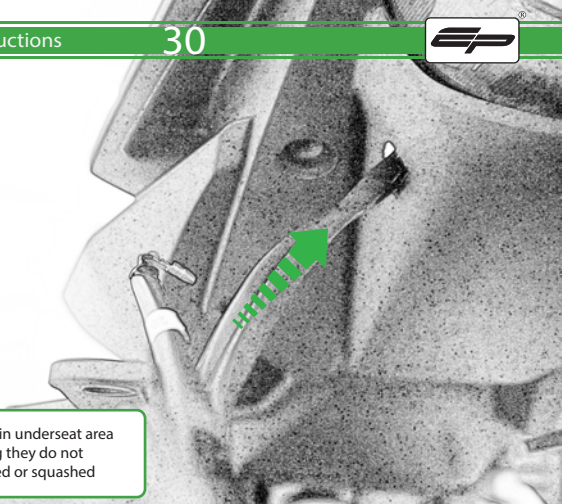

Caution


Locate loom in underseat area
ensuring they do not
get trapped or squashed

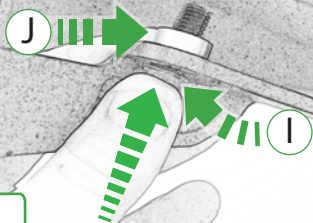

Repeat
Both Sides




Do Not Fully
Tighten

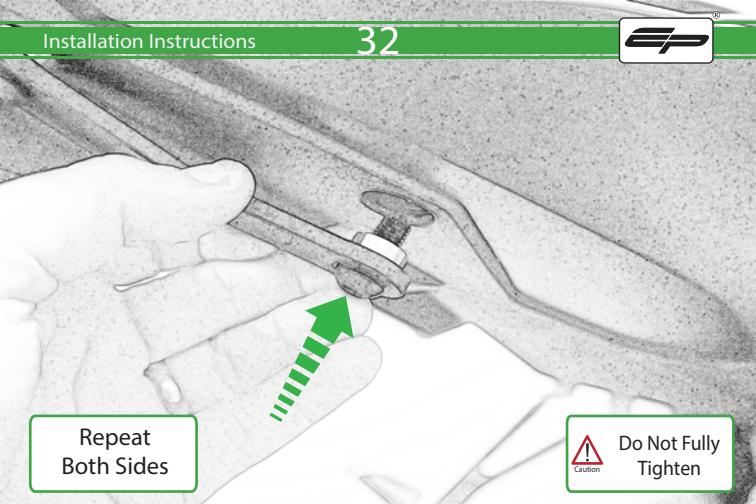



Repeat
Both Sides



 Do Not Fully
Tighten

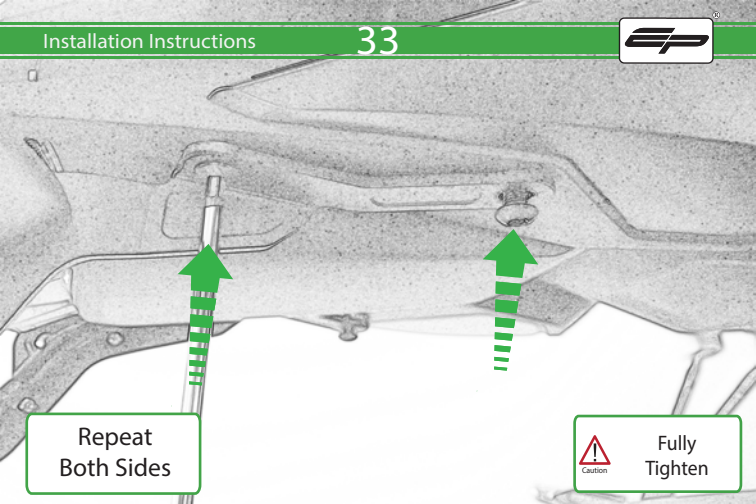



Repeat
Both Sides


 Fully
Tighten

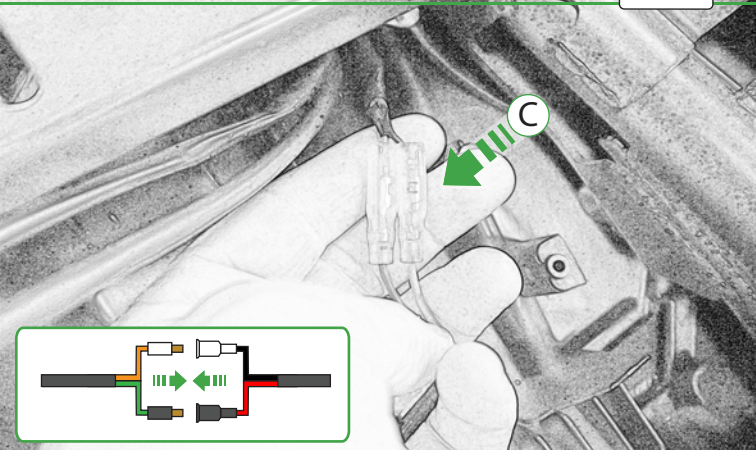

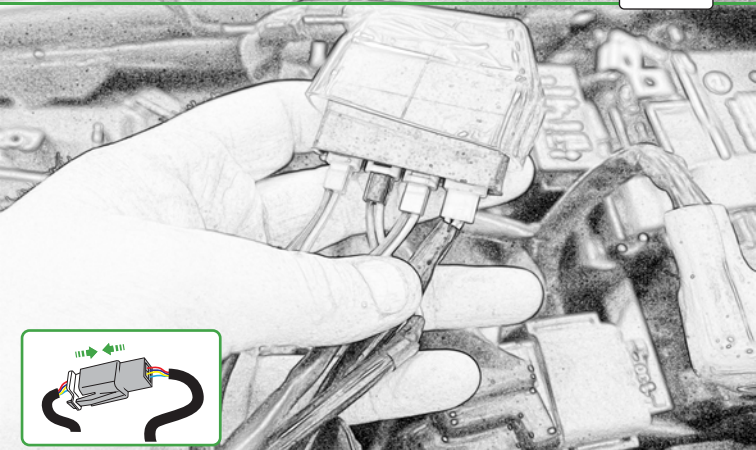

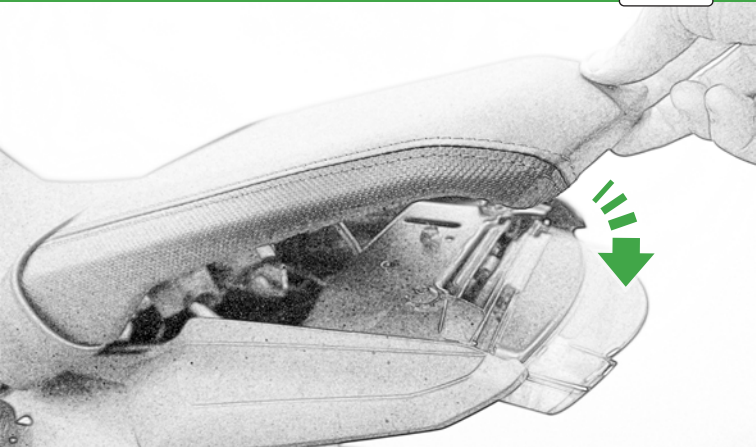

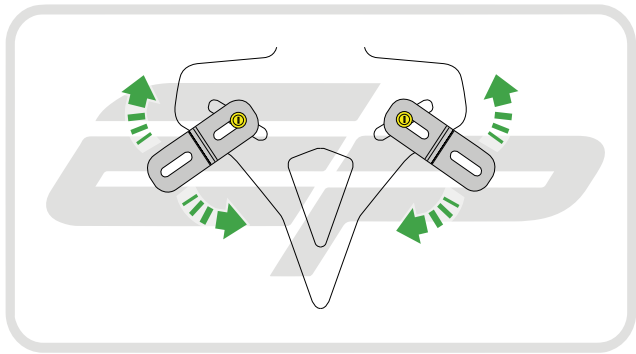

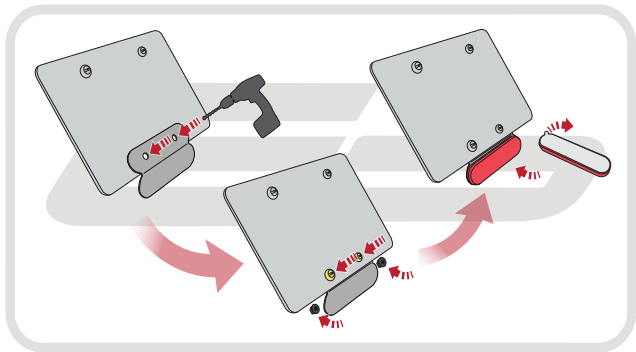



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com