



EVOTECH[®]
P E R F O R M A N C E

KTM 1290 Super Duke
Rectifier Guard


Installation Instructions





Kit Contents PRN014515

- (A) 2 x 1.5mm Spacer (Only used on pillion peg kit)
- (B) 4 x M8 x 16mm Black Button Head Bolts
- (C) 4 x M8 Washers



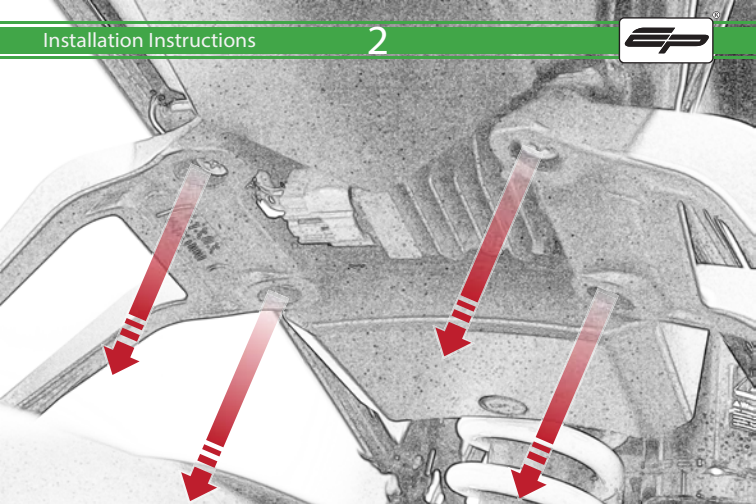

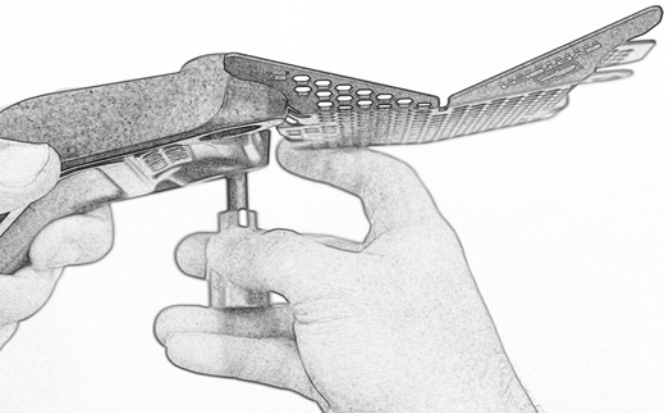

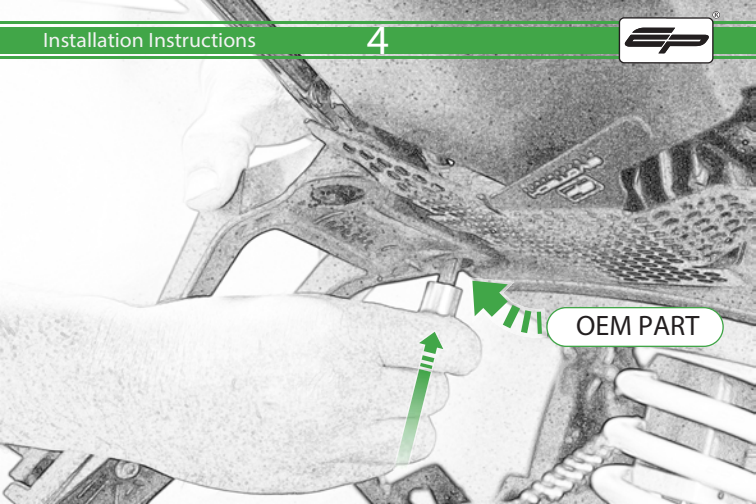


OEM PART





OEM PART



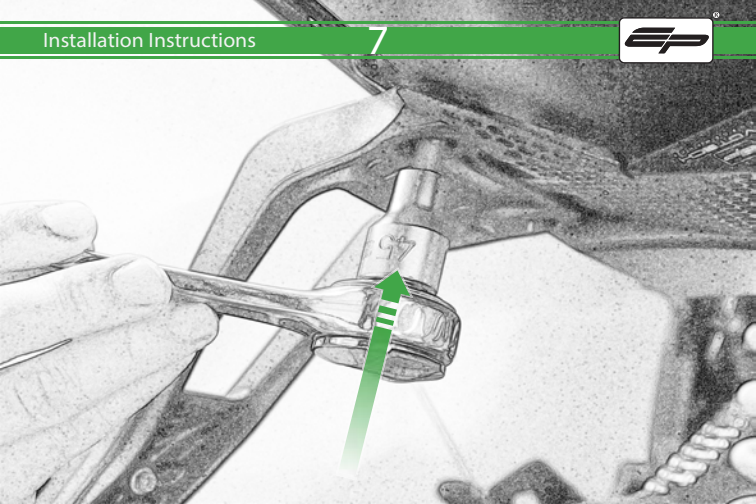



Repeat Stages

4 - 7

For Right Hand Side



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com