



EVOTECH[®]
P E R F O R M A N C E


KTM 790 Adventure
Rear Spindle Bobbin


Installation Instructions





Kit Contents PRN014517


- (A) 1 x Spindle
- (B) 1 x Spacer
- (C) 1 x Spindle Nut
- (D) 2 x Bobbin head
- (E) 2 x M8 Washer
- (F) 2 x M8 Nut

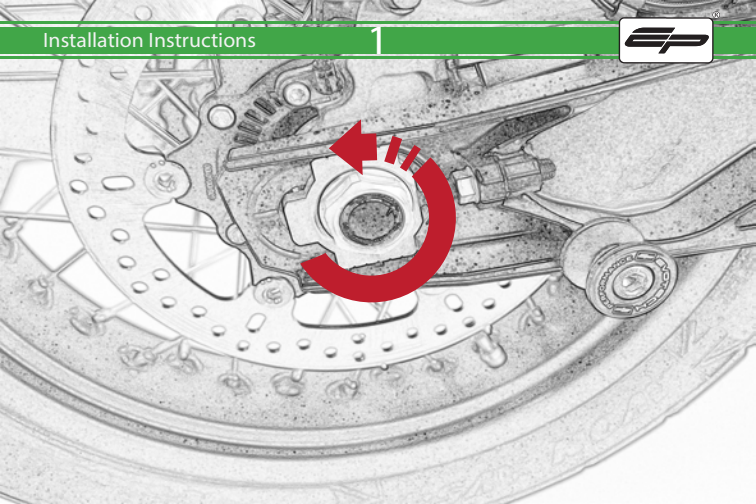

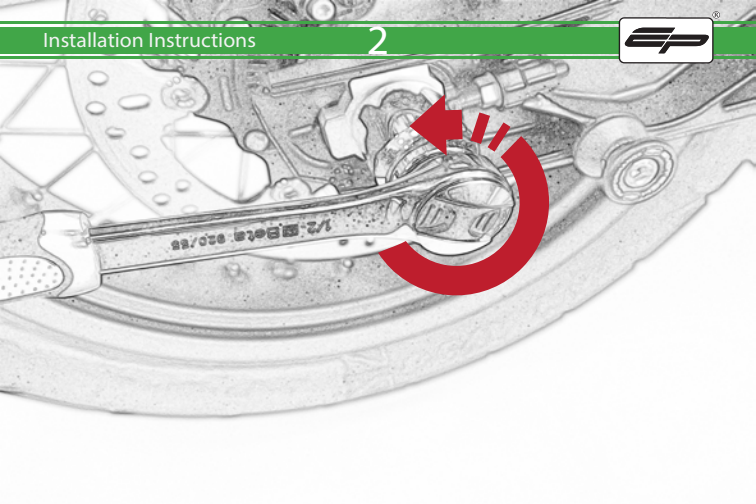


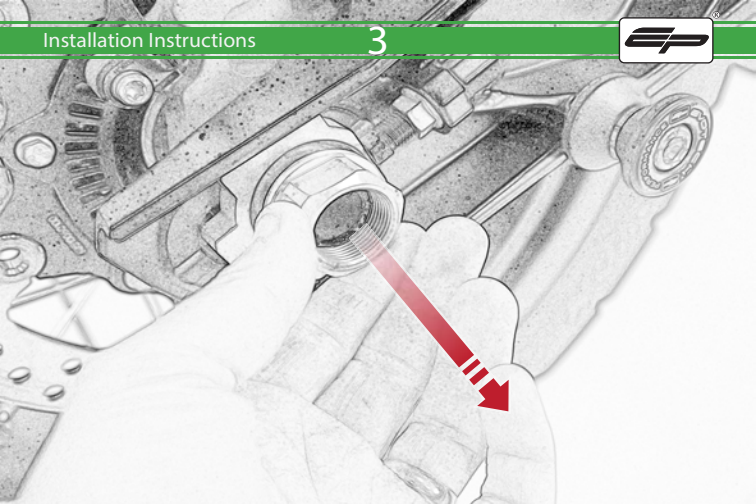


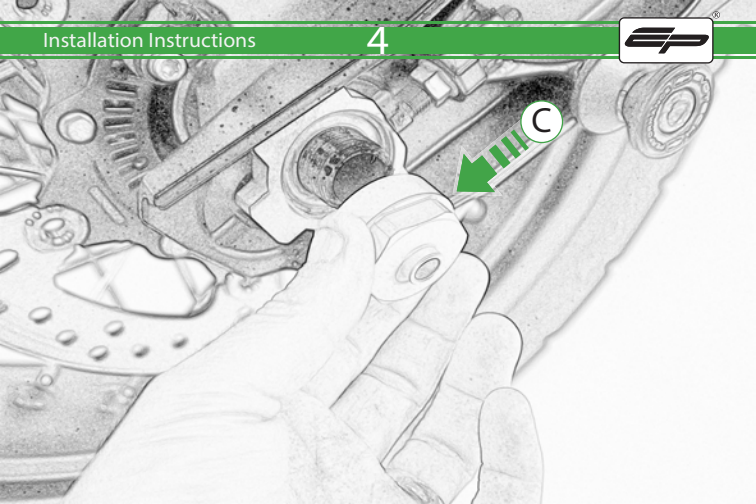


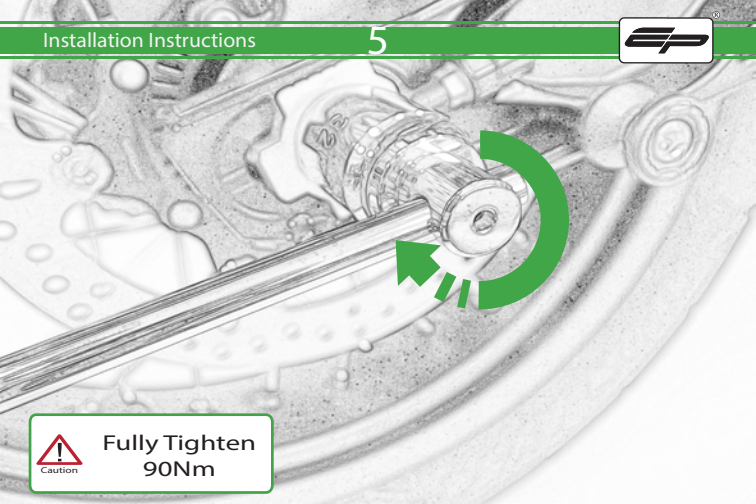


**Fully Tighten
90Nm**

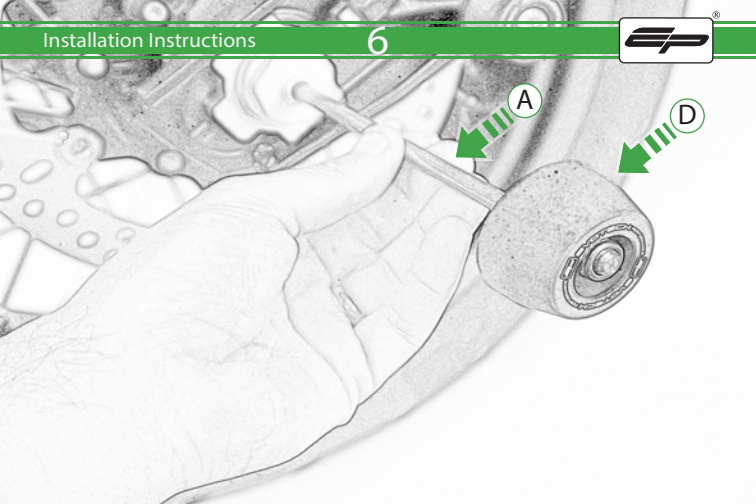

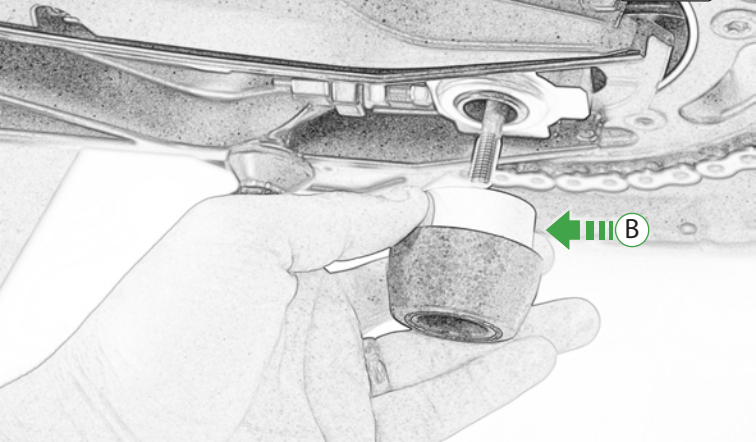

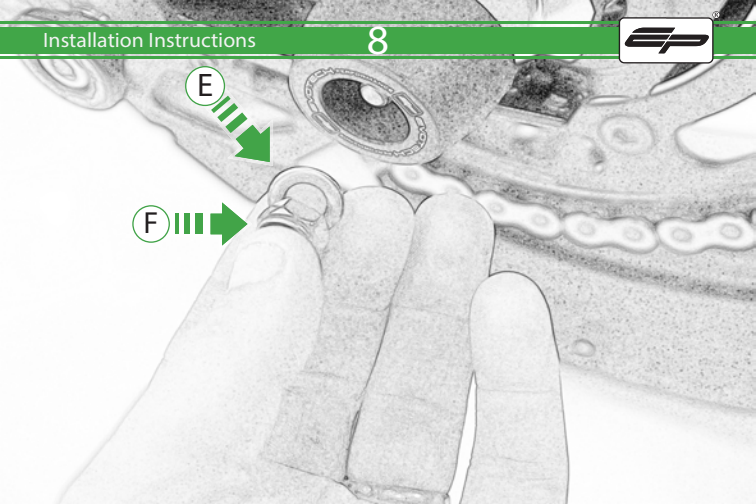

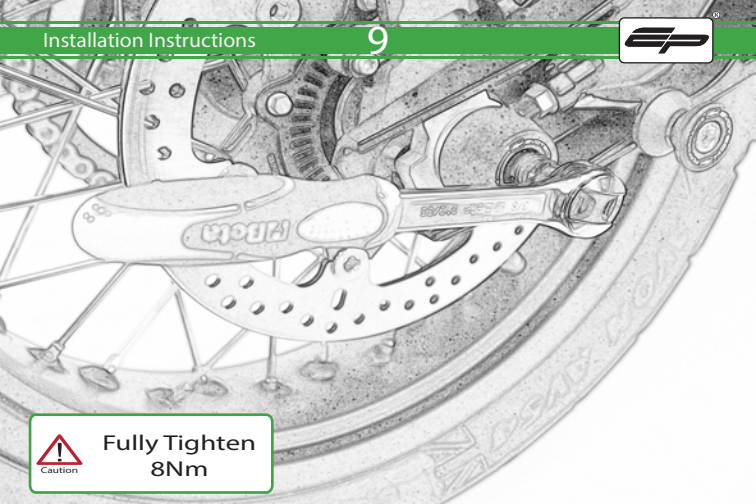

Caution

Fully Tighten
8Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com