



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


BMW F 900 R / SE Hand Guard


Installation Instructions





## Kit Contents PRN014553-014556-015006-31739-31740

- (A) 1 x R/H Hand Guard
- (B) 1 x L/H Hand Guard
- (C) 1 x L/H Mirror Arm
- (D) 1 x R/H Mirror Arm
- (E) 1 x R/H Hand Guard Plastic
- (F) 1 x L/H Hand Guard Plastic
- (G) 2 x Bar End Middle Spacer
- (H) 2 x M10 x 70 SS Caphead
- (I) 2 x M5 Washer
- (J) 2 x M5 x 25 Button Head Bolt
- (K) 2 x Bar End Inner
- (L) 2 x Spacer
- (M) 2 x Bar End Outer
- (N) 2 x M10 Washer

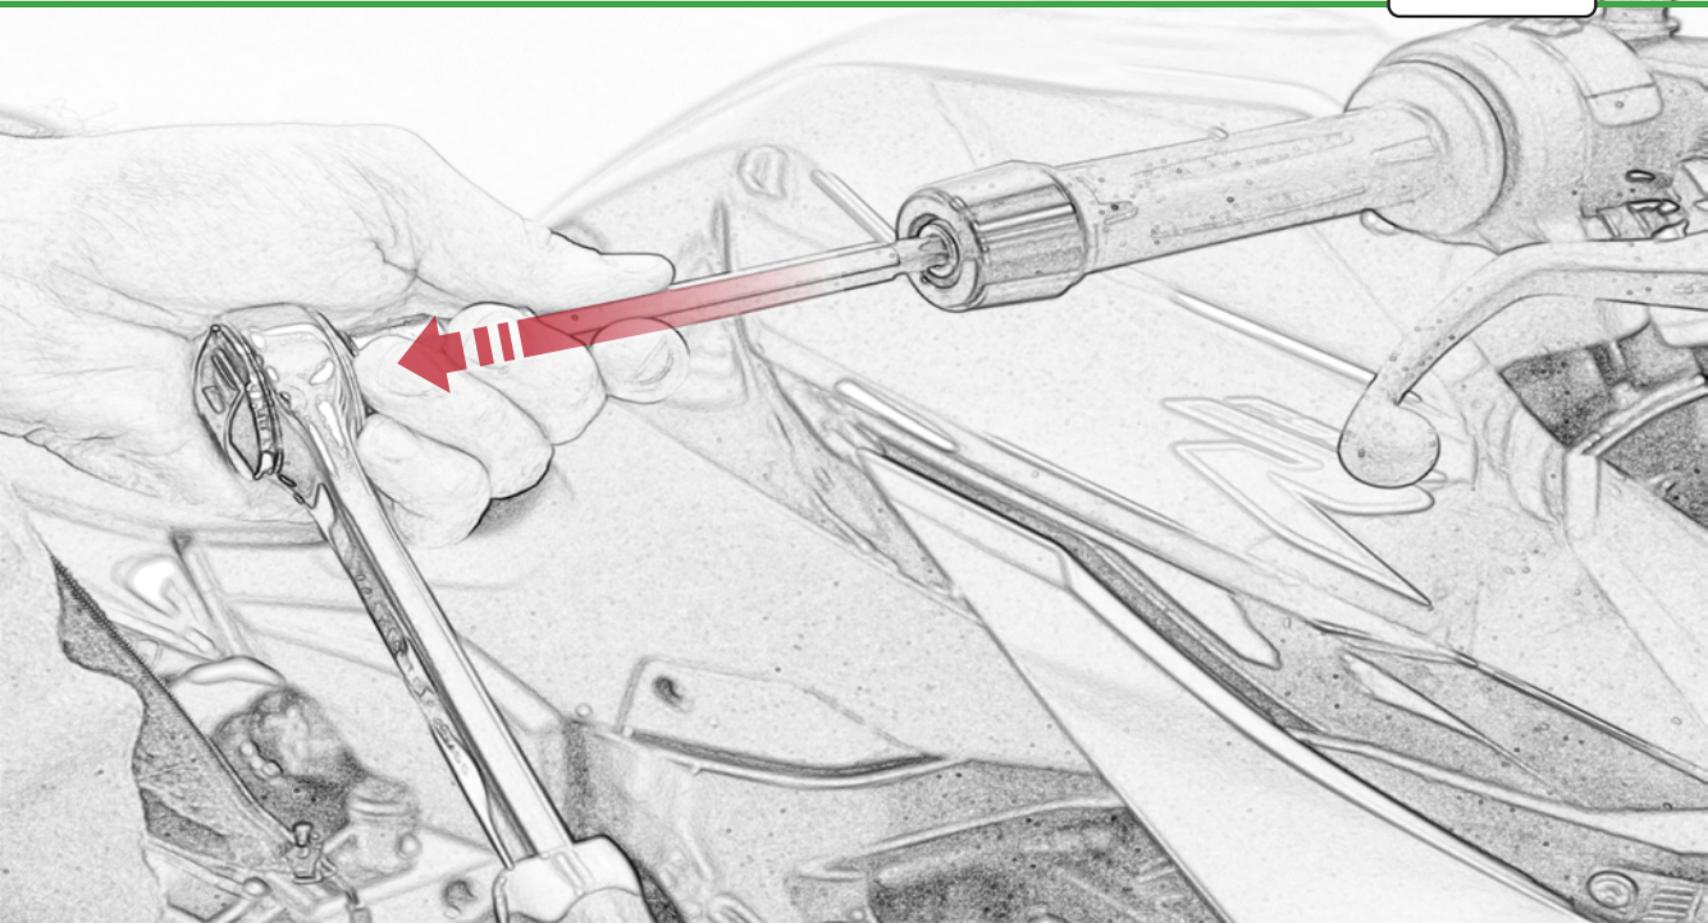

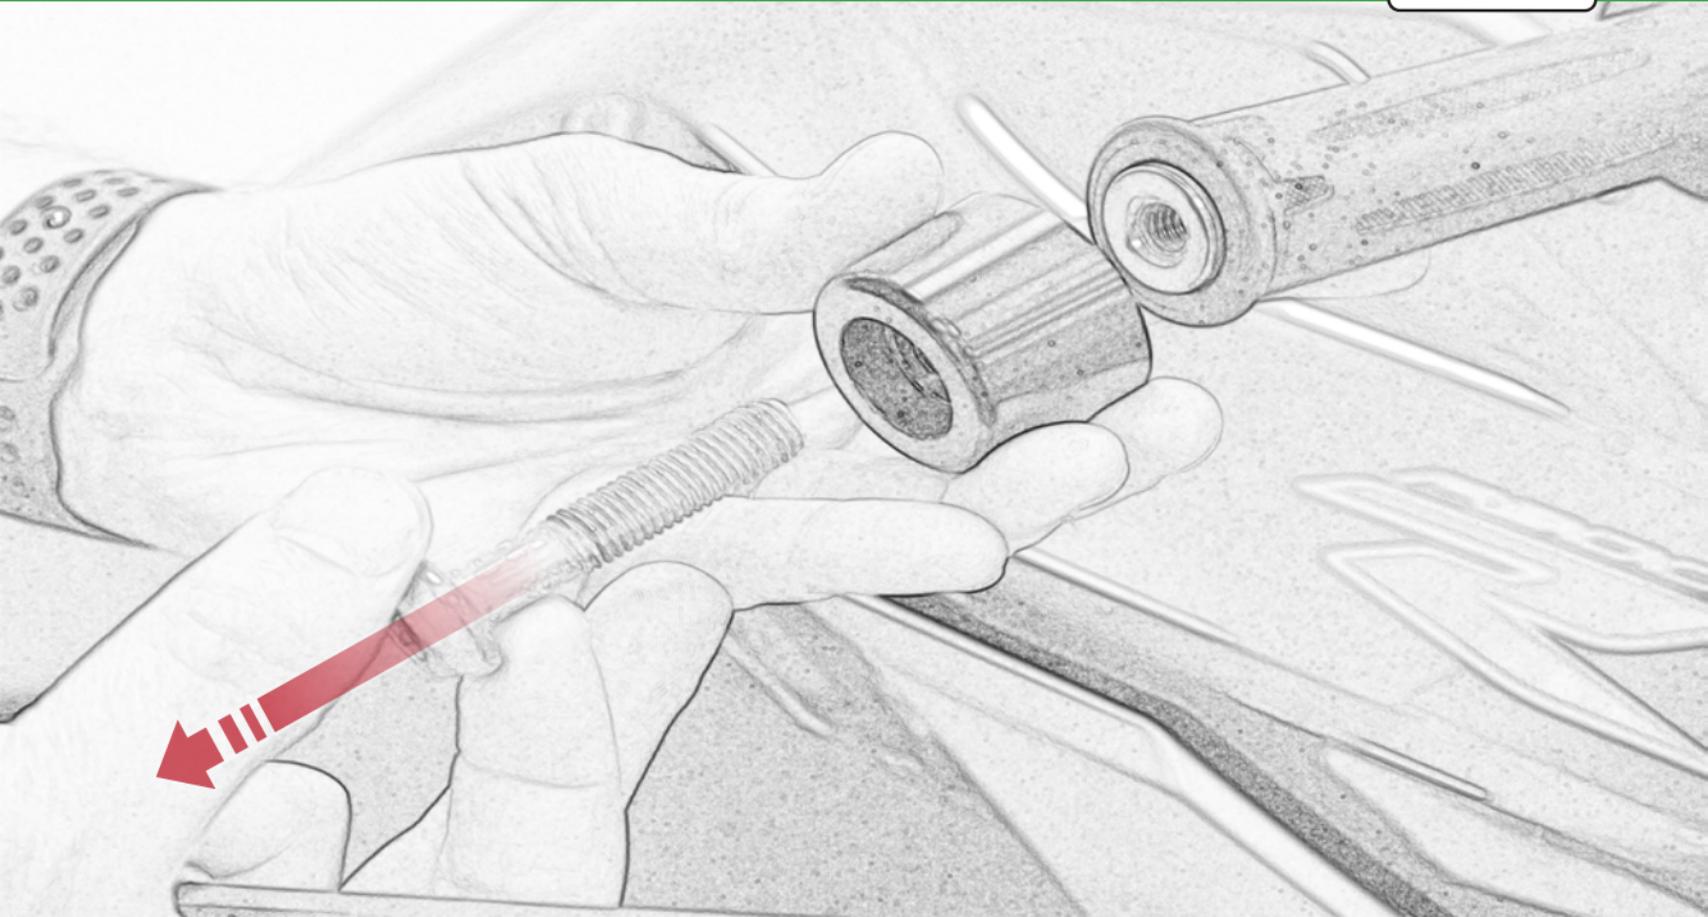


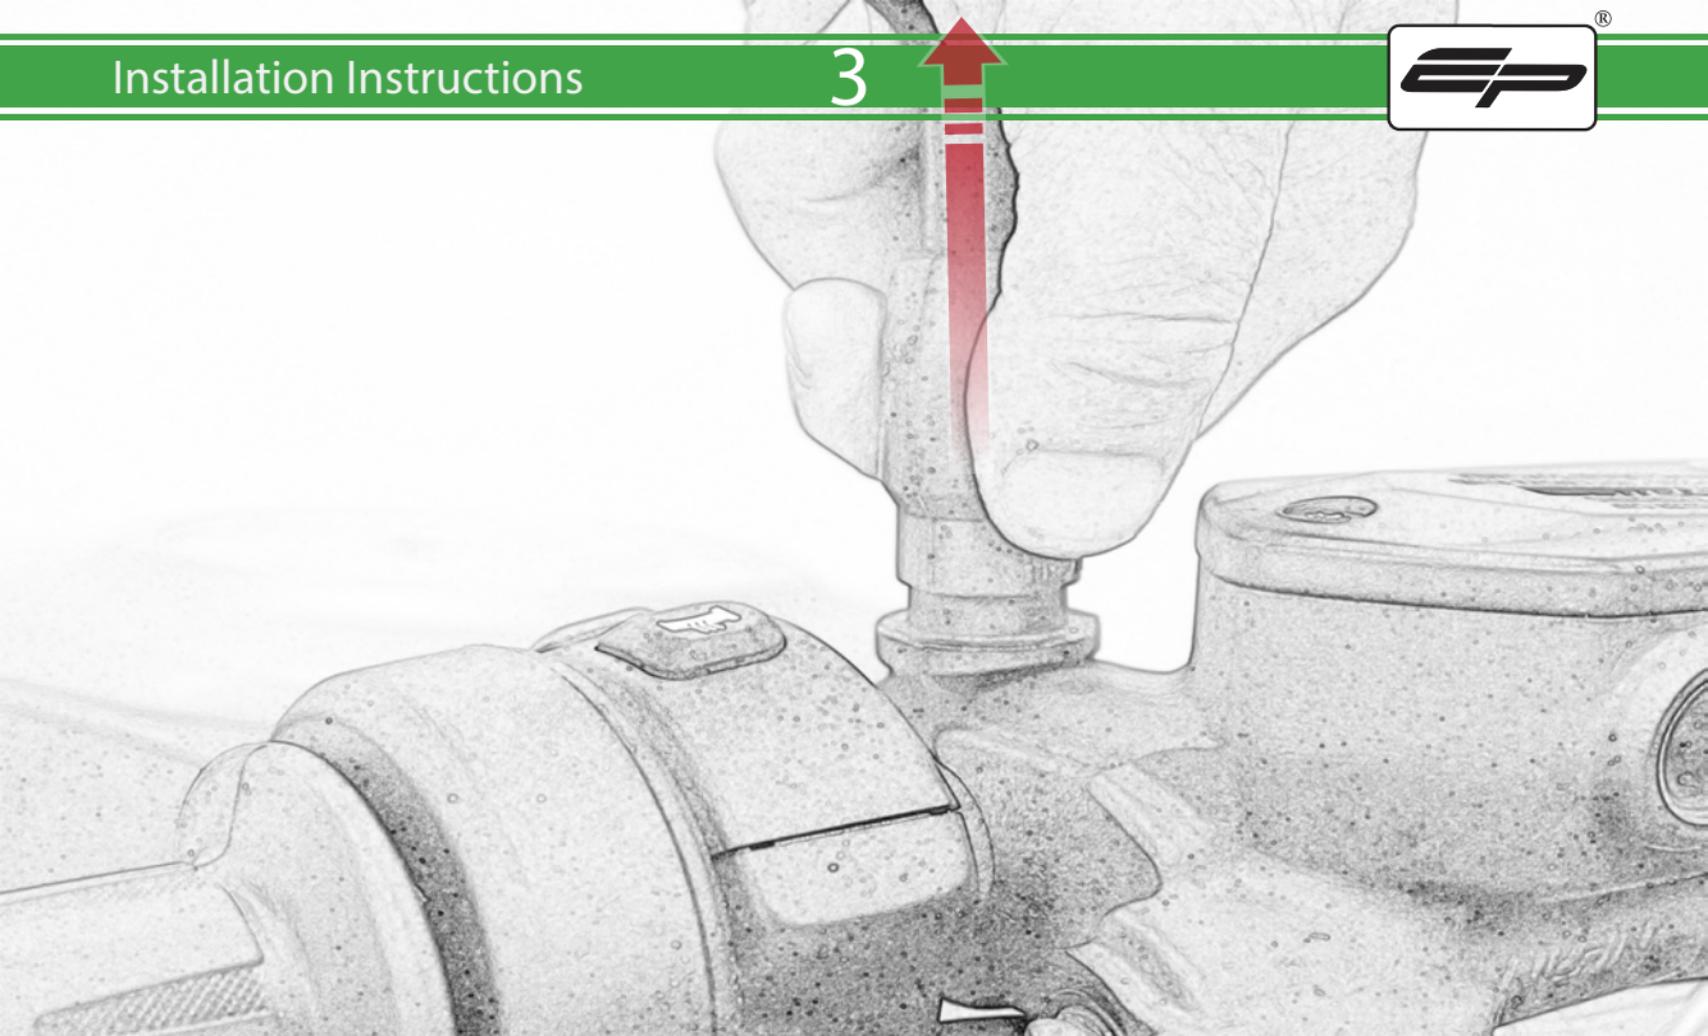


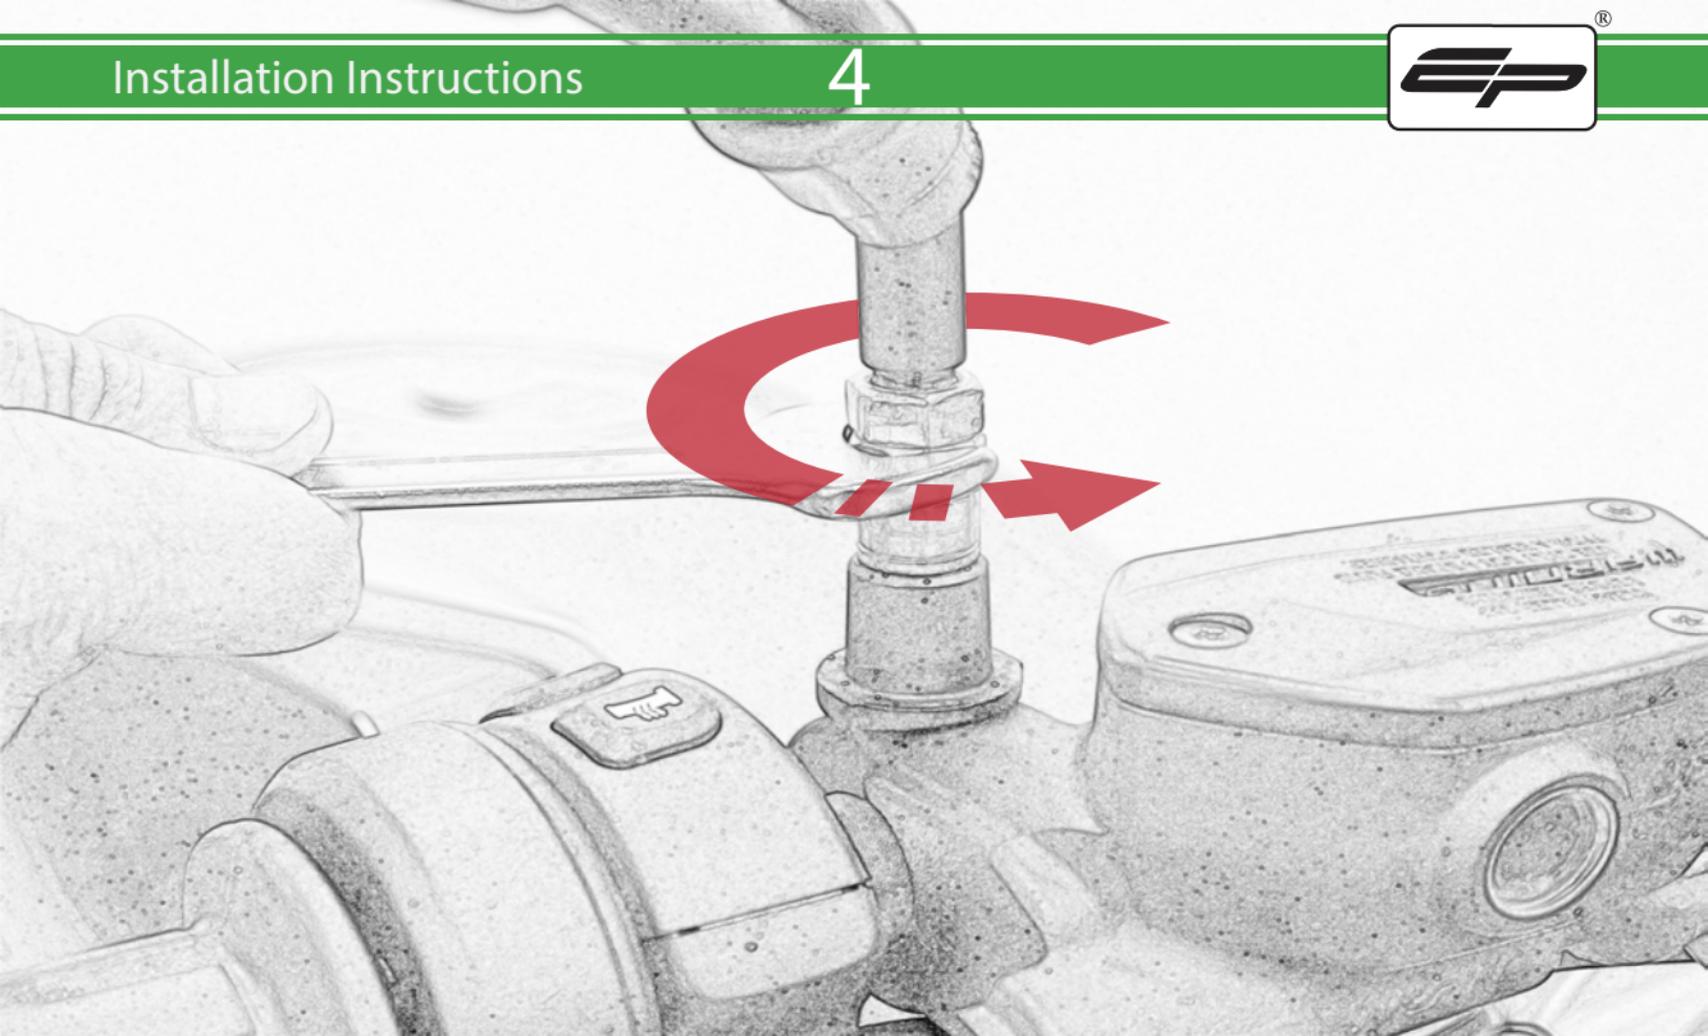





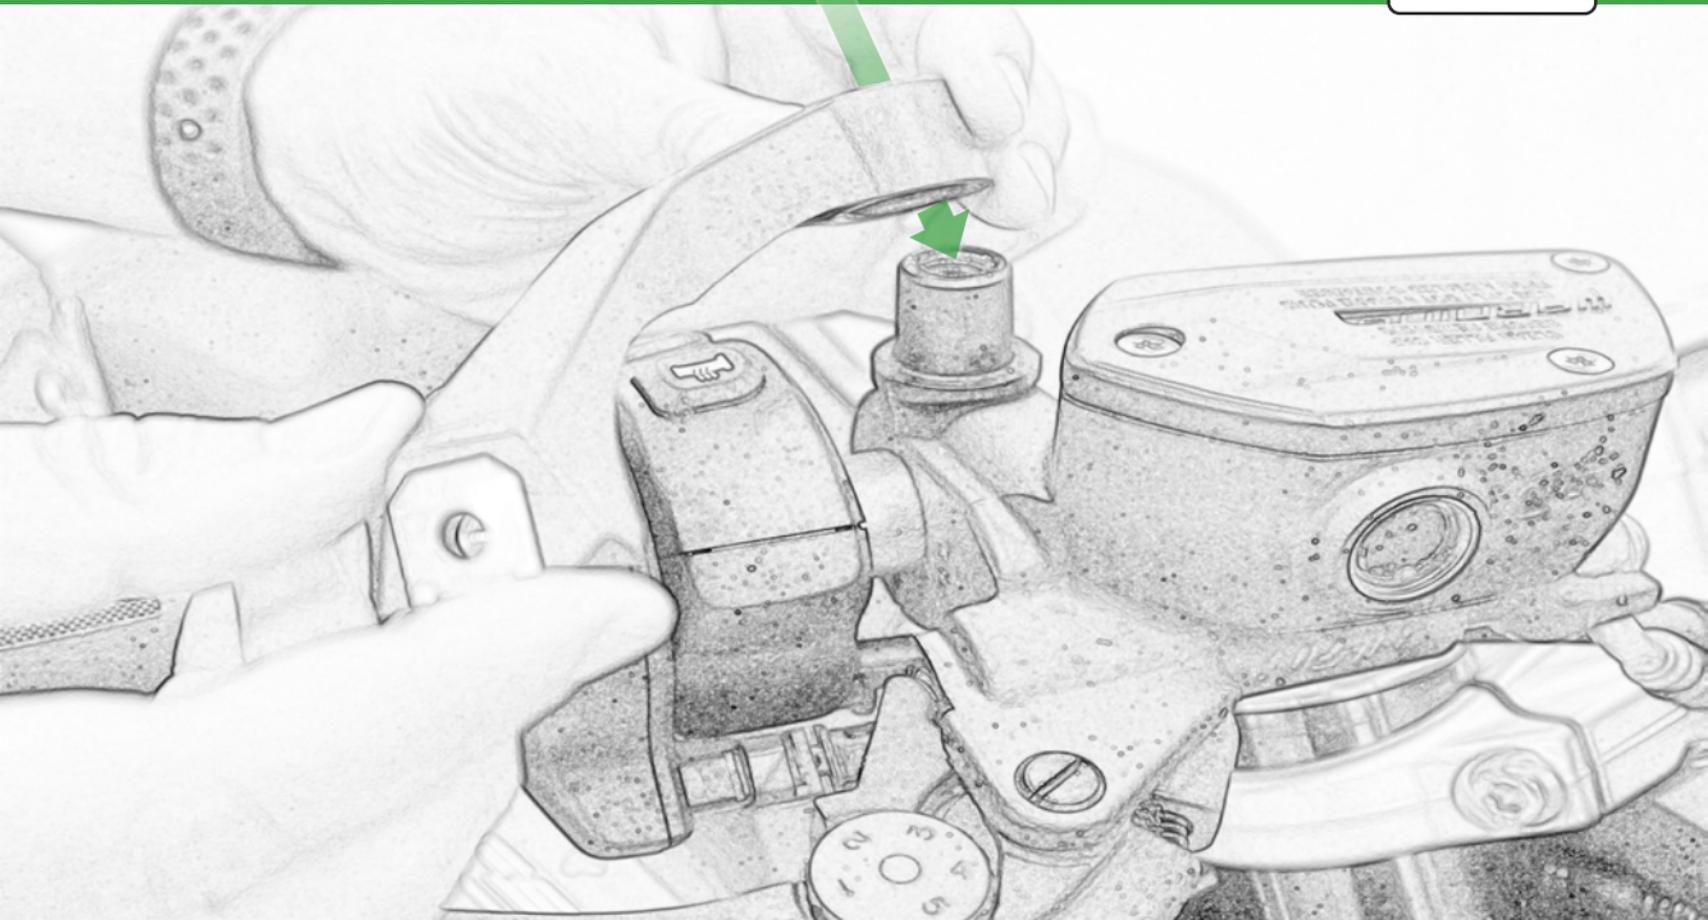


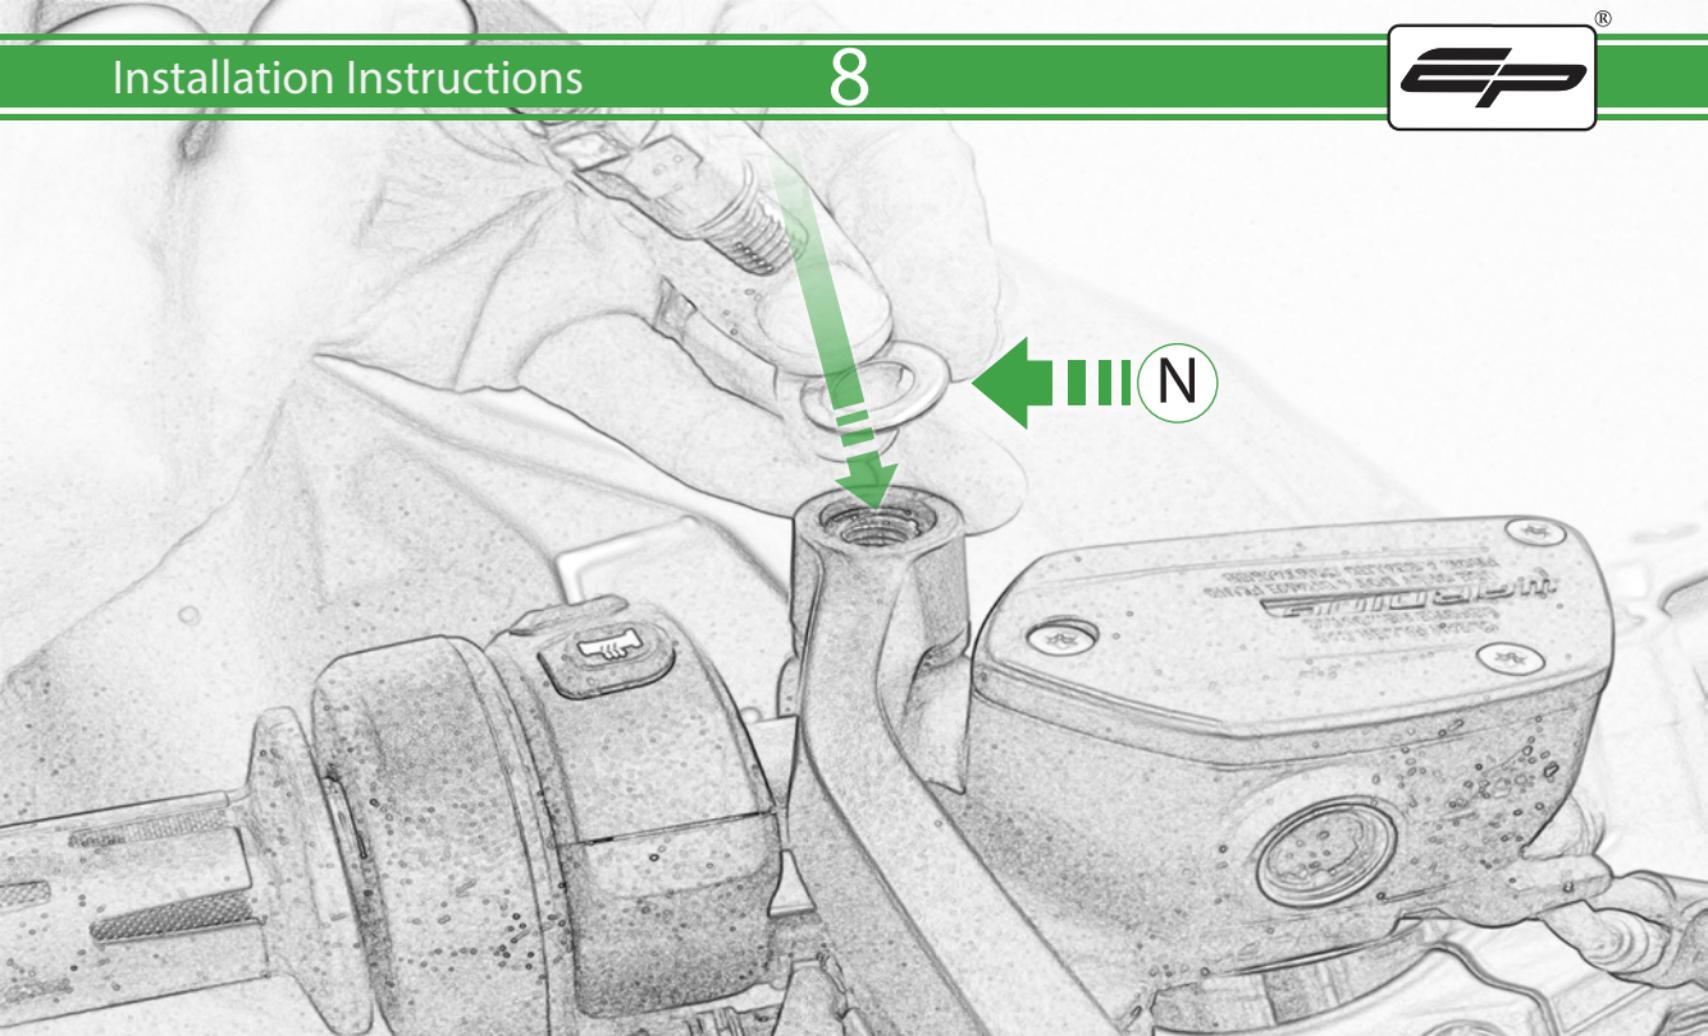






Caution


Do Not Fully Tighten

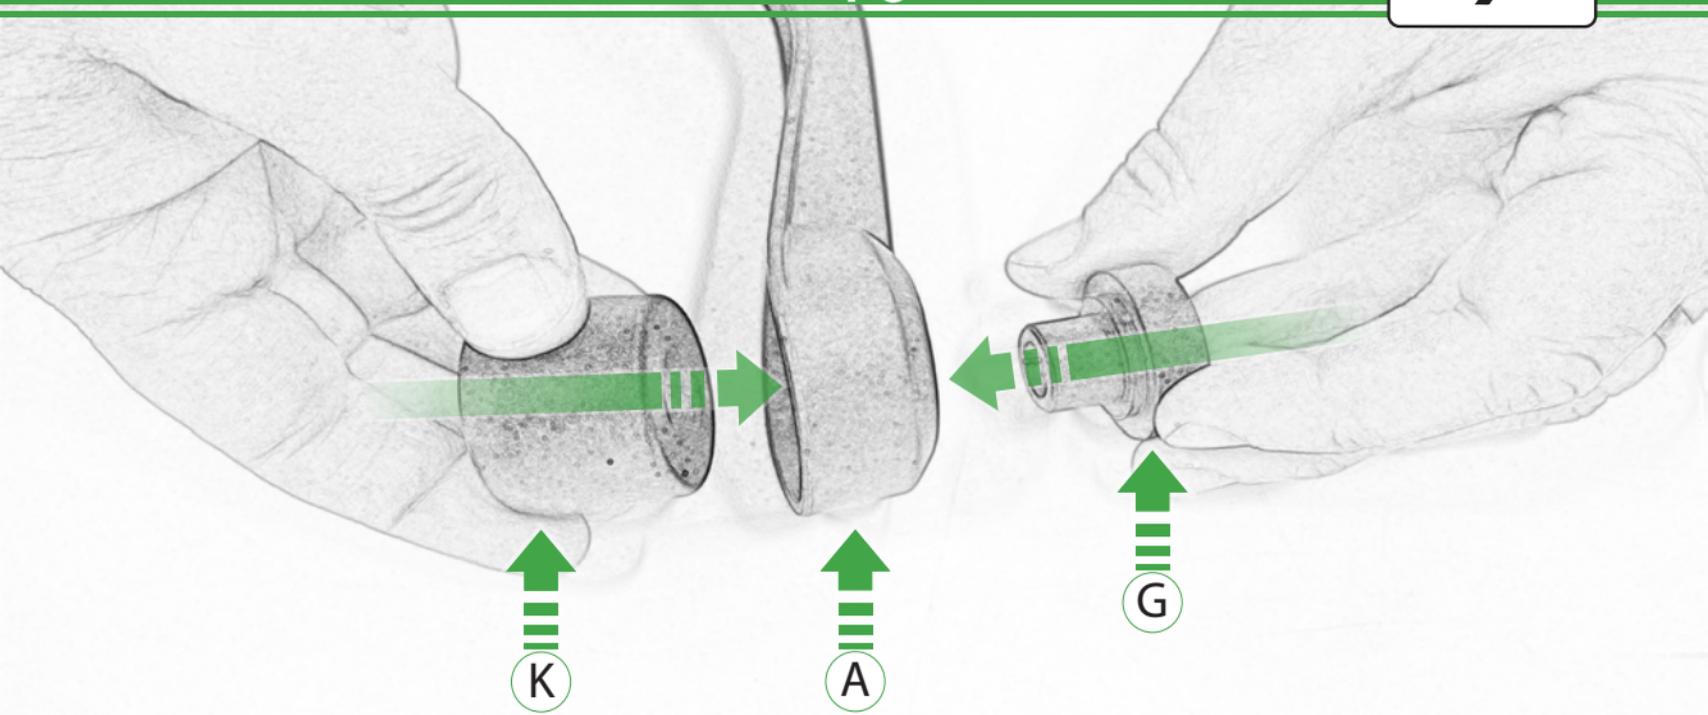

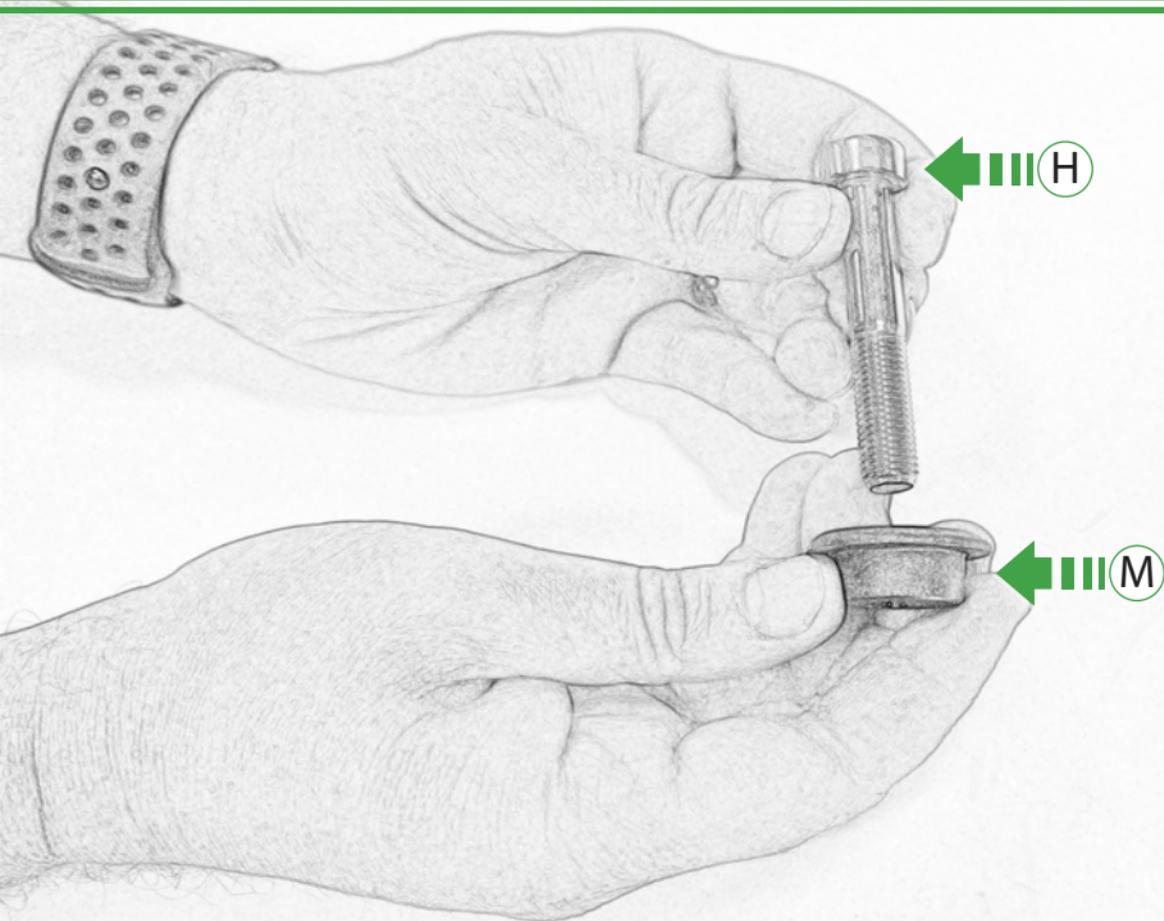


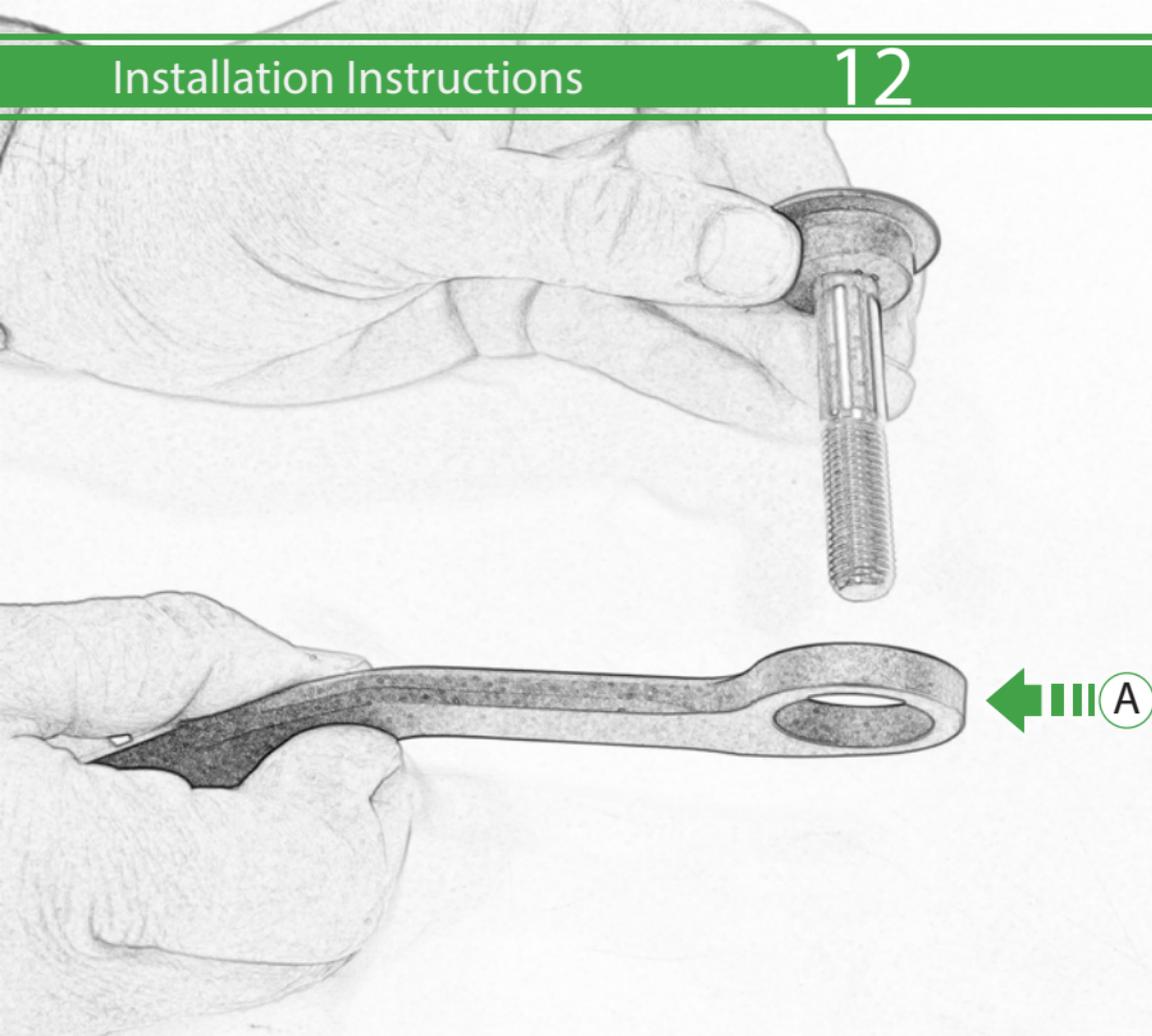

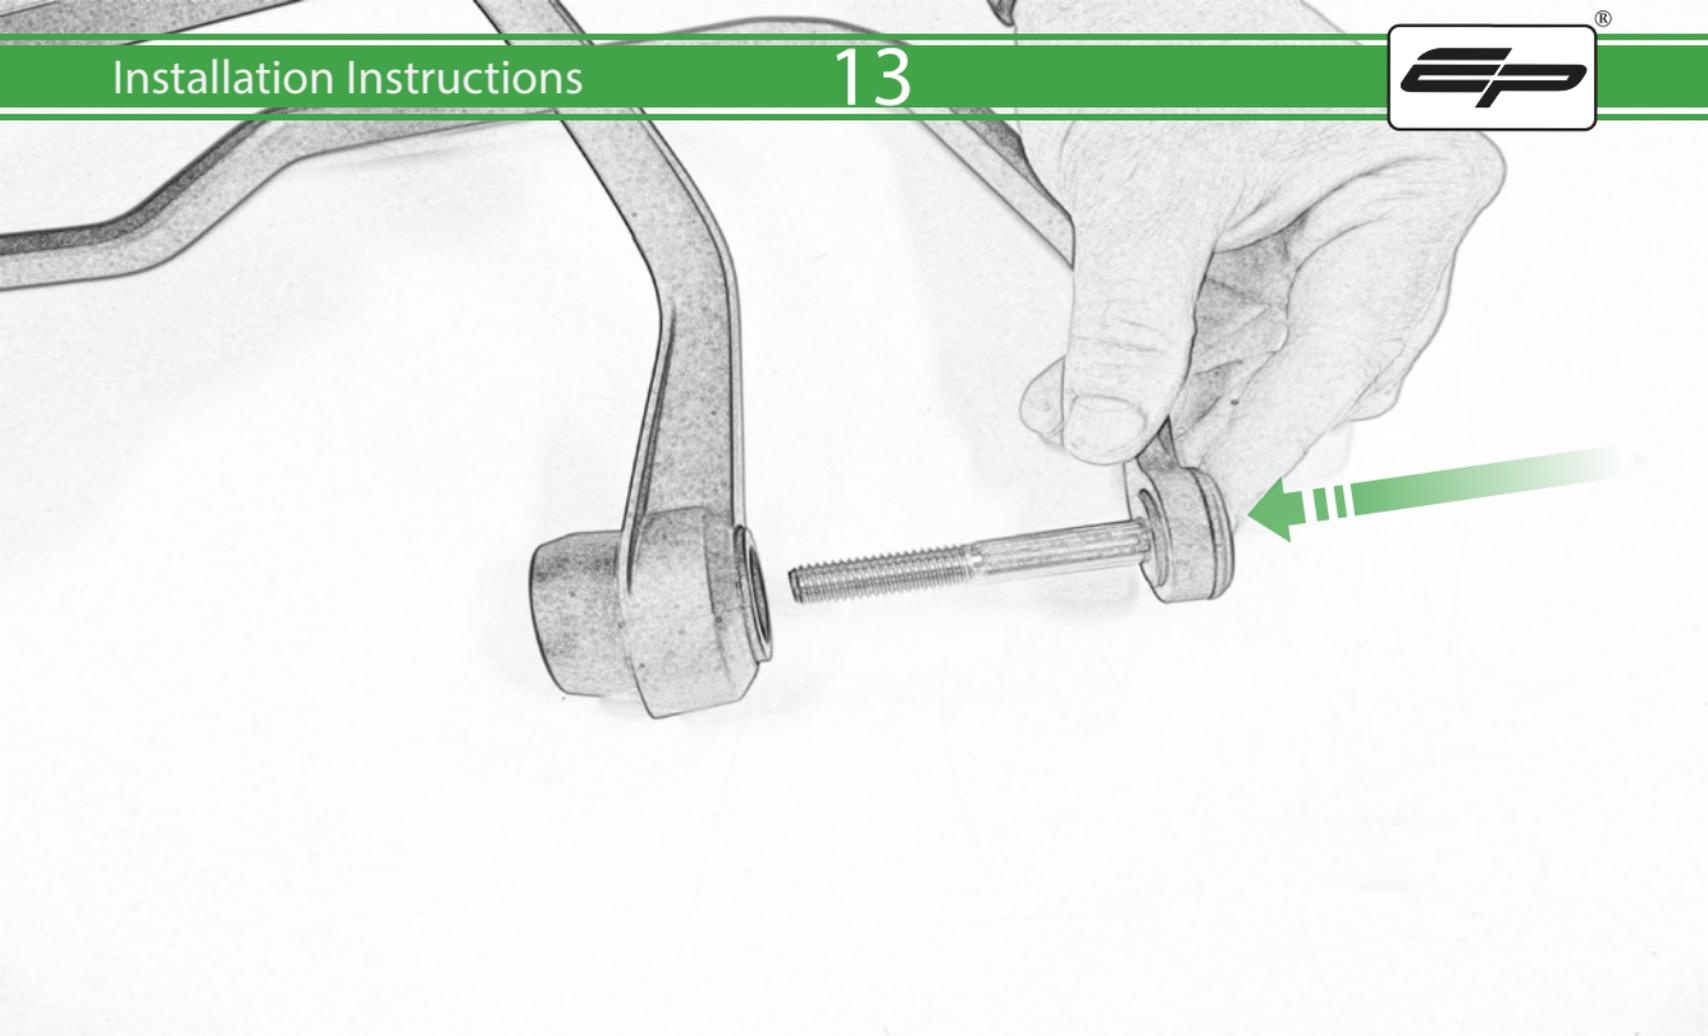

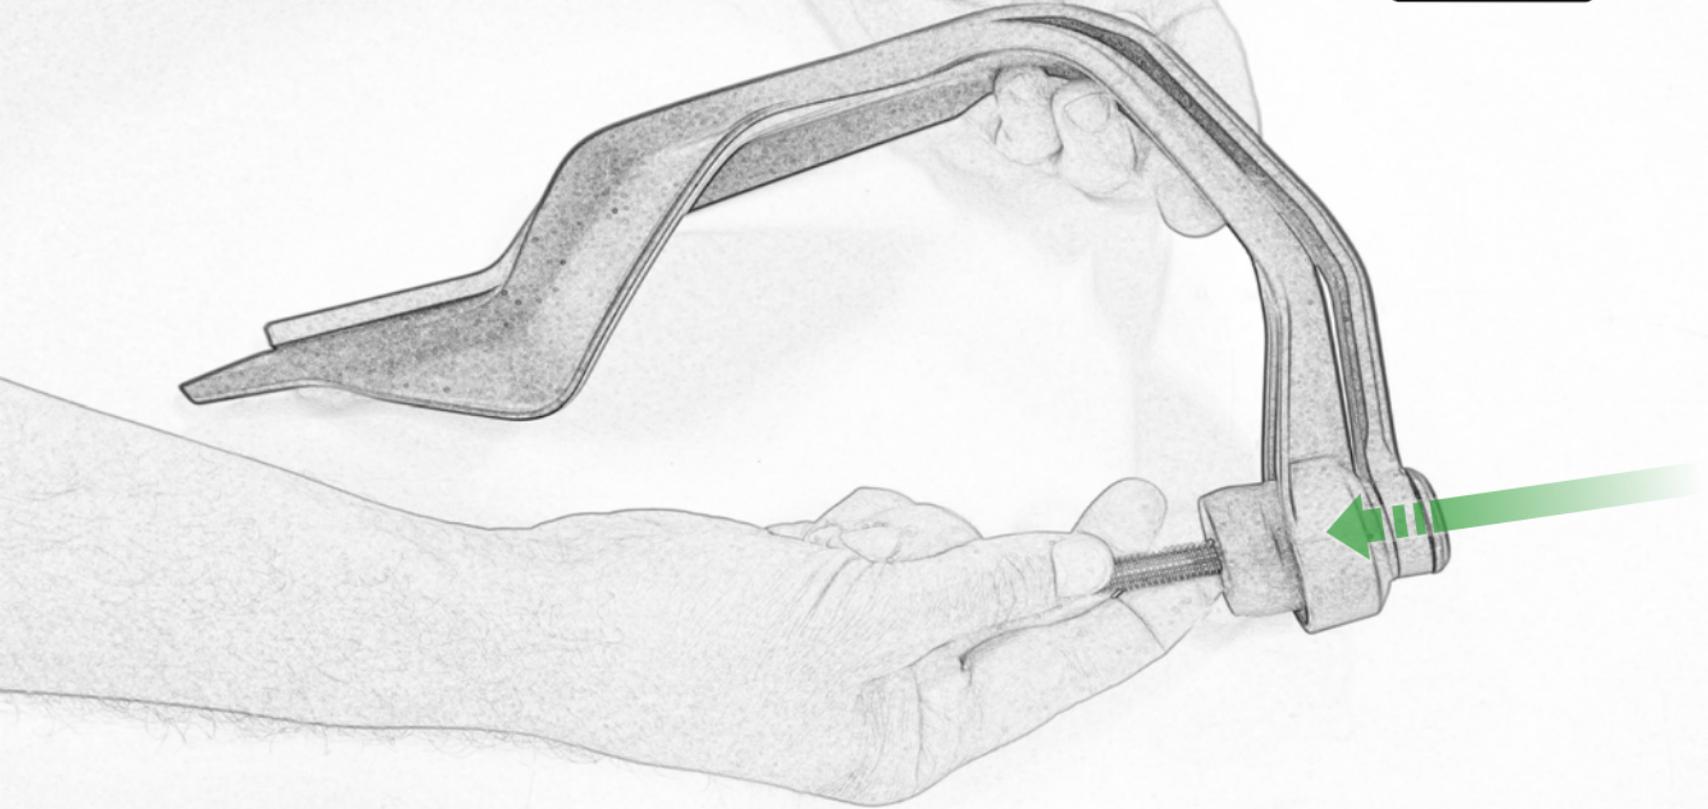




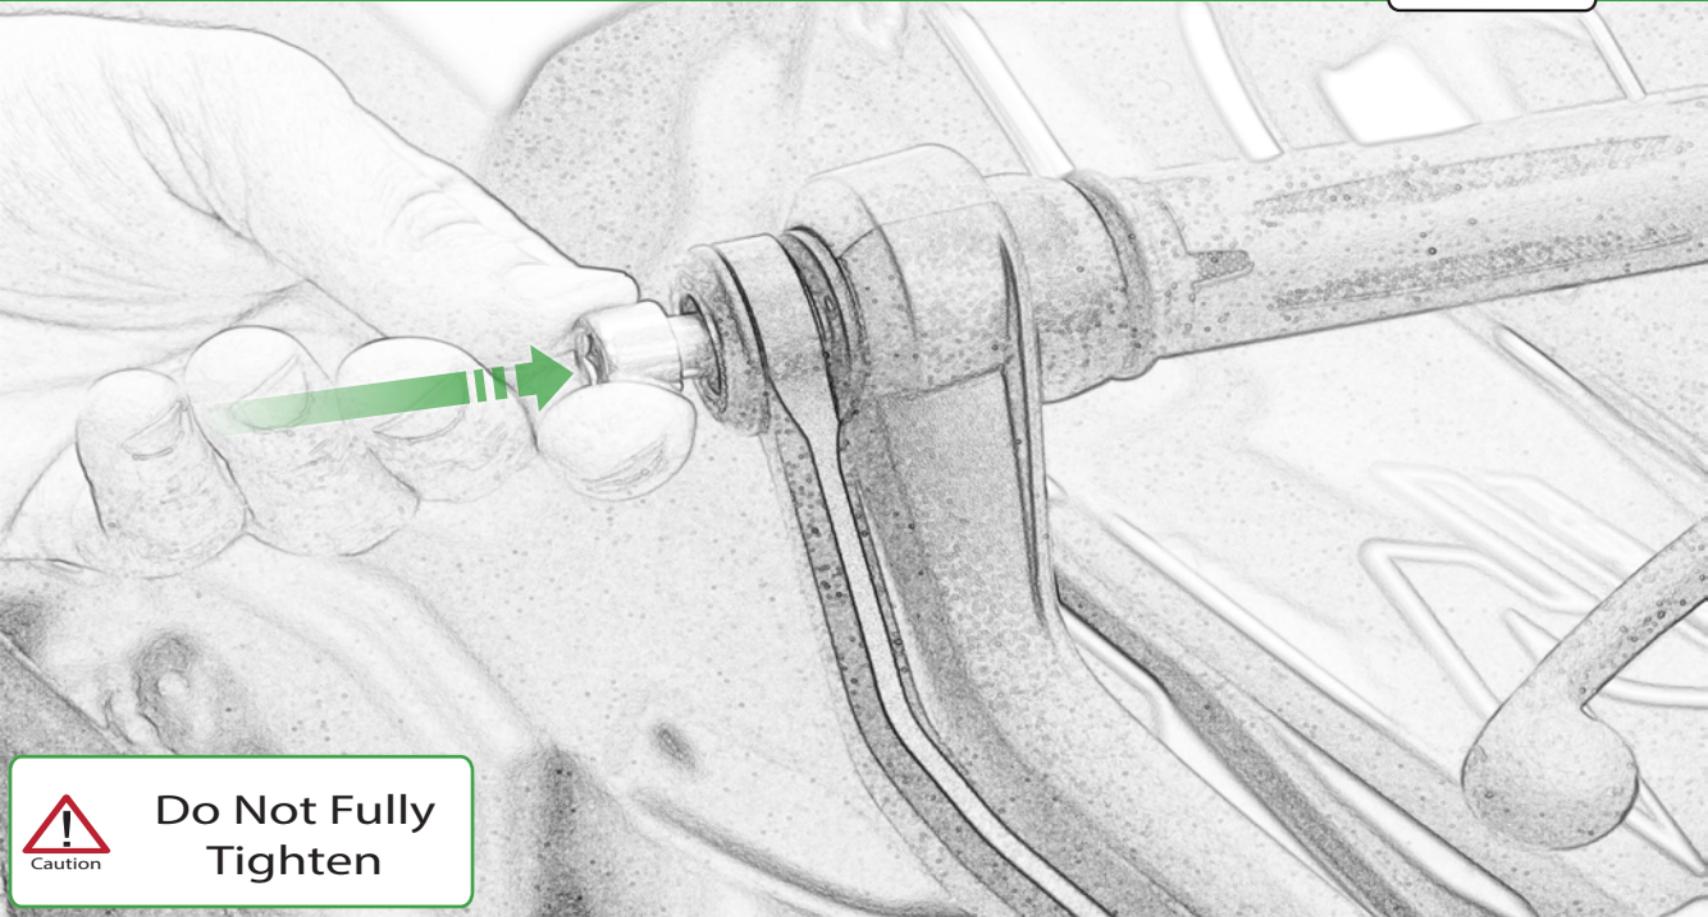

**Do Not Fully Tighten**






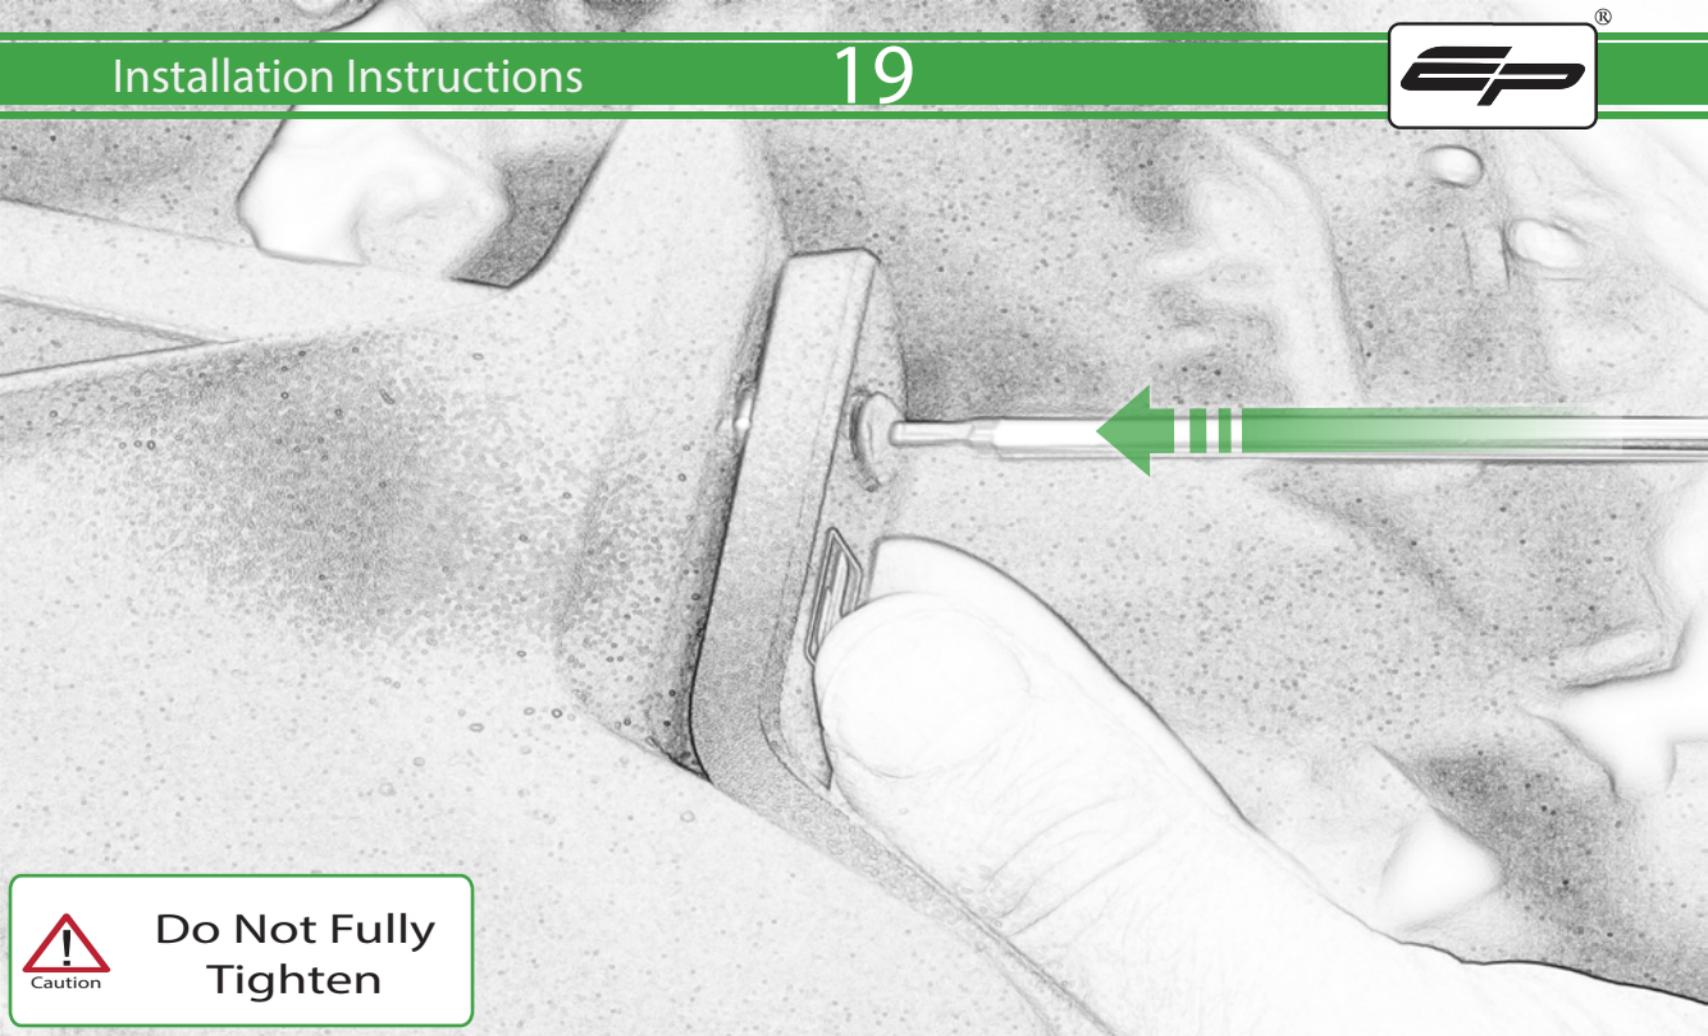


Caution

Do Not Fully Tighten

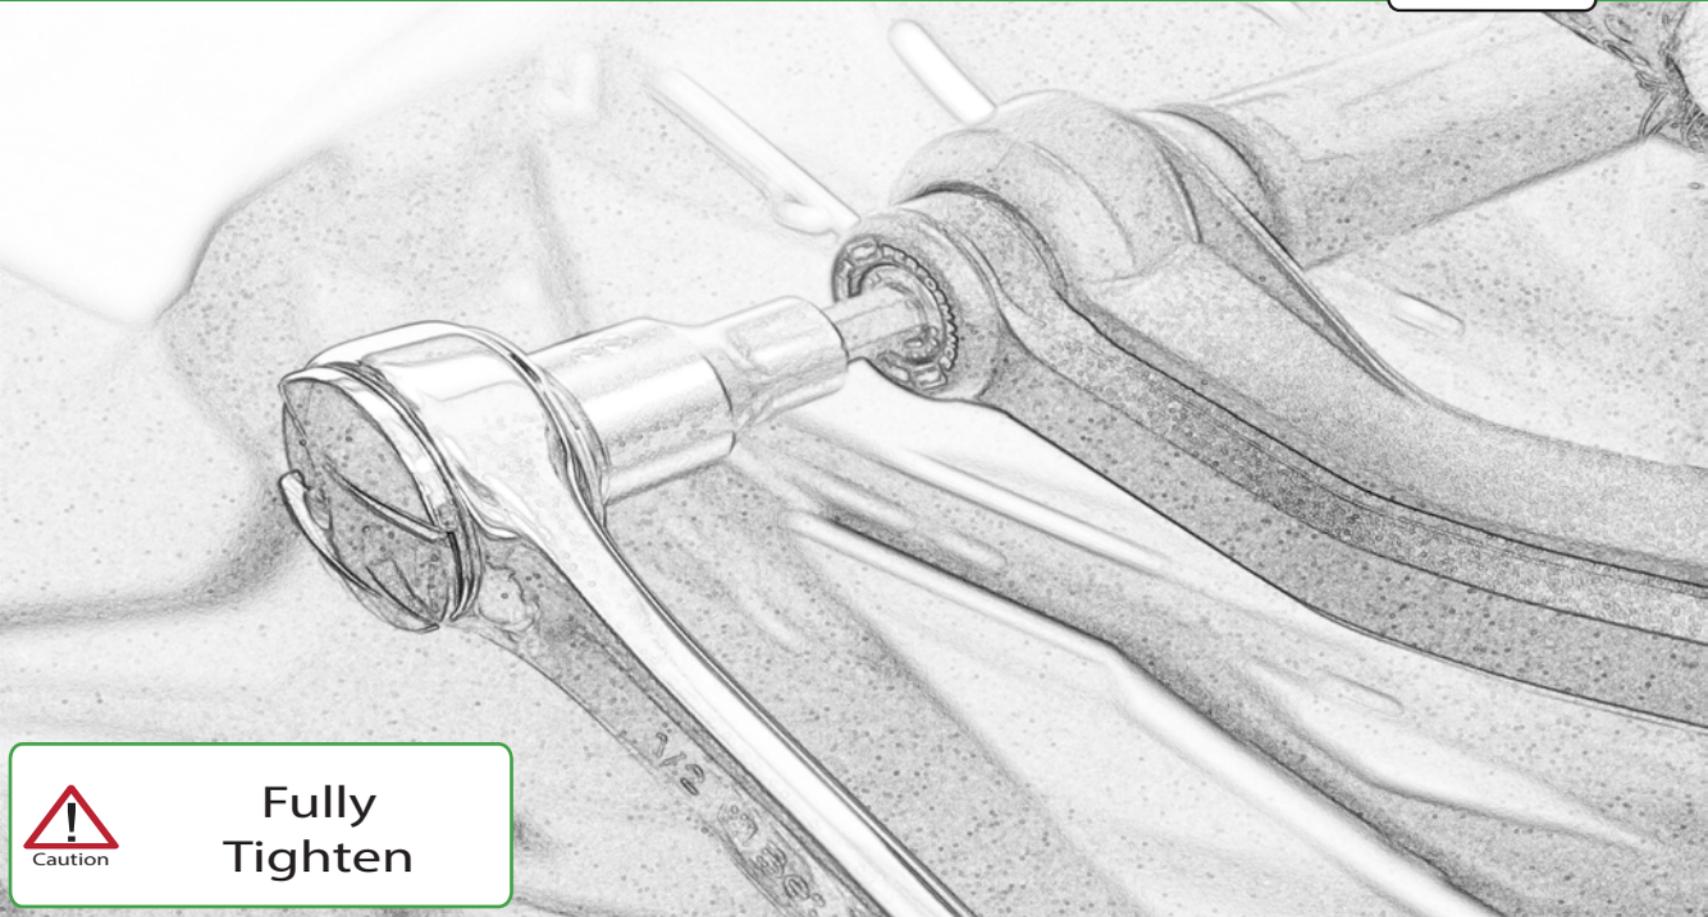

Fully  
Tighten

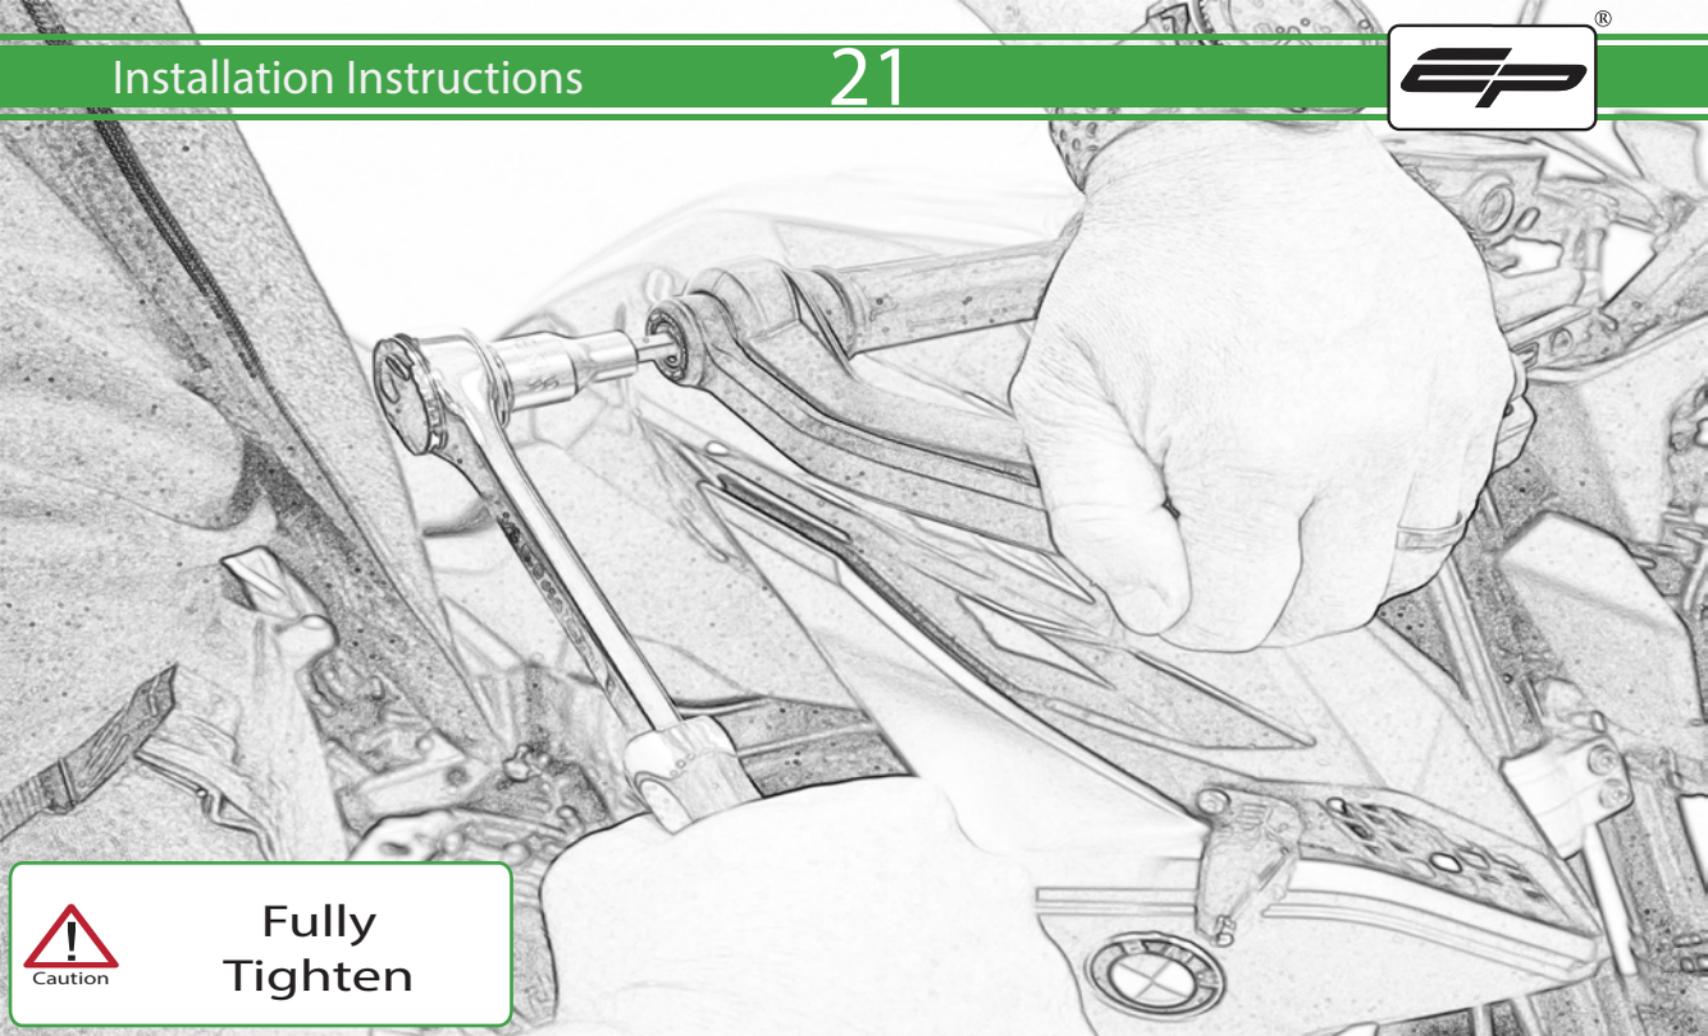


Fully  
Tighten




Caution

Fully  
Tighten

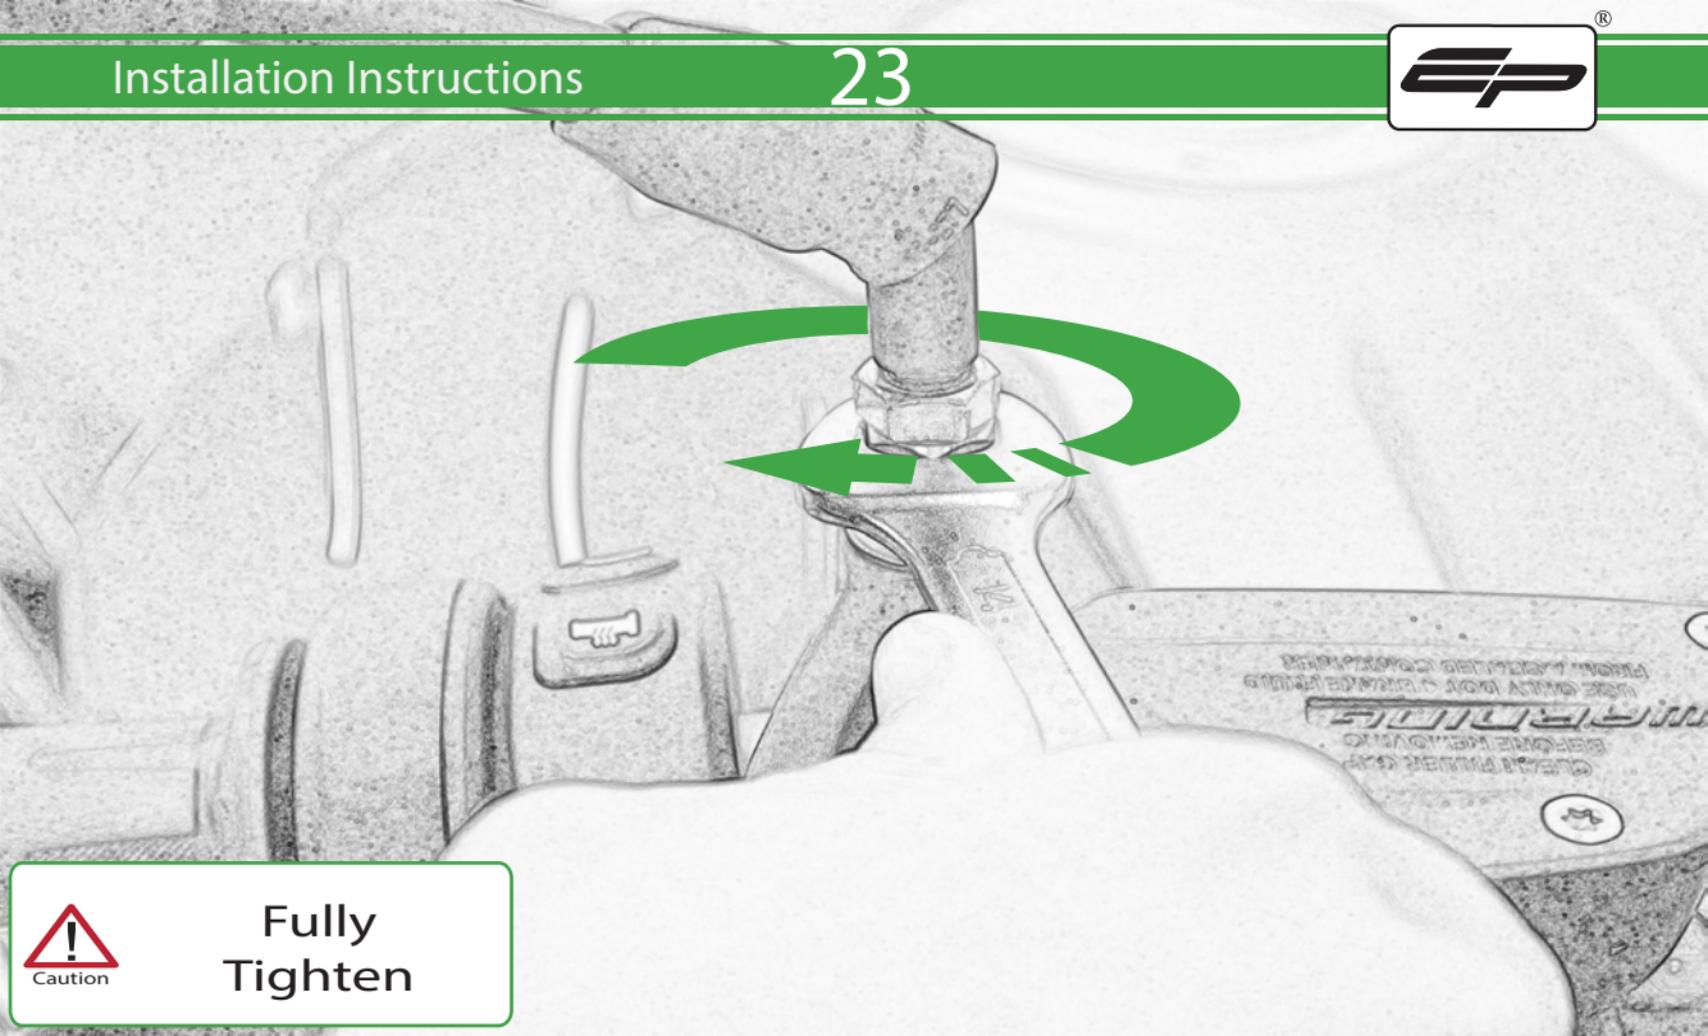

Fully  
Tighten

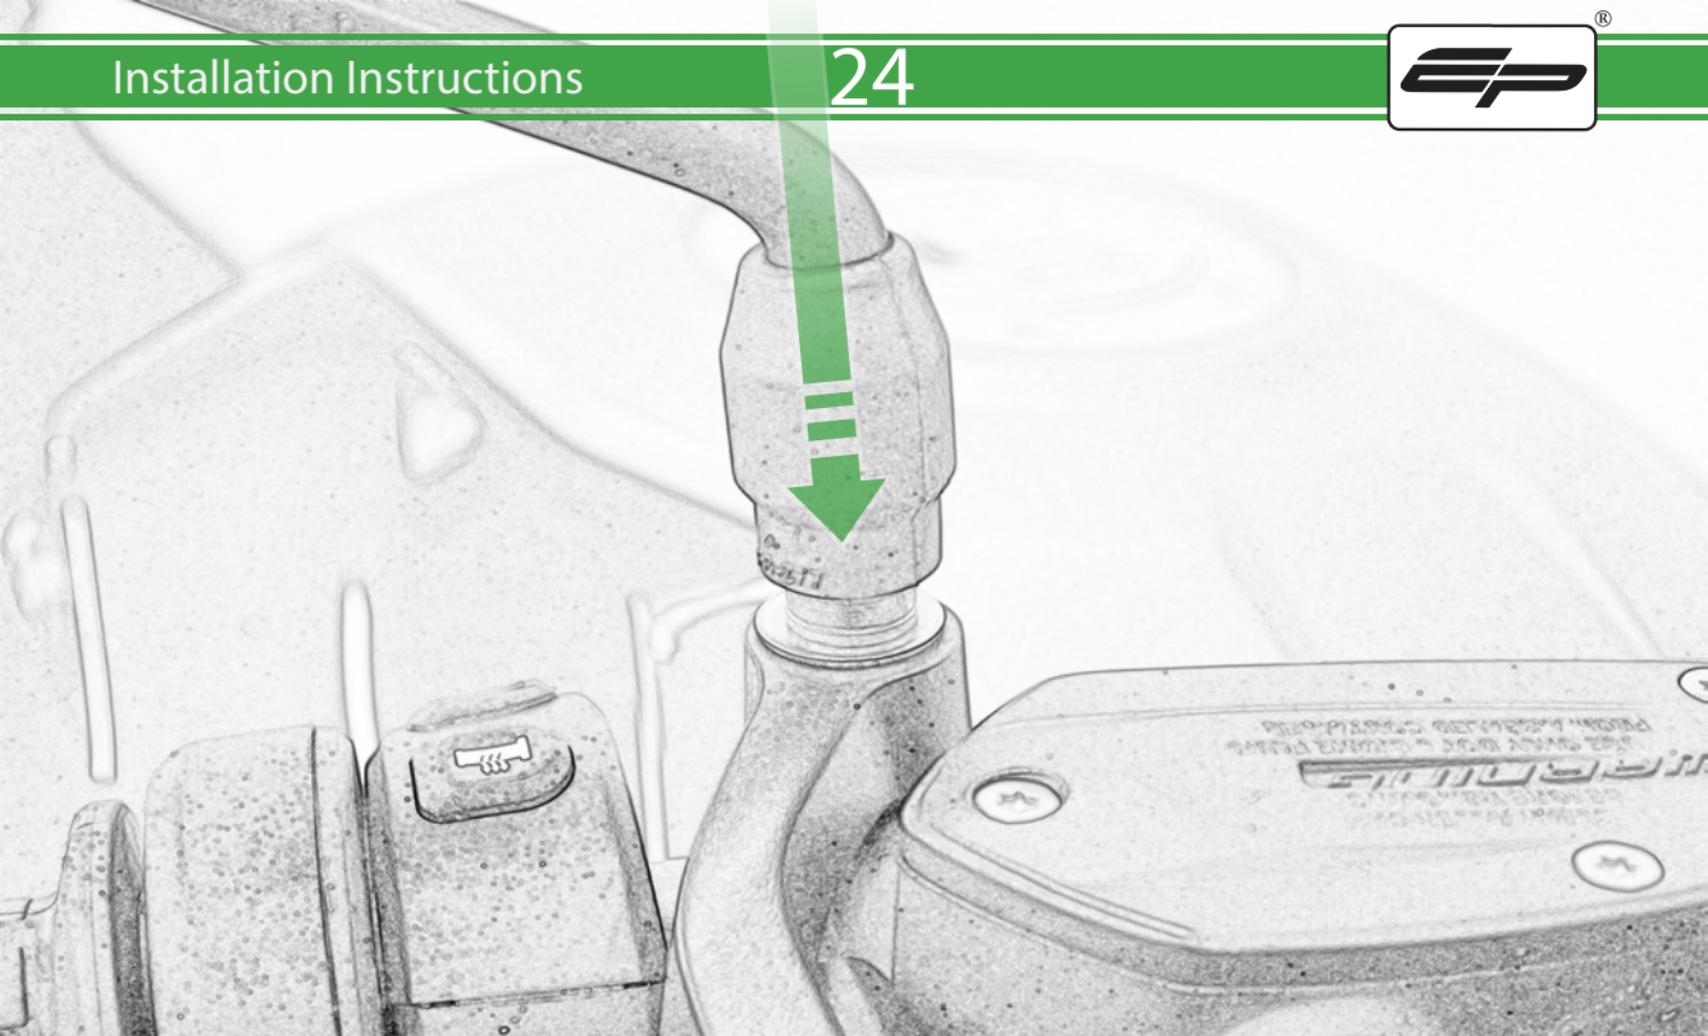



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)