



**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)

Honda CBR500R Garmin Satnav Mount  
Installation Instruction




- Ⓐ 1 x Main Plate
- Ⓑ 1 x Pivot Plate
- Ⓒ 1 x Sub Mounting Bracket
- Ⓓ 2 x M5 x 8mm Black Button Head Bolts
- Ⓔ 2 x Locking Washer
- Ⓕ 2 x M5 Black Washer
- Ⓖ 2 x M5 x 12 Caphead Bolt
- Ⓗ 4 x M4 x 10mm Black Button Head Bolts

EVOTECH<sup>®</sup>  
P E R F O R M A N C E

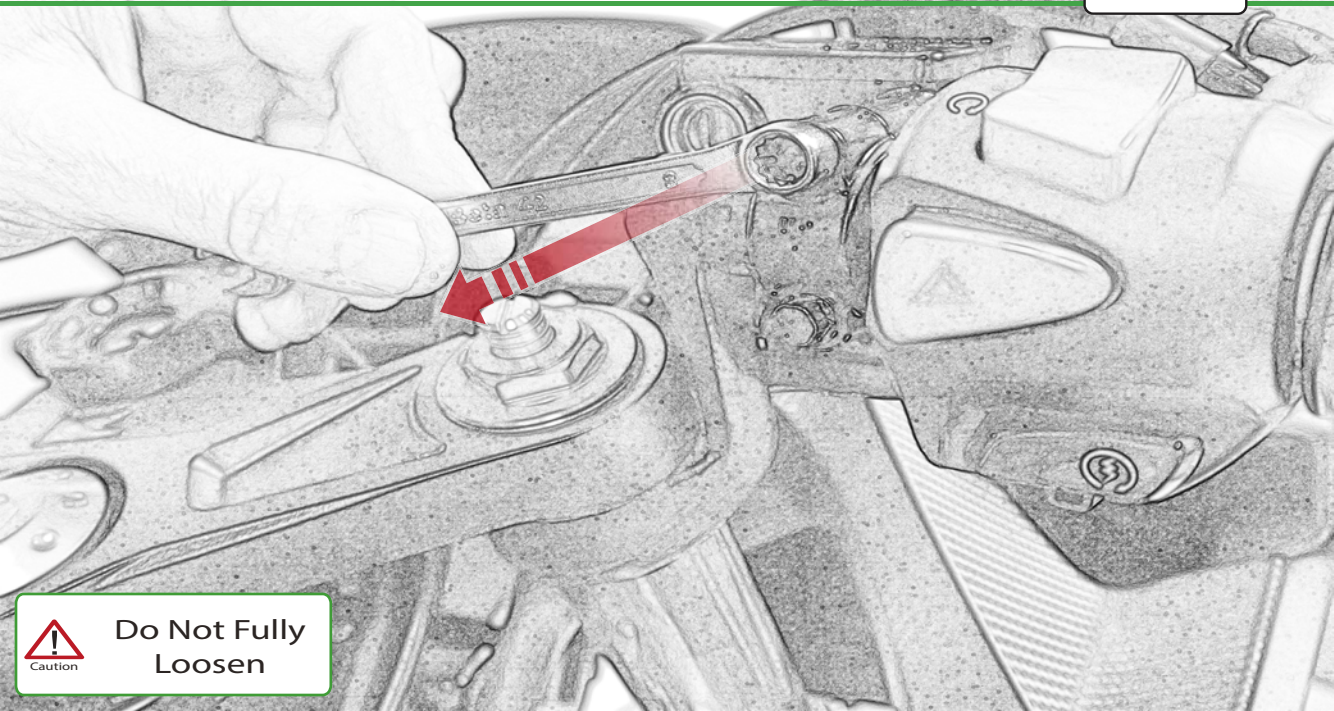

Caution


Do Not Fully  
Loosen

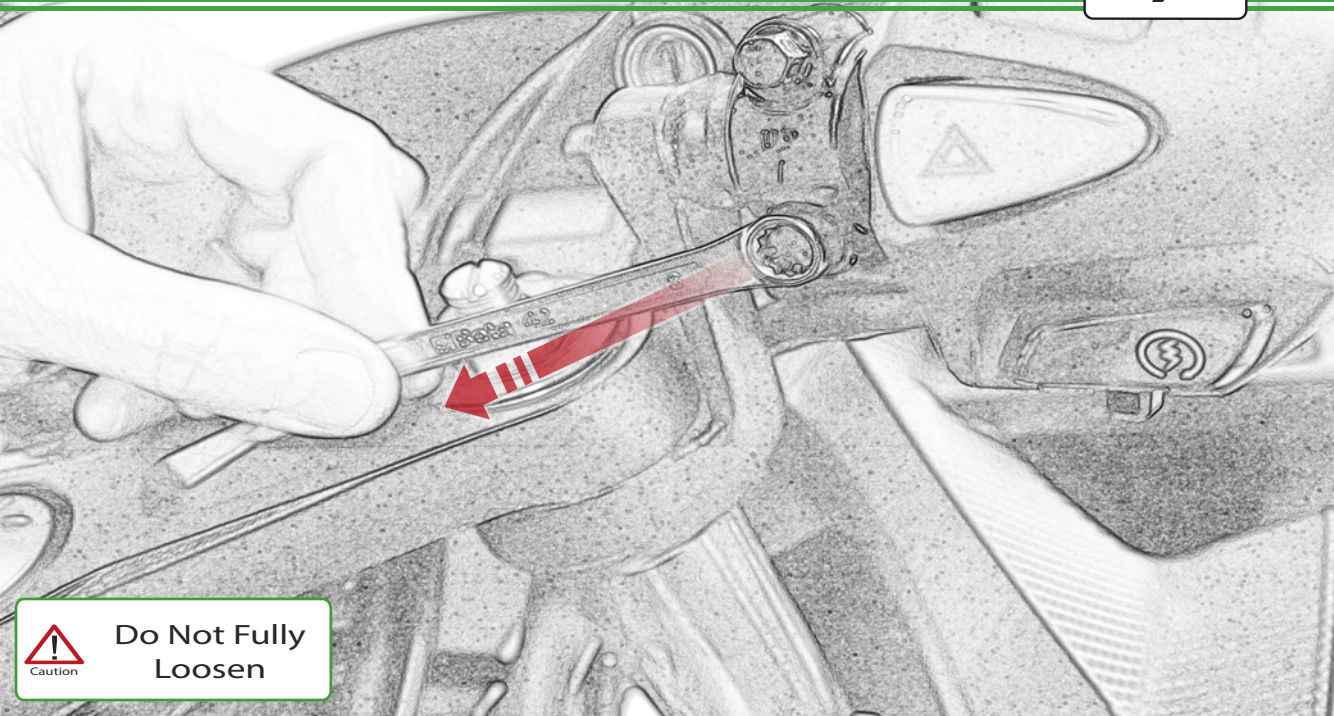



Caution

Do Not Fully  
Loosen



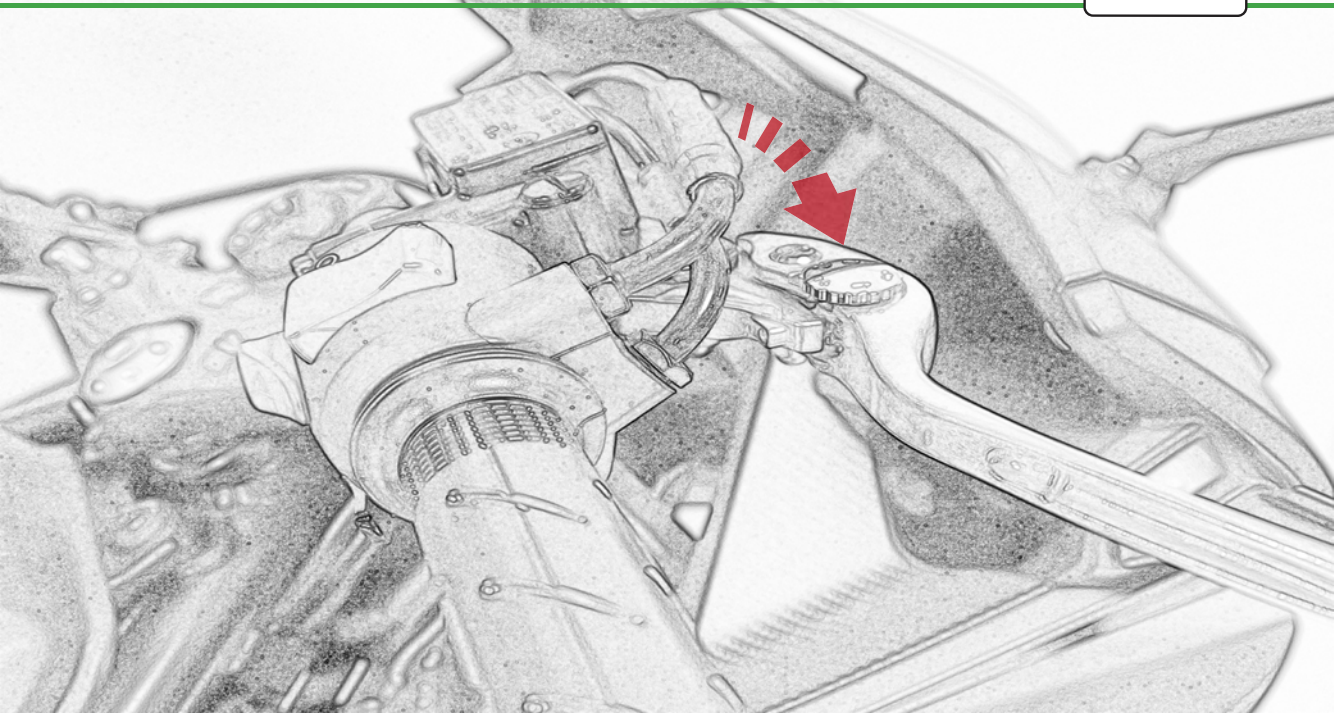

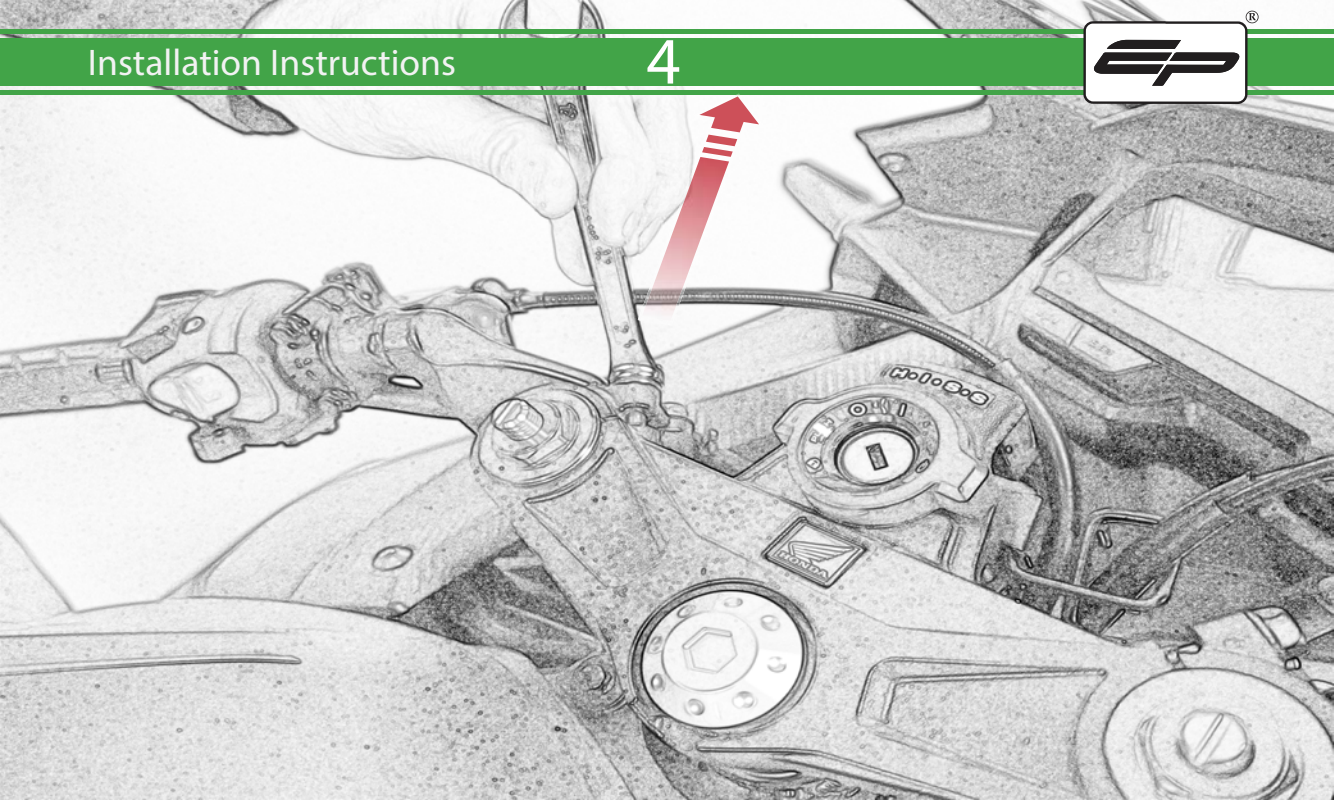

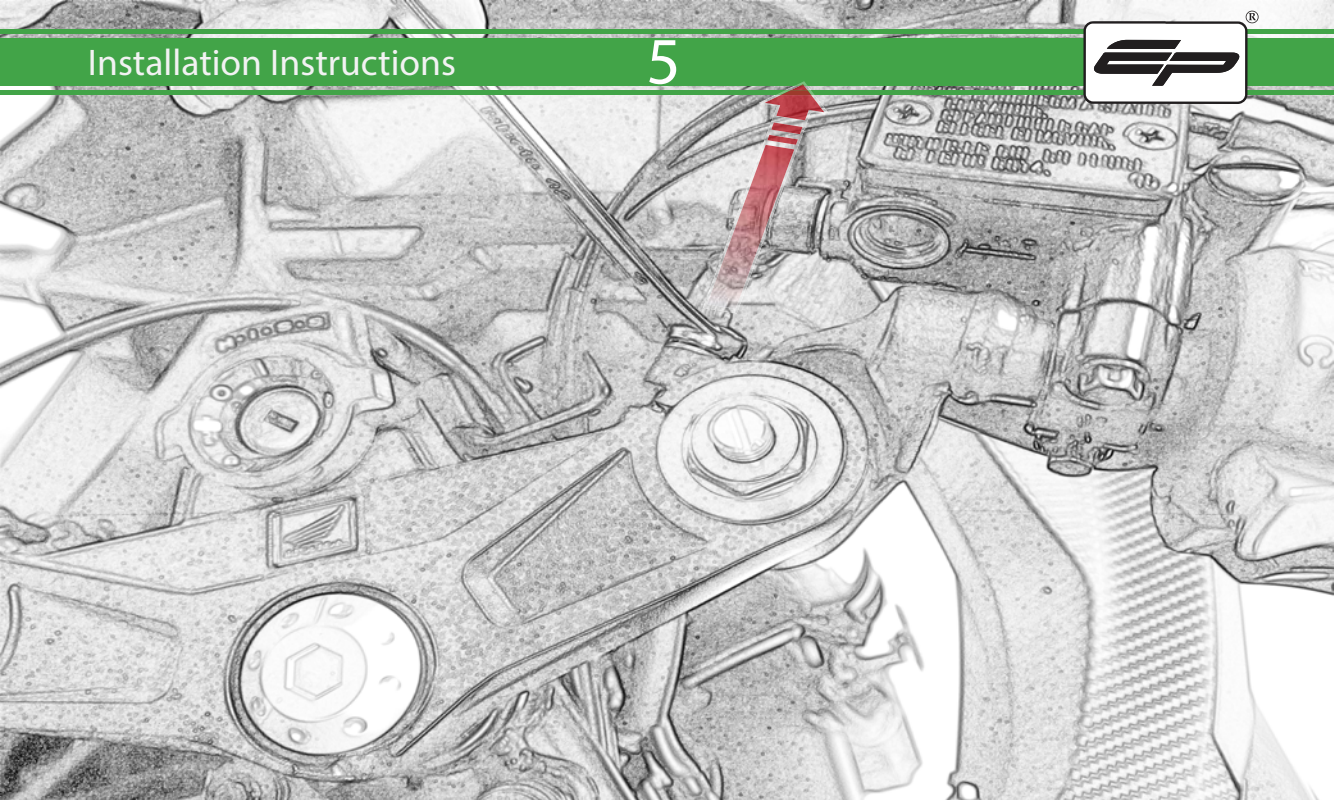






# Installation Instructions




5

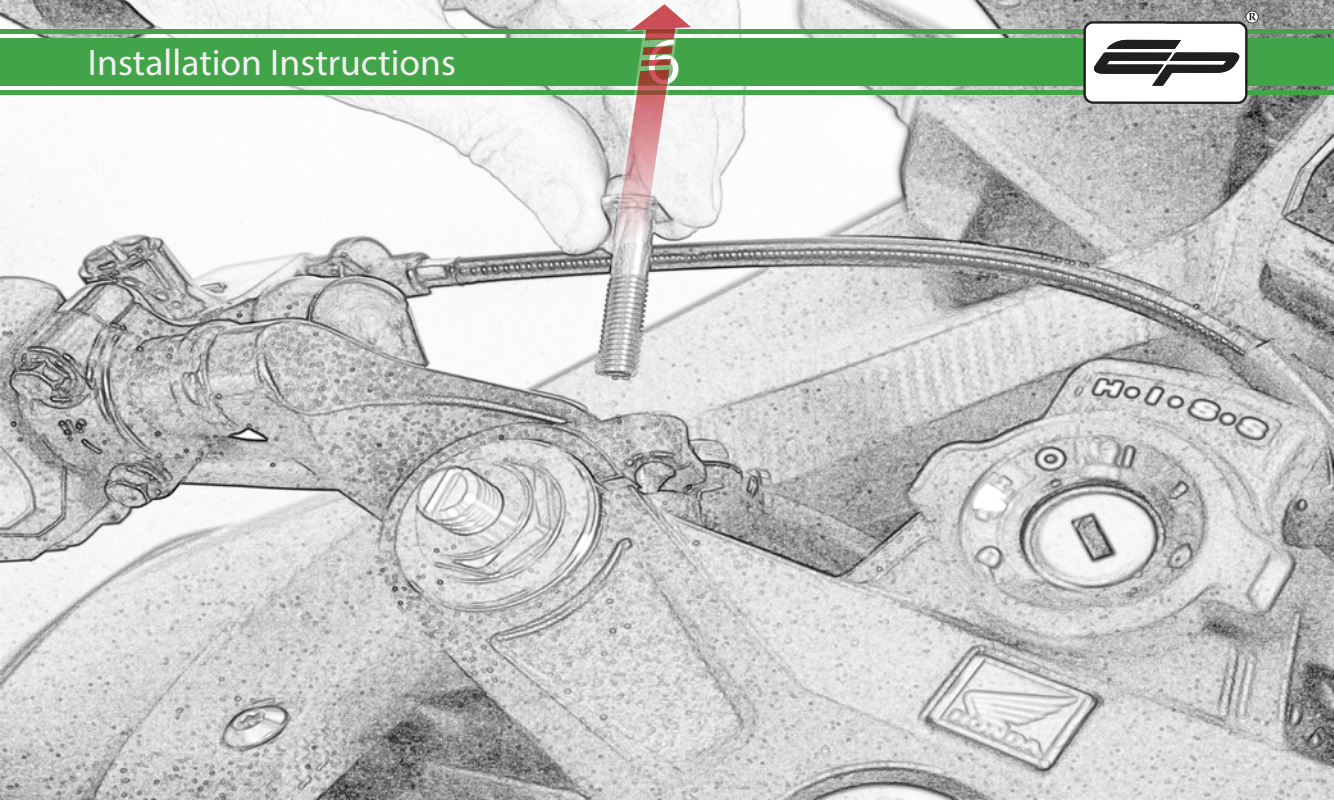


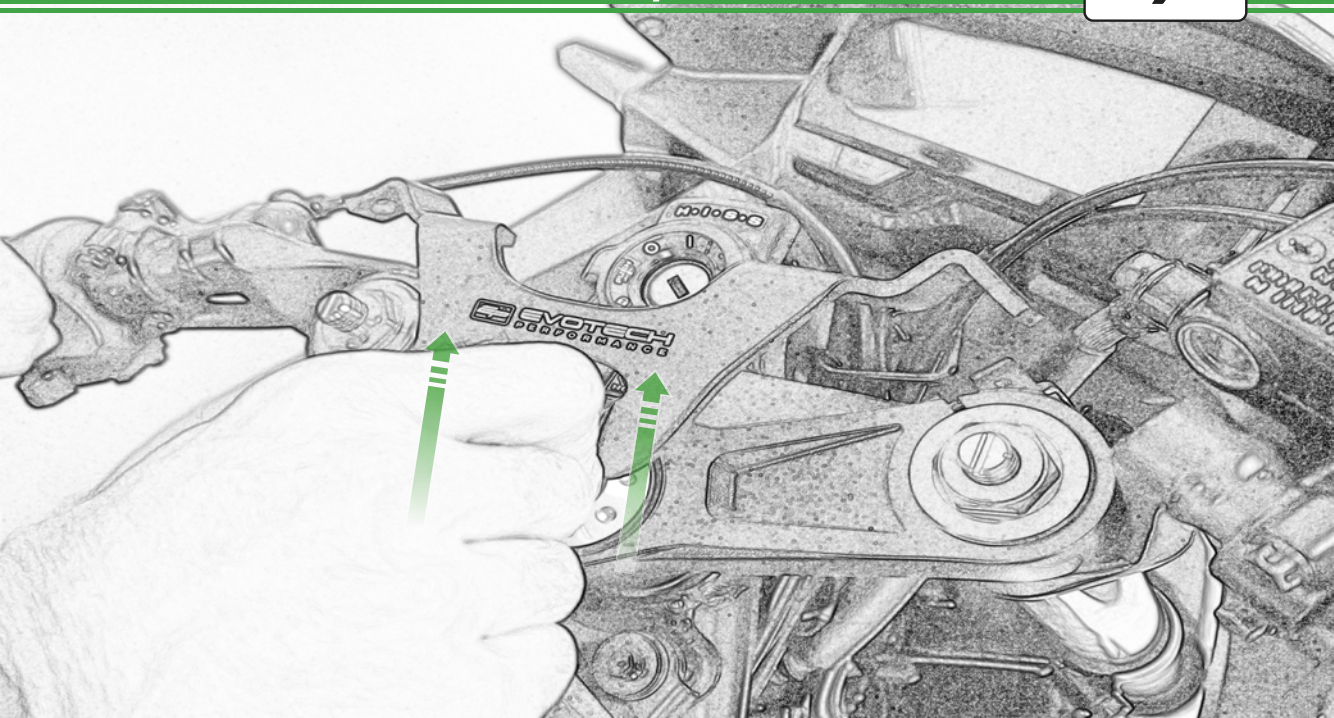

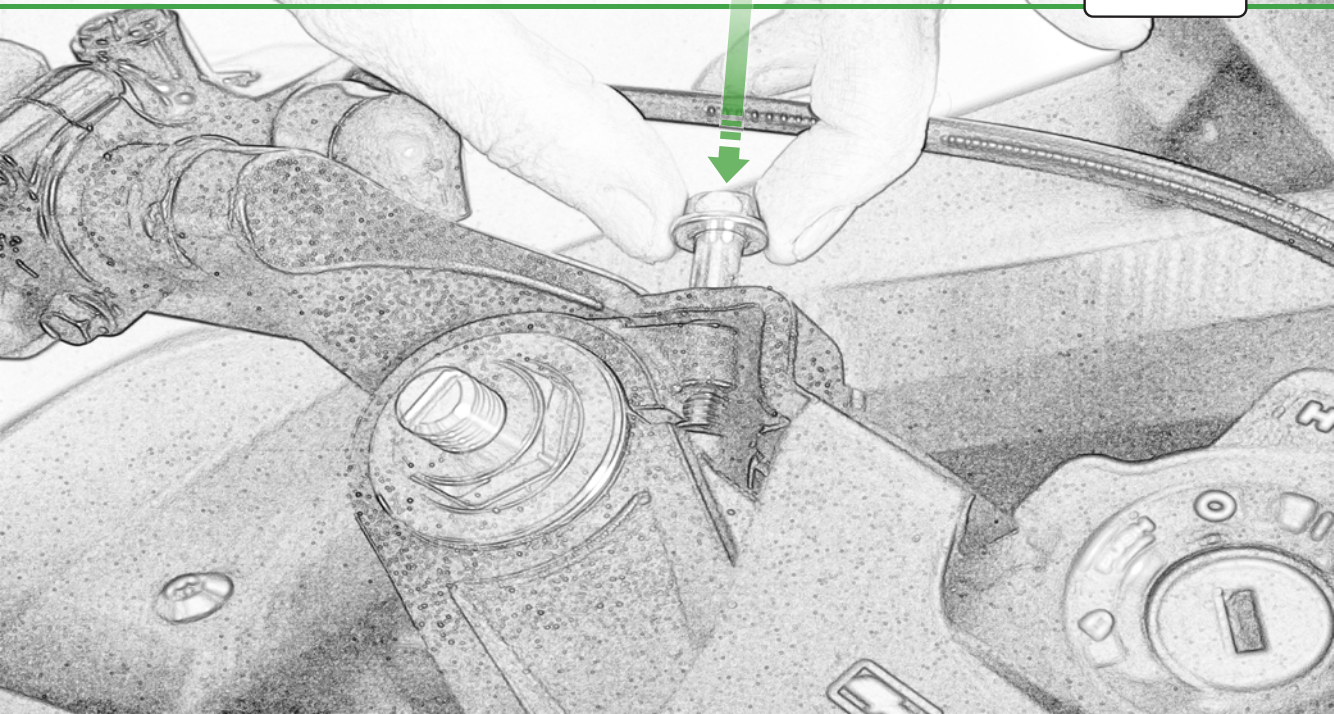



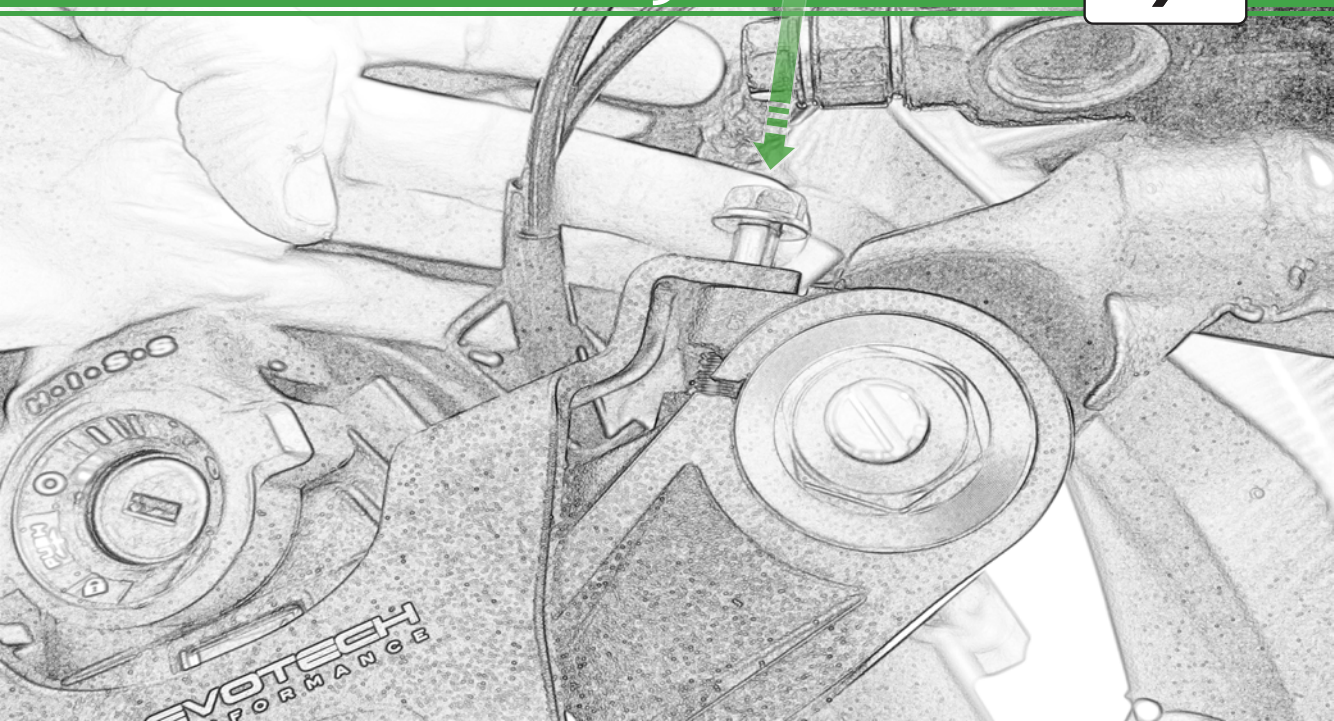


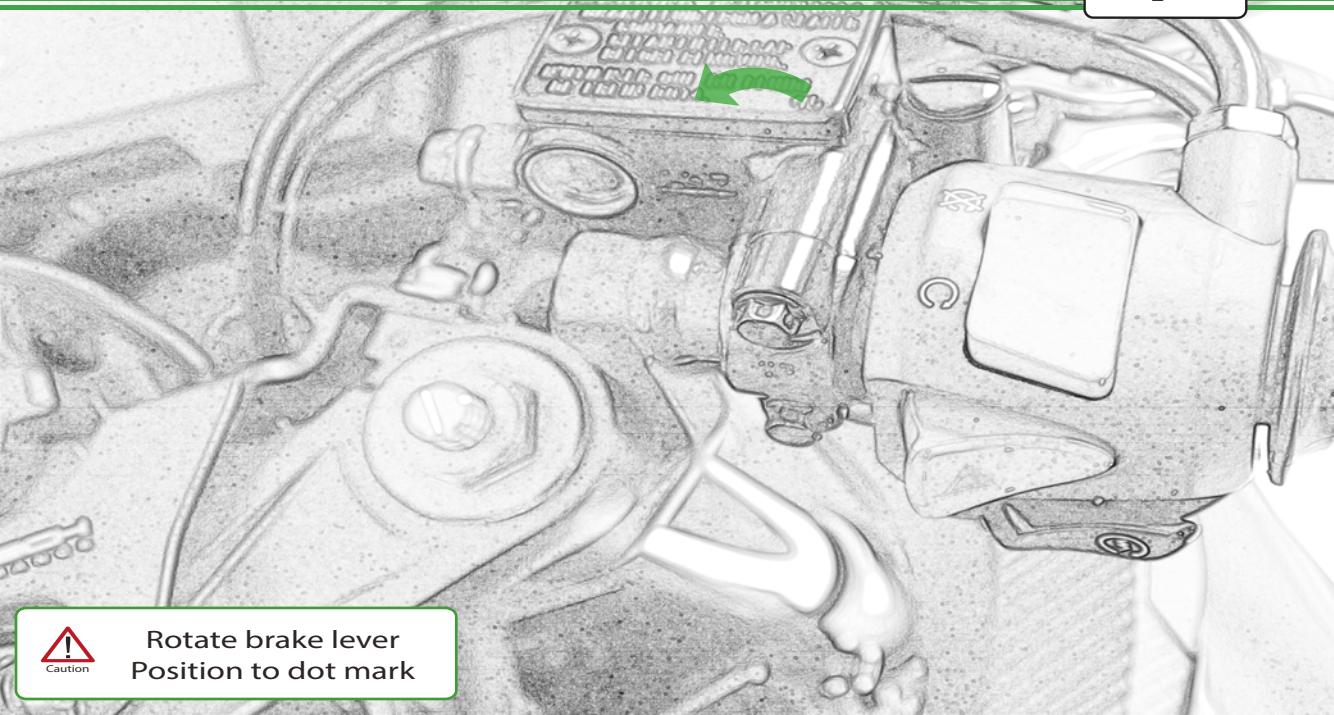


Caution

Rotate brake lever  
Position to dot mark



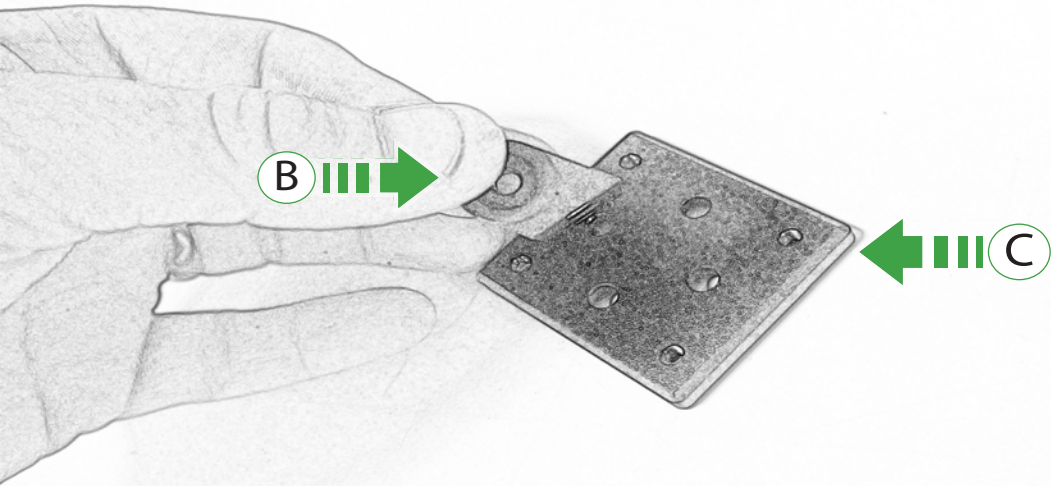





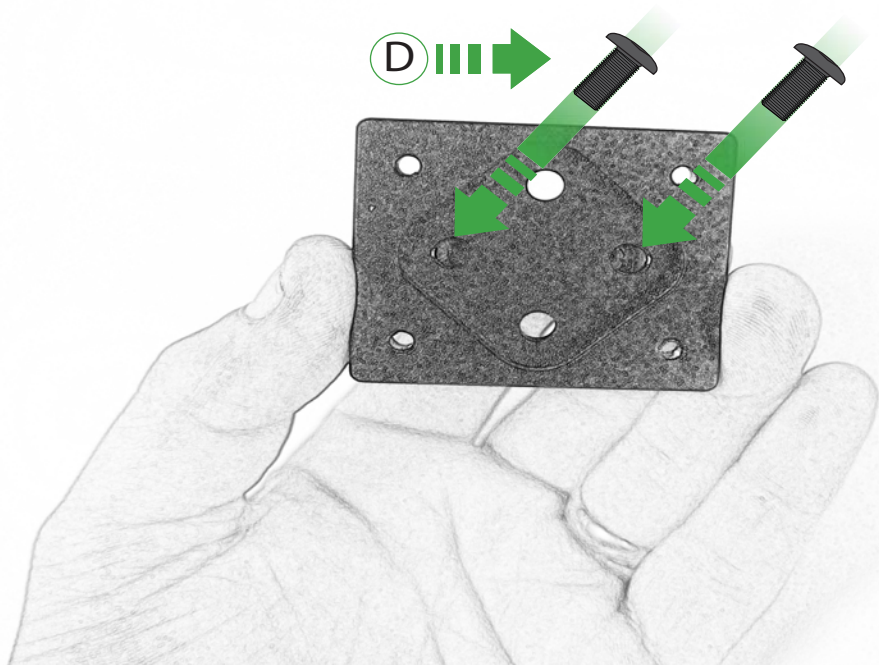








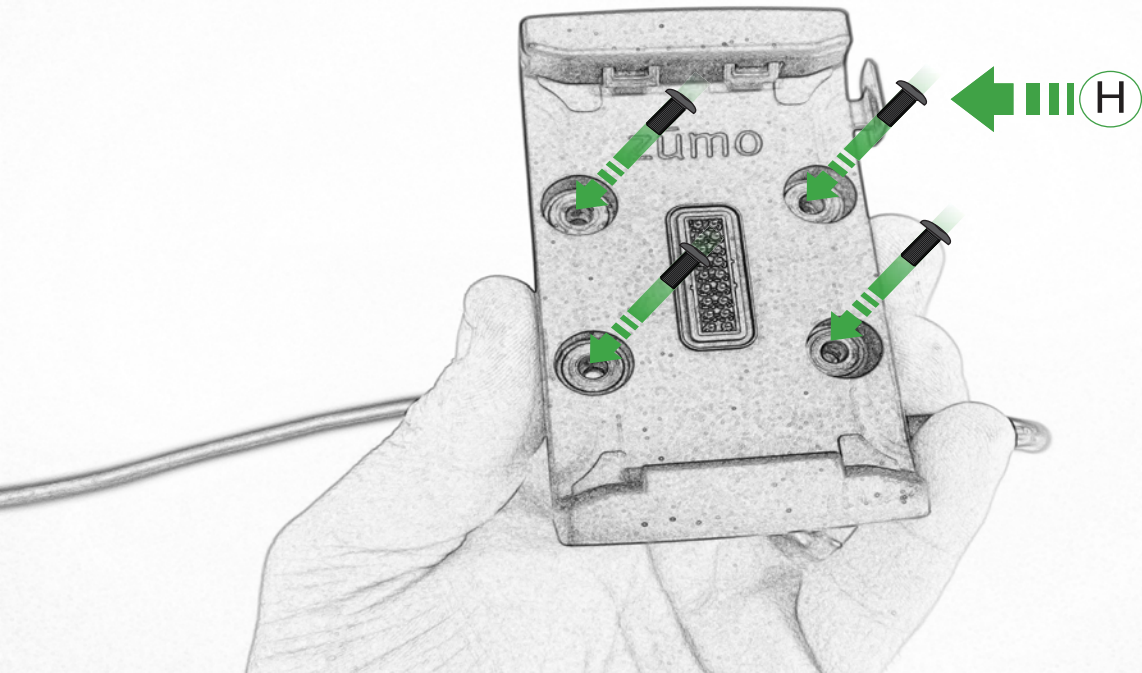

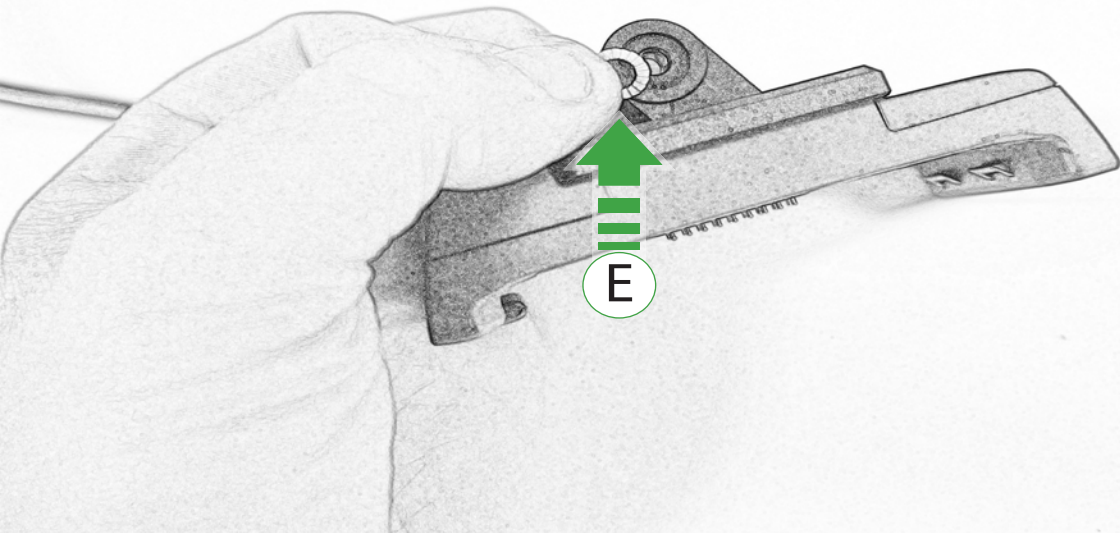

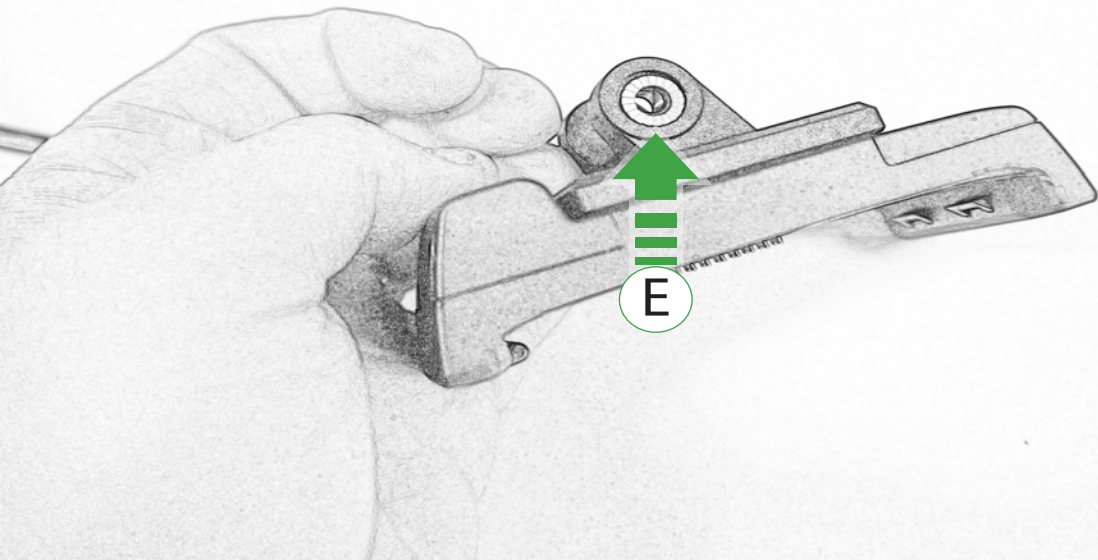

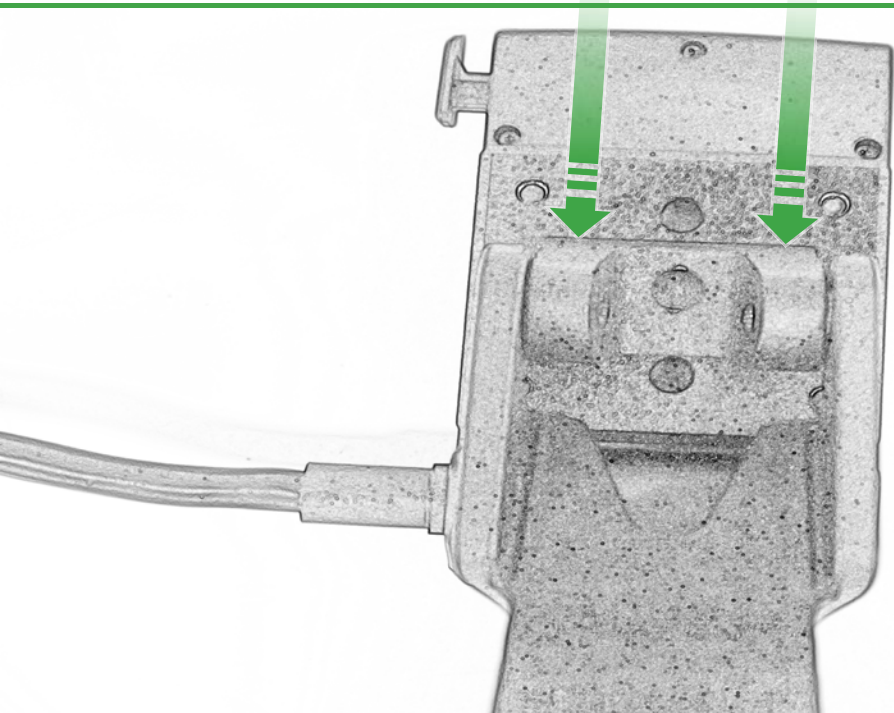

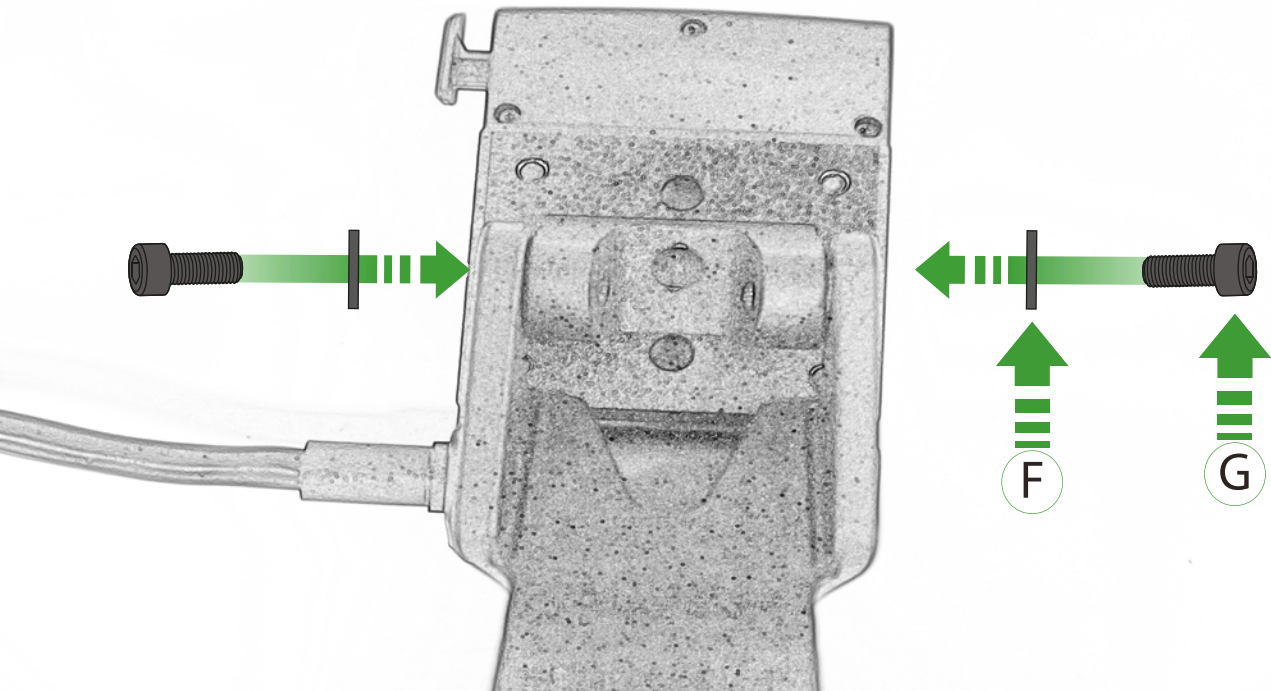



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

P E R F O R M A N C E





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)