



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


MV Agusta Brutale 800 Garmin Satnav Mount
Installation Instruction





- Ⓐ 1 x Main Plate
- Ⓑ 1 x Pivot Plate
- Ⓒ 1 x Sub Mounting Bracket
- Ⓓ 2 x M5 x 8mm Black Button Head Bolts
- Ⓔ 2 x Locking Washer
- Ⓕ 2 x M5 Black Washer
- Ⓖ 2 x M5 x 12 Caphead Bolt
- Ⓗ 4 x M4 x 10mm Black Button Head Bolts
- ⒶⒶ 1 x Rubber Pad
- ⒷⒷ 2 x M5 x 45mm Black Button Head Bolts
- ⒸⒸ 2 x M5 x 25mm Black Button Head Bolts
- ⒹⒹ 4 x Spacers

EVOTECH[®]
P E R F O R M A N C E

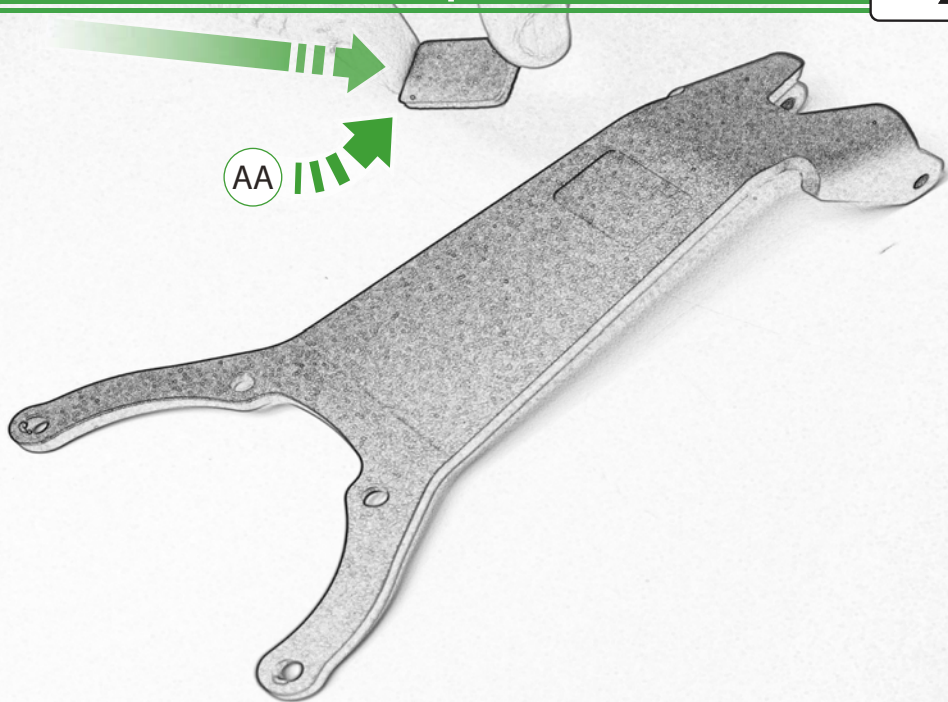


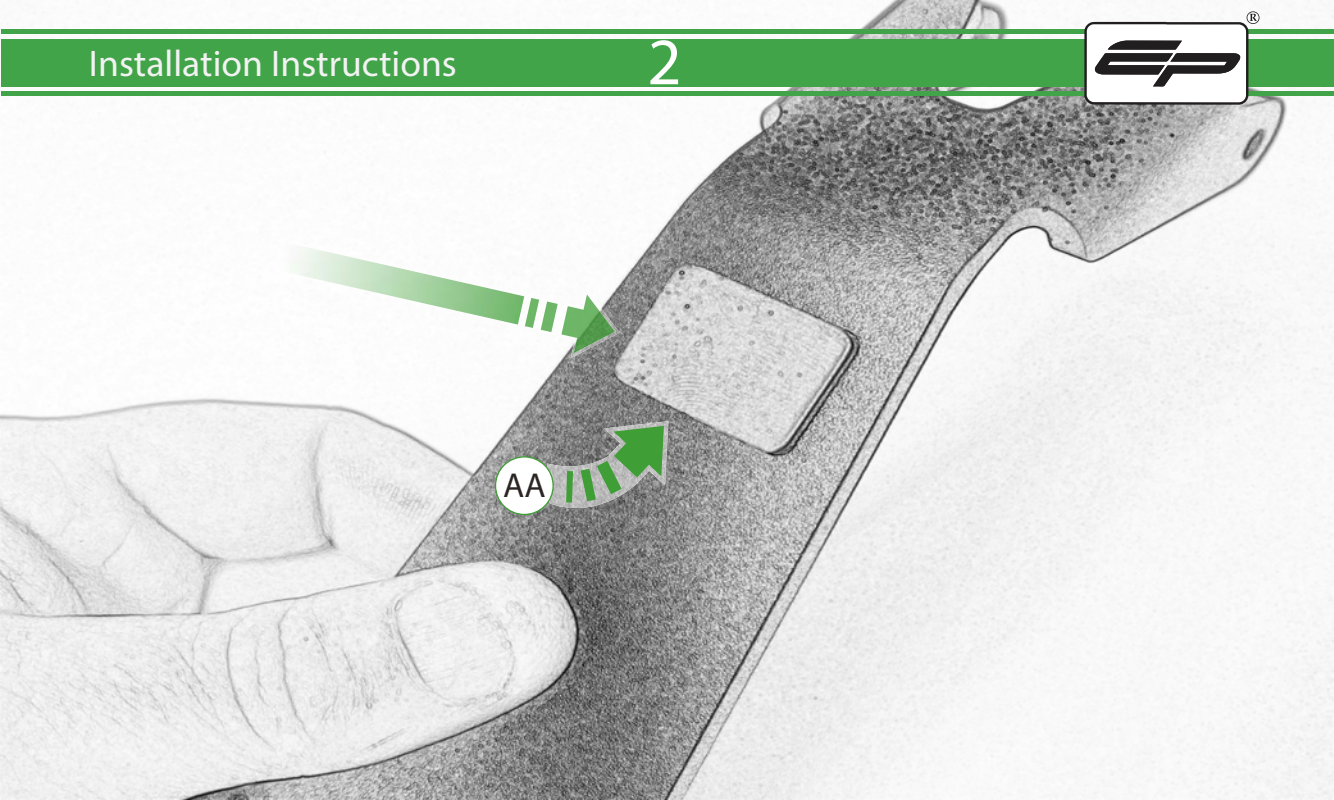


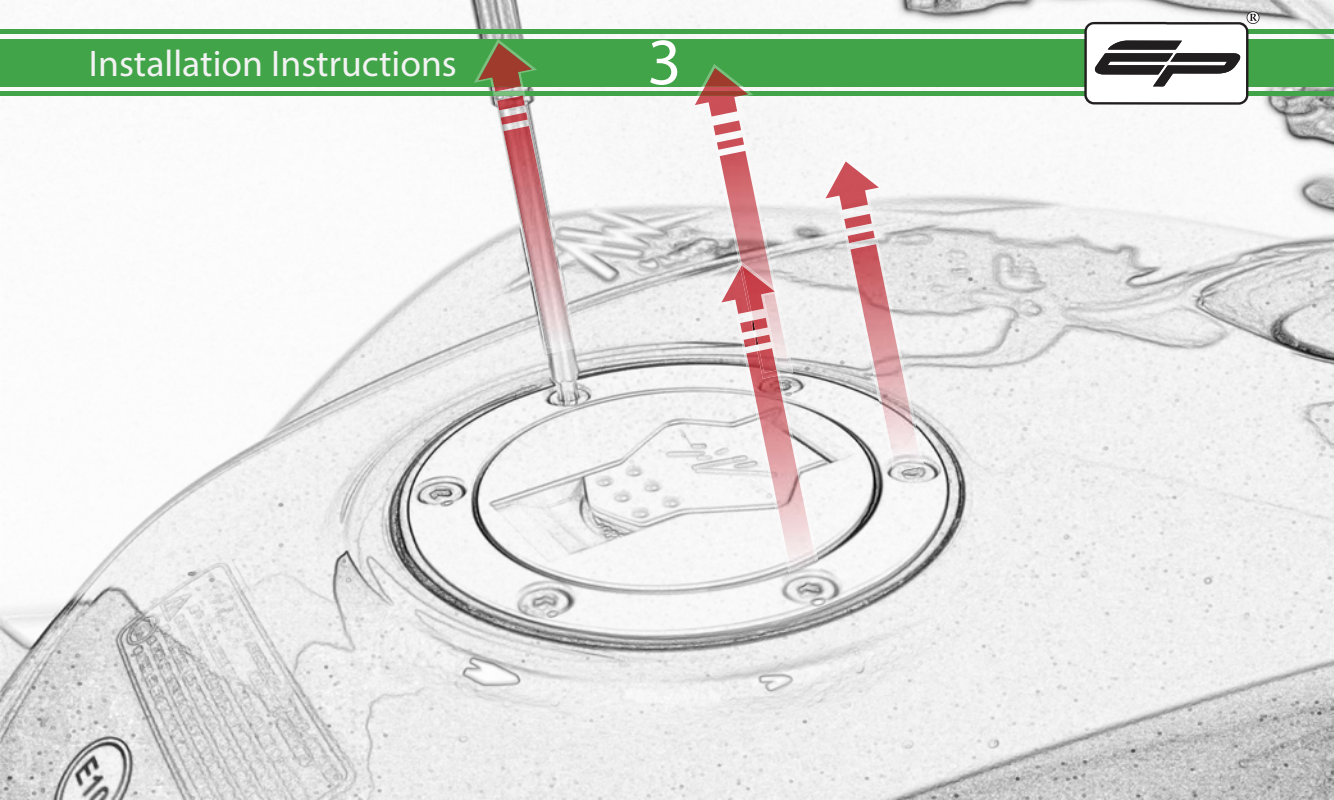

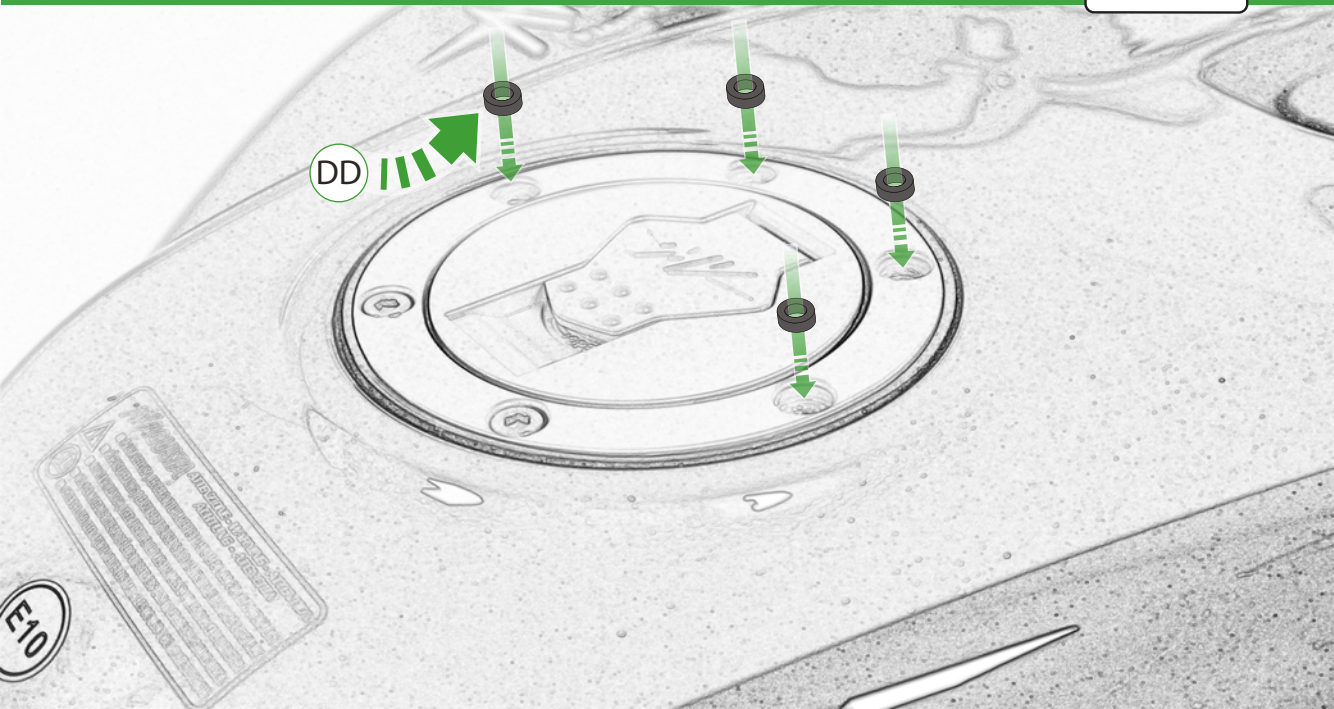



DD

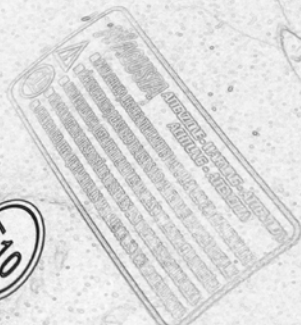


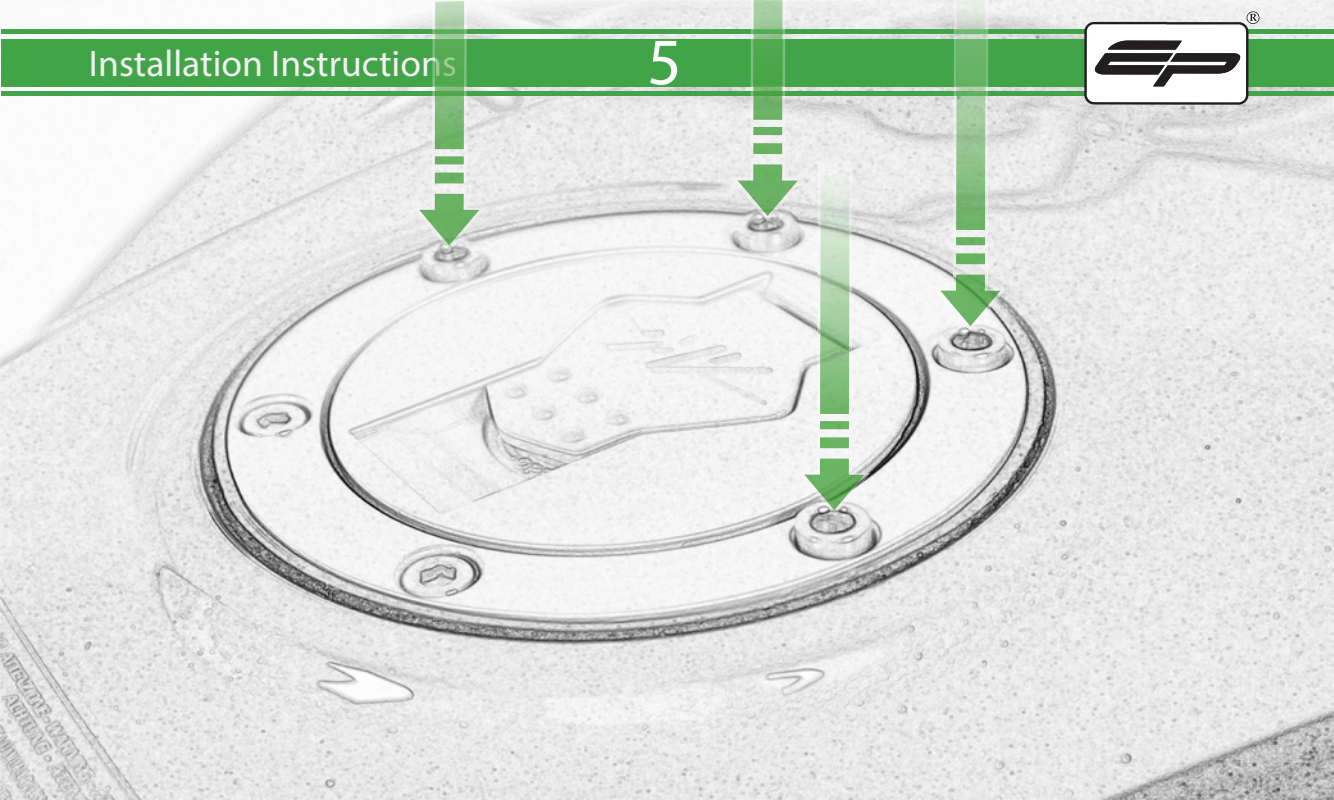



FRONTIER-MADE
AQUILUS-GEN
COMMERCIAL

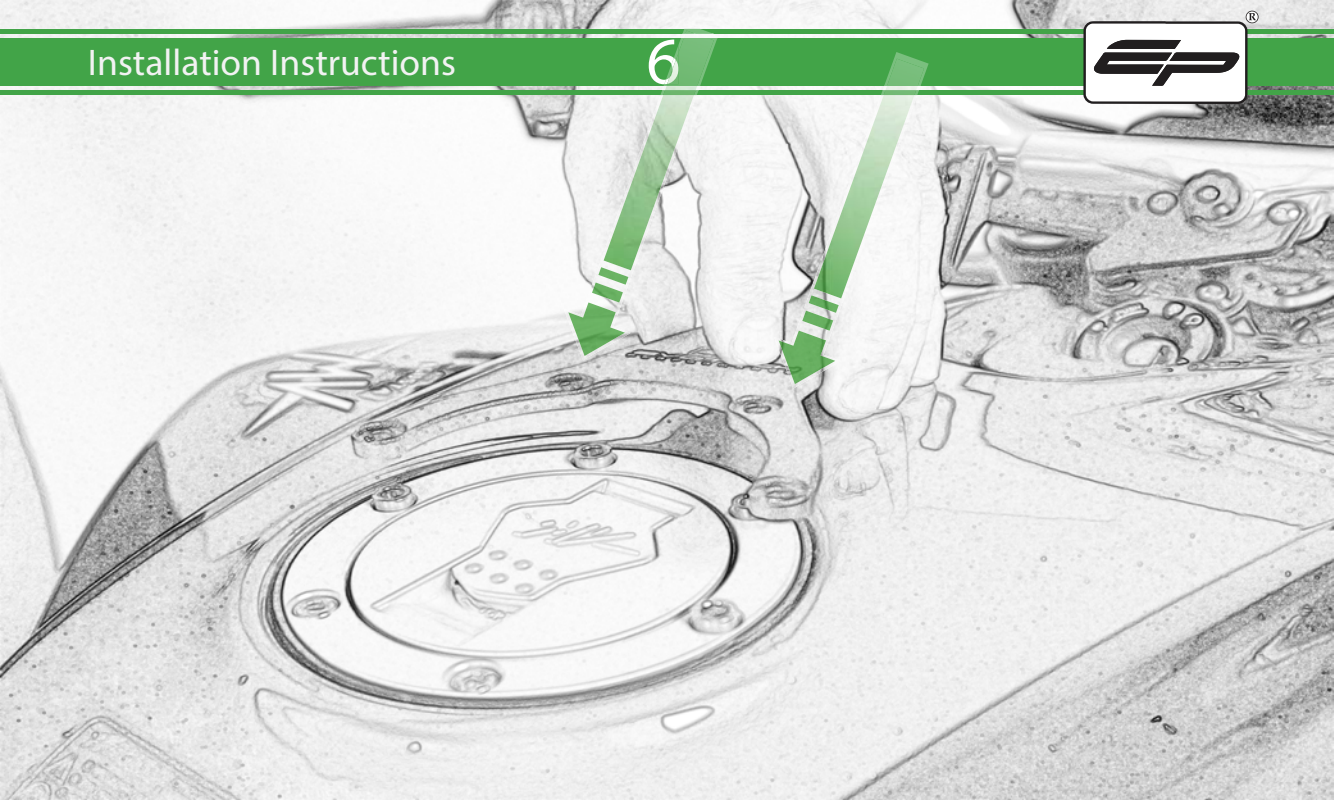


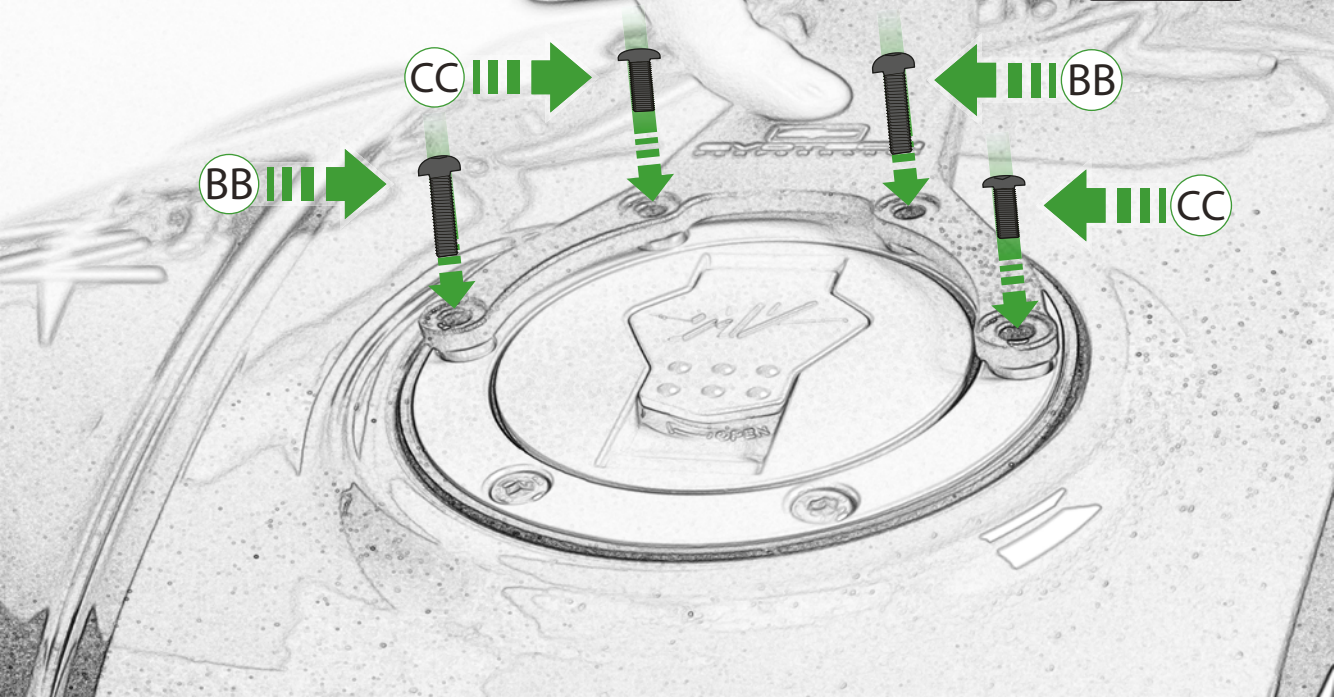


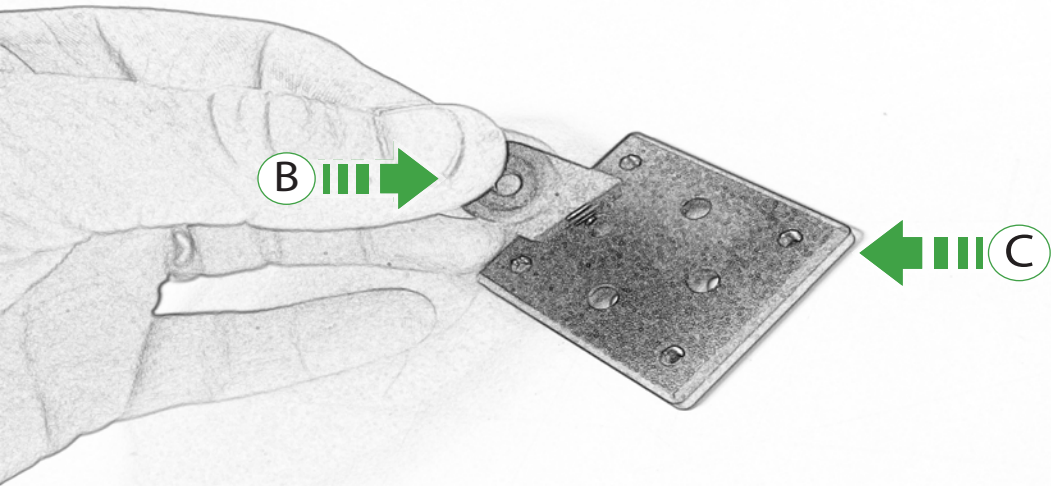


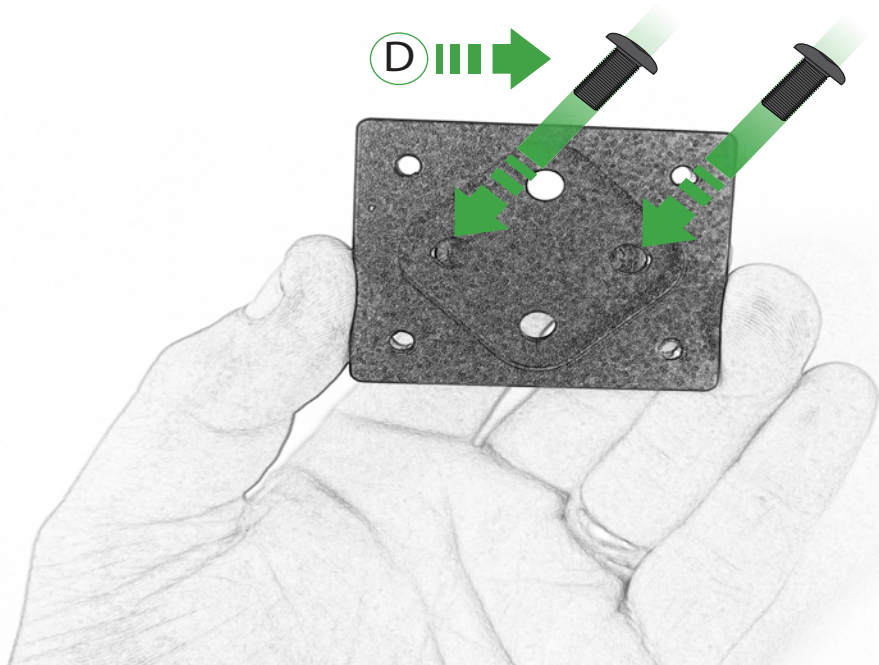


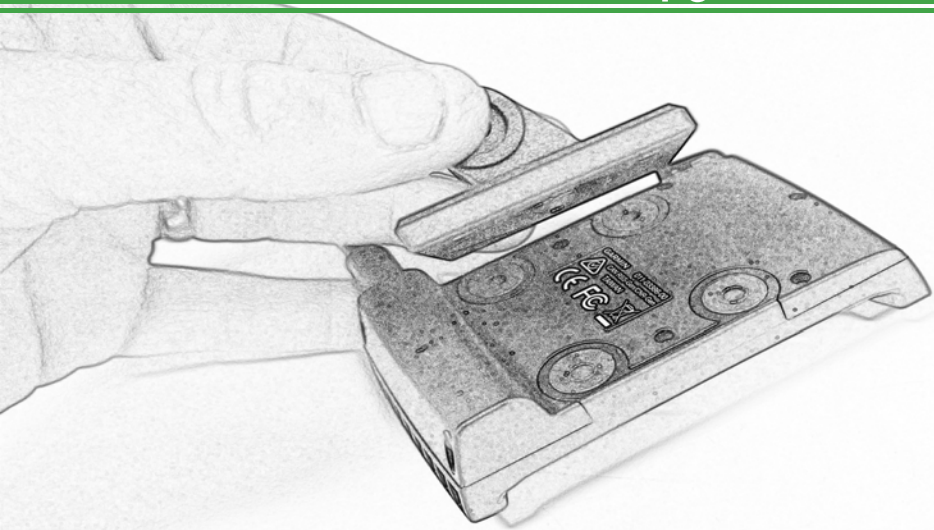


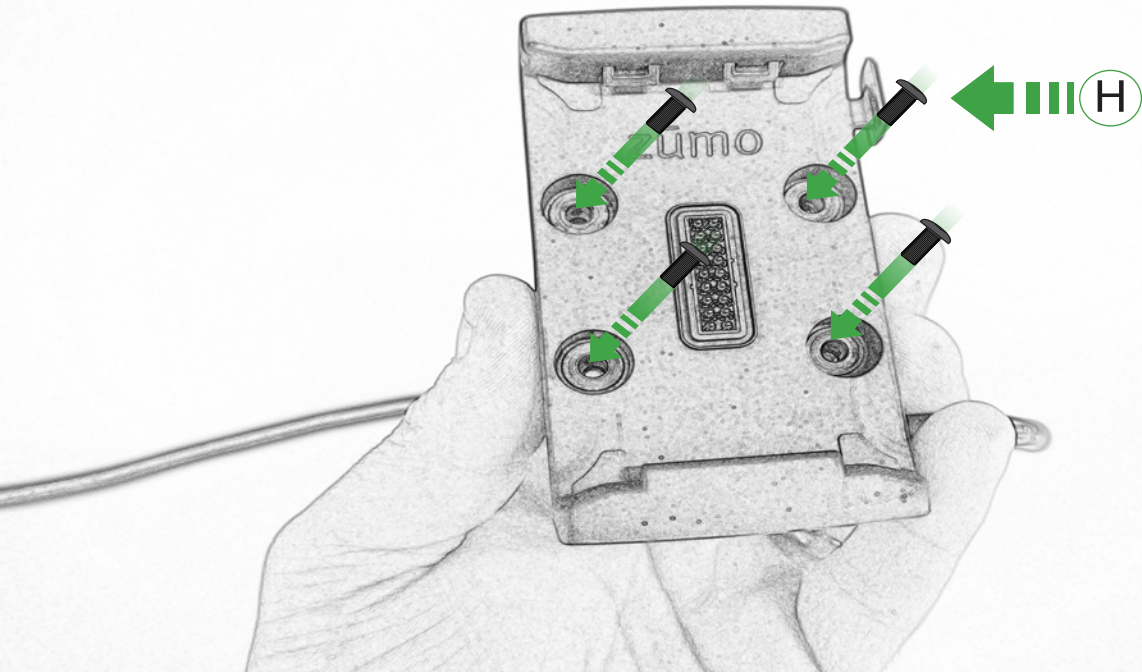

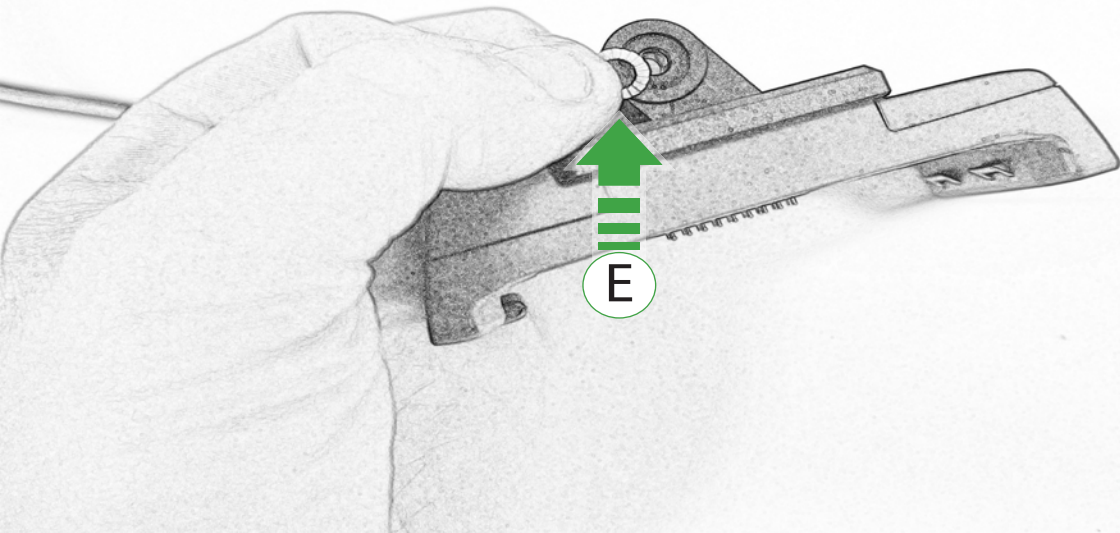

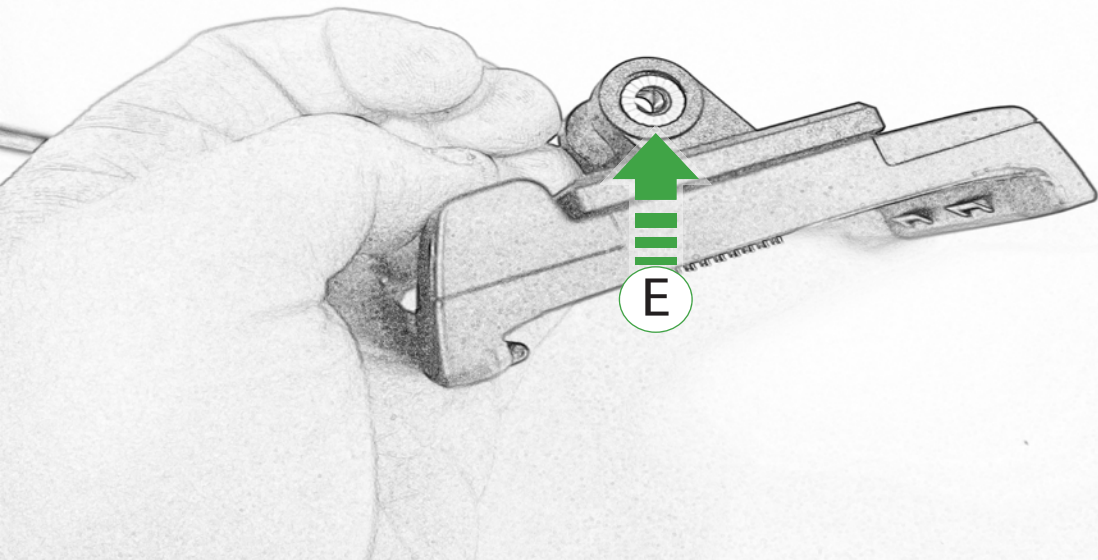

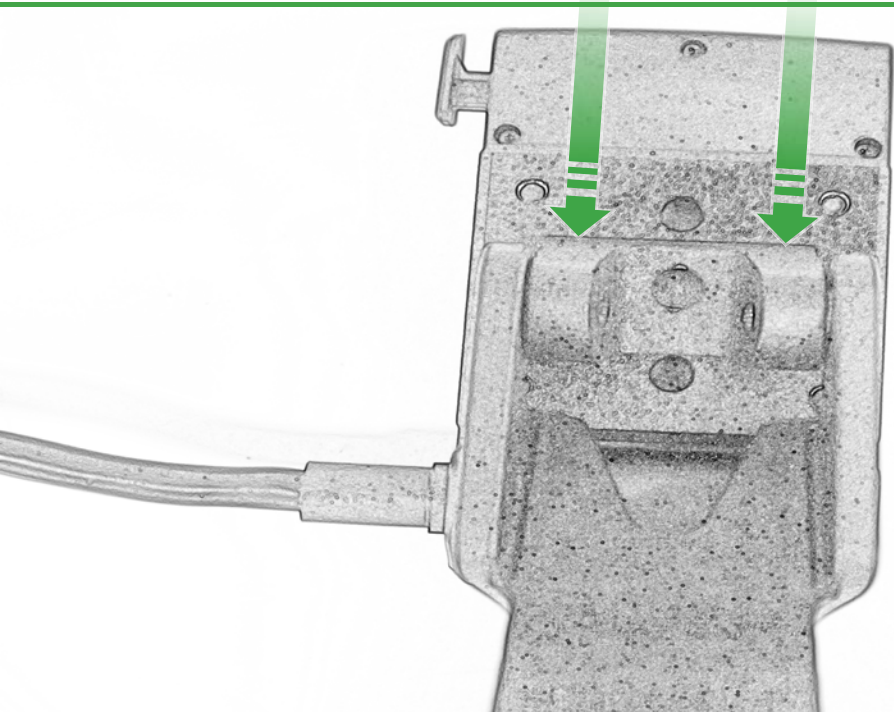

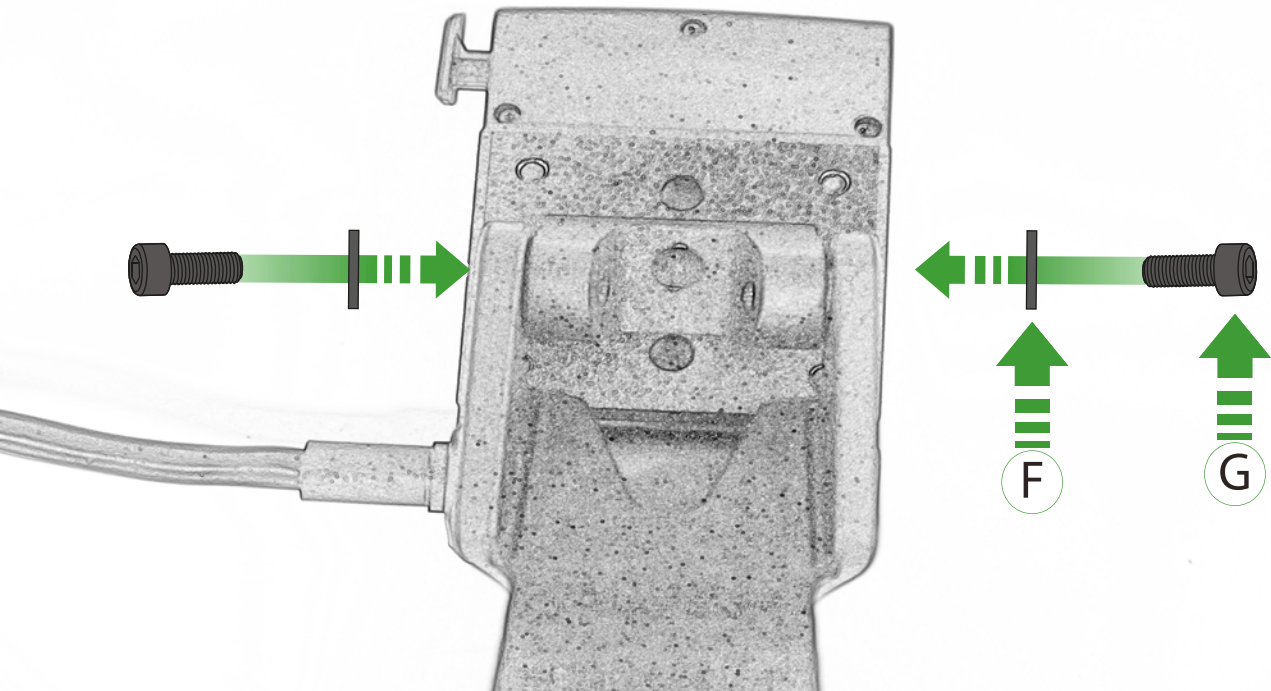



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

P E R F O R M A N C E



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com