

www.evotech-performance.com
Yamaha Tracer 9
Quad Lock Sat Nav Mount

Installation Instructions





Kit Contents PRN014568-015834


- A 1 x Main Plate
- **B** 1 x Pivot Plate
- © 1 x Quad Lock Sub Bracket
- ① 1 x Quad Lock Mounting Bracket
- **(E)** 2 x M5 x 8mm Black Button Head Bolts
- F 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- H 2 x P-clips (No.3)
- 1 2 x P-clips (No.4)
- ① 2 x Lobe Screw
- (K) 2 x Locking Washer


- L 2 x M5 Black Washer
- M 2 x M4 x 5mm Black Button Head Bolts


- Sub Kit
- N 1 x M5 x 12 Caphead
- ① 1 x T-Clamp Bracket
- P 3 x M5 x 20 Flange Bolt

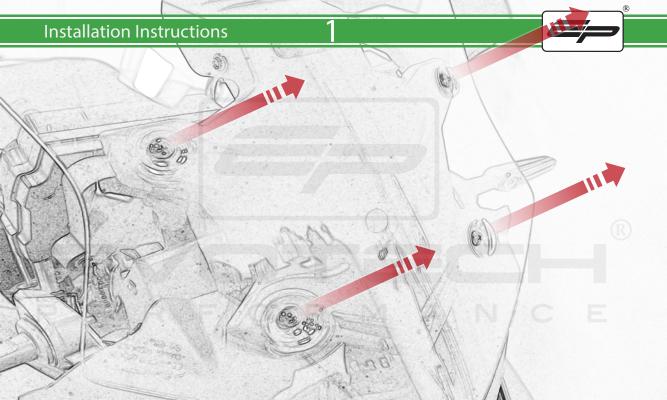


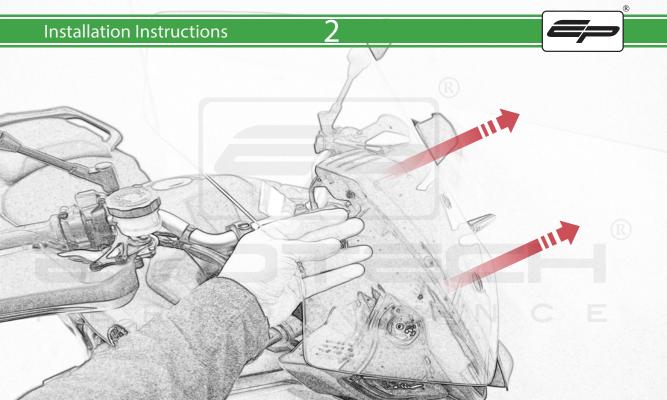


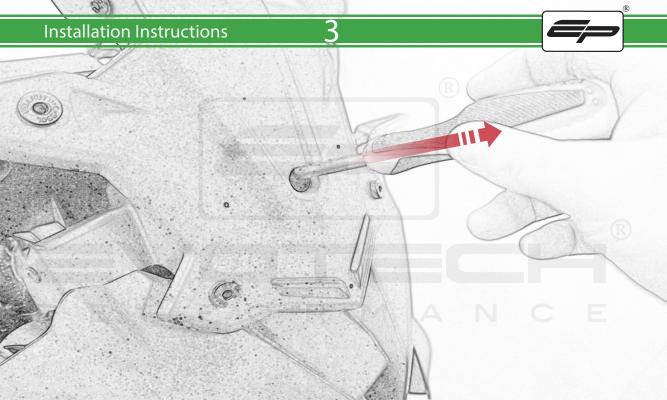


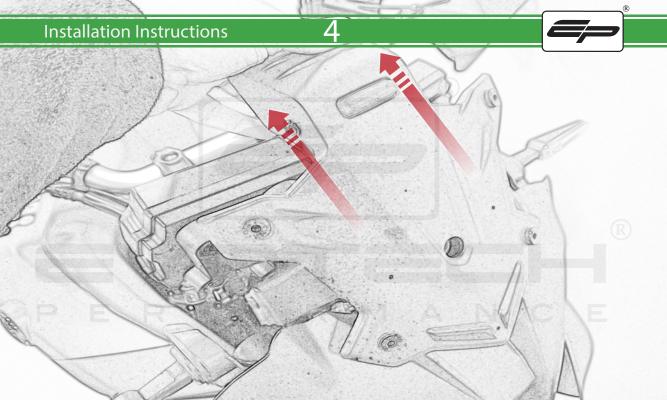

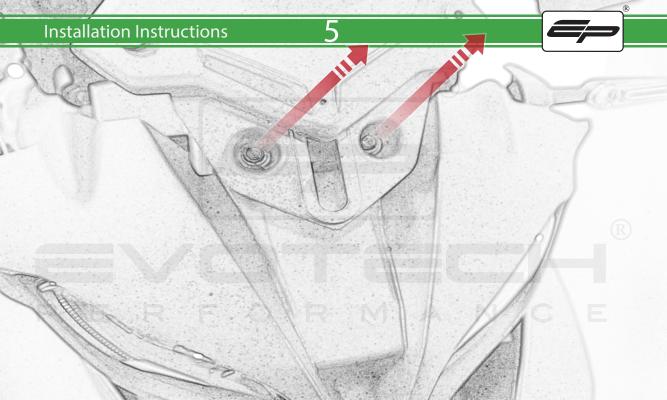


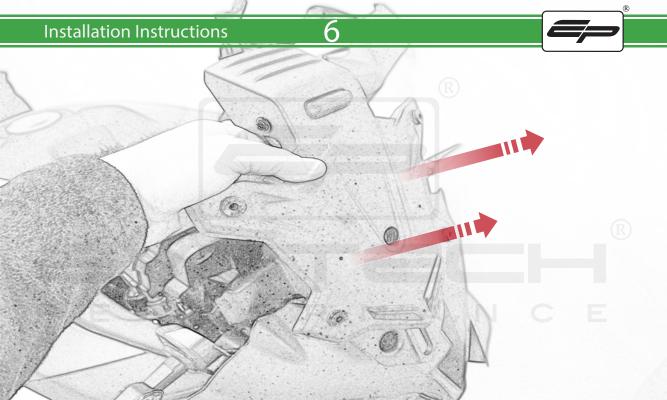

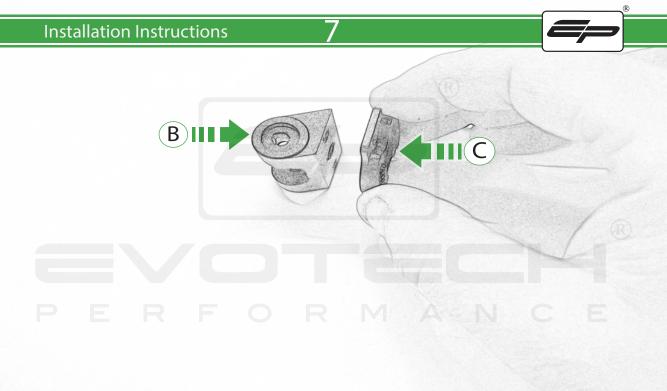

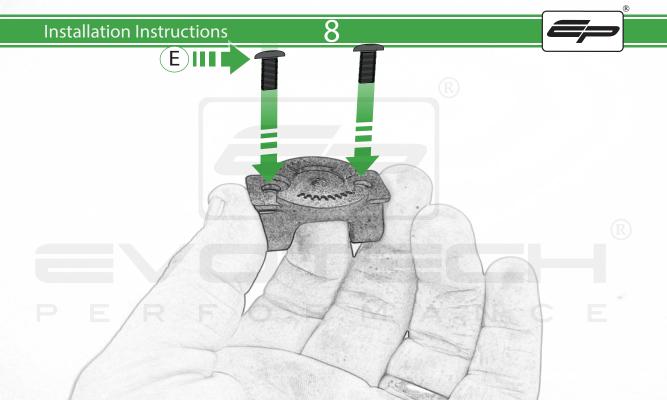



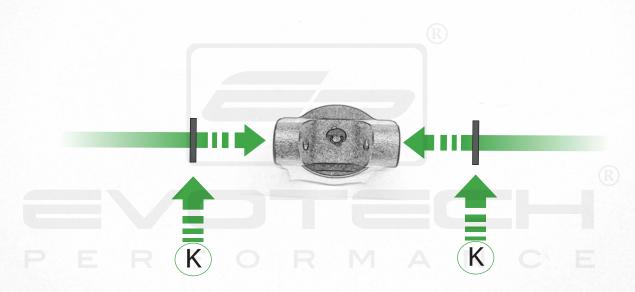














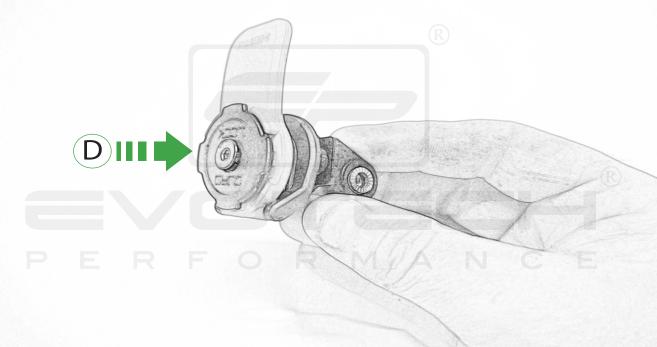





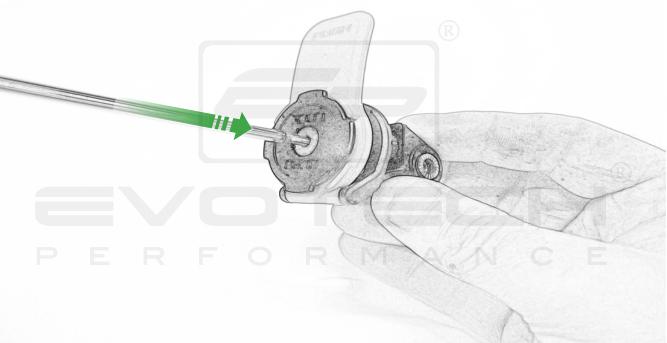




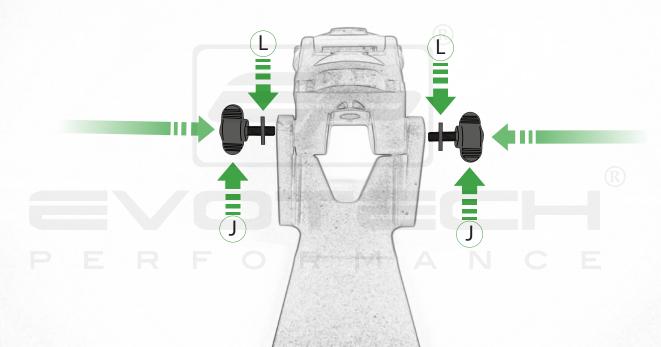


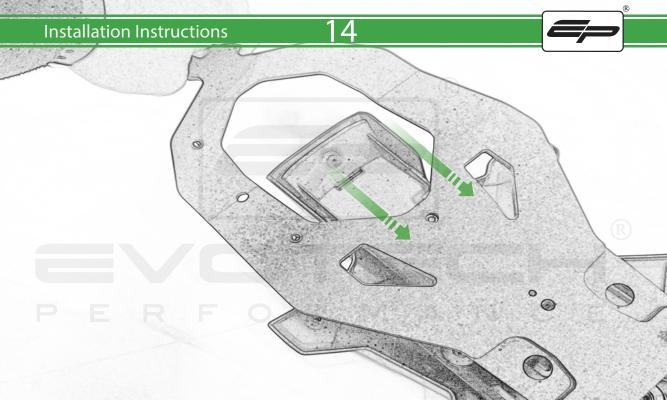


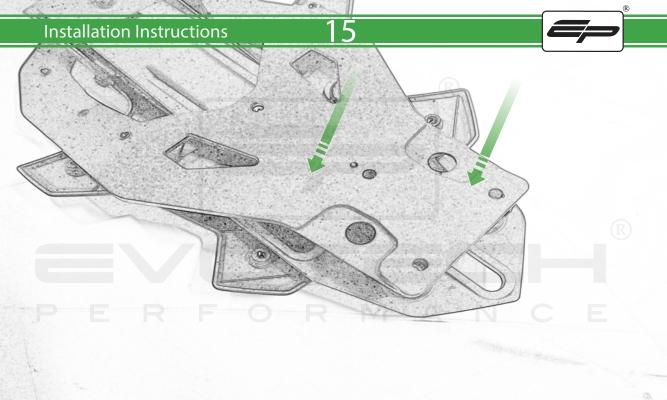

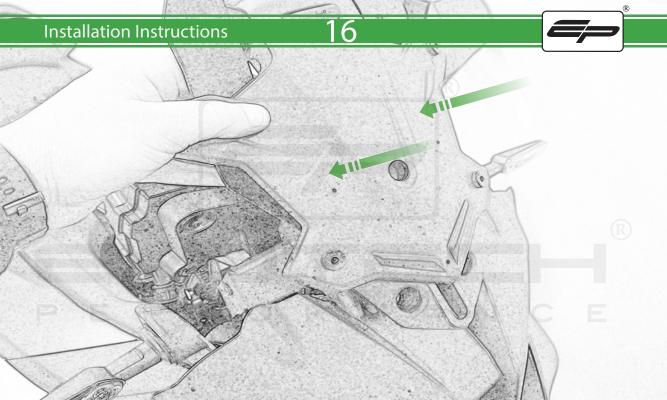




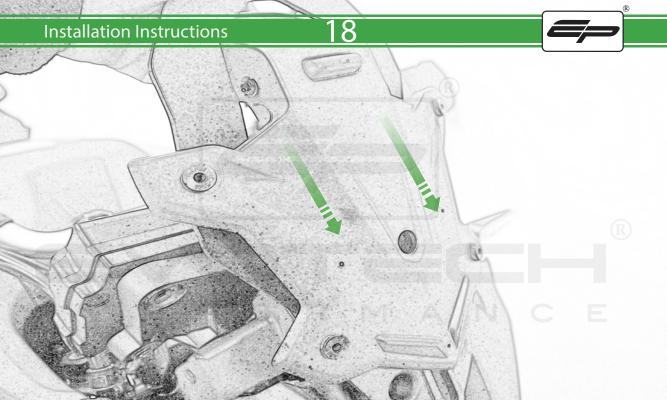


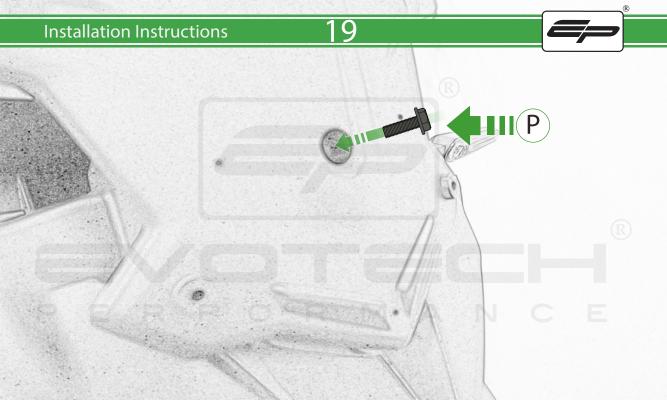







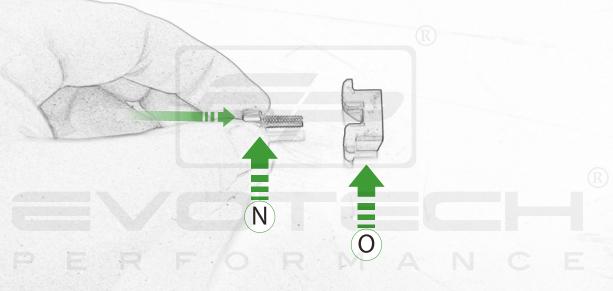

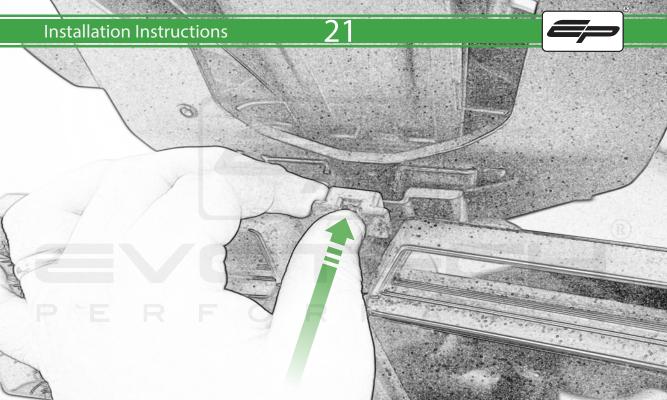

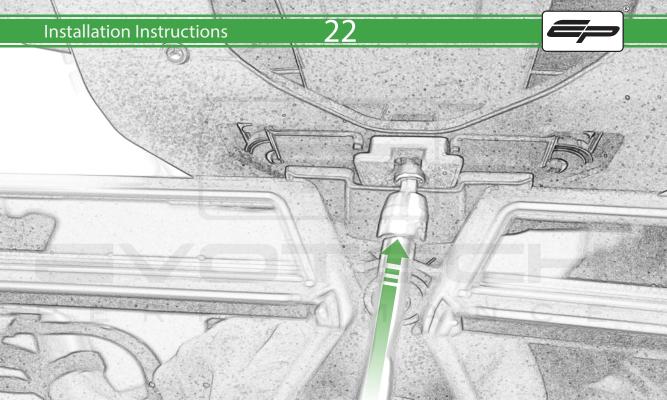

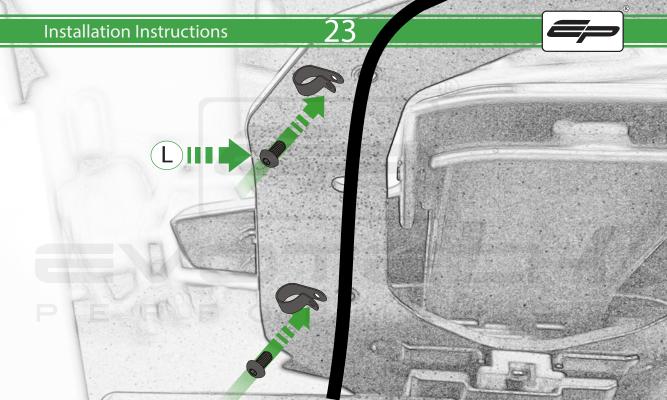





ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

(R)



www.evotech-performance.com