



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Honda CBR500R Quadlock Mount Installation Instruction




- Ⓐ 1 x Main Plate
- Ⓑ 1 x Pivot Plate
- Ⓒ 1 x Quad Lock Sub Bracket
- Ⓓ 1 x Quad Lock Mounting Bracket
- Ⓔ 2 x M5 x 8mm Black Button Head Bolts
- Ⓕ 2 x Locking Washer
- Ⓖ 2 x M5 Black Washer
- Ⓗ 2 x M5 X 12 Caphead


EVO **PERFORMANCE** **TECH** [®]


P E R F O R M A N C E

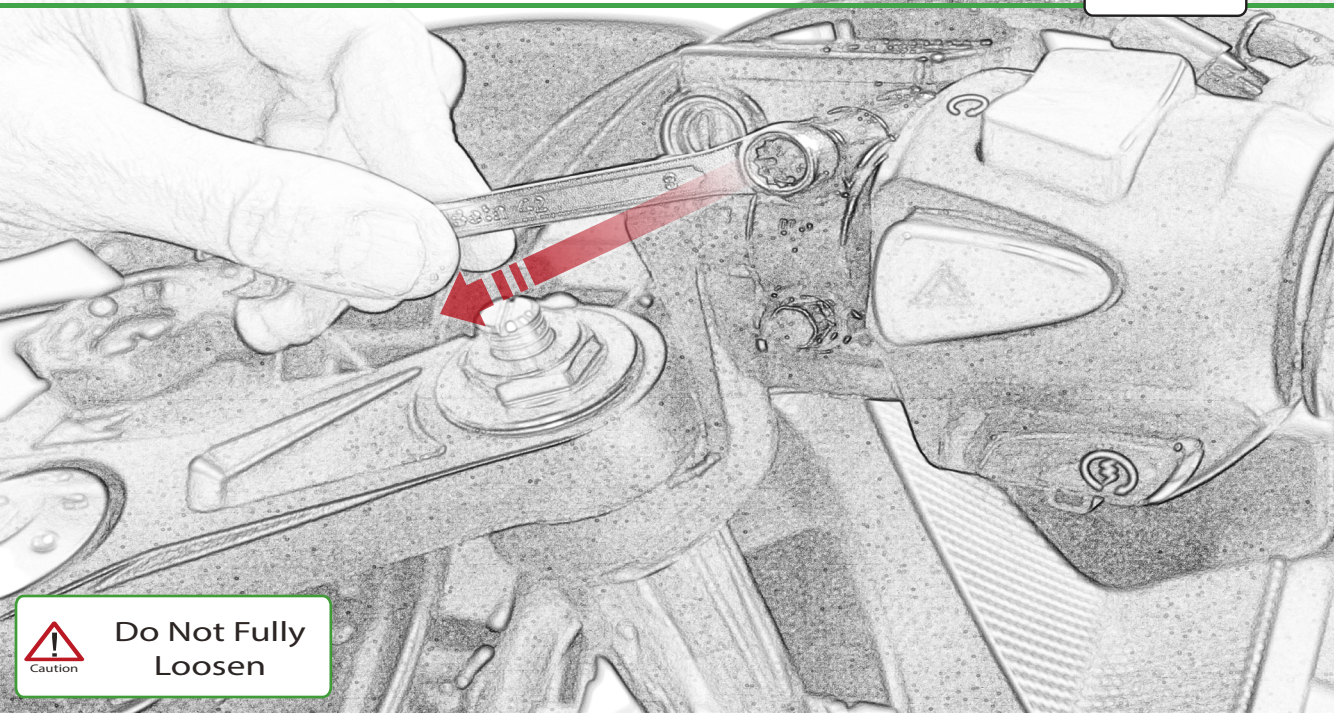



**Do Not Fully
Loosen**

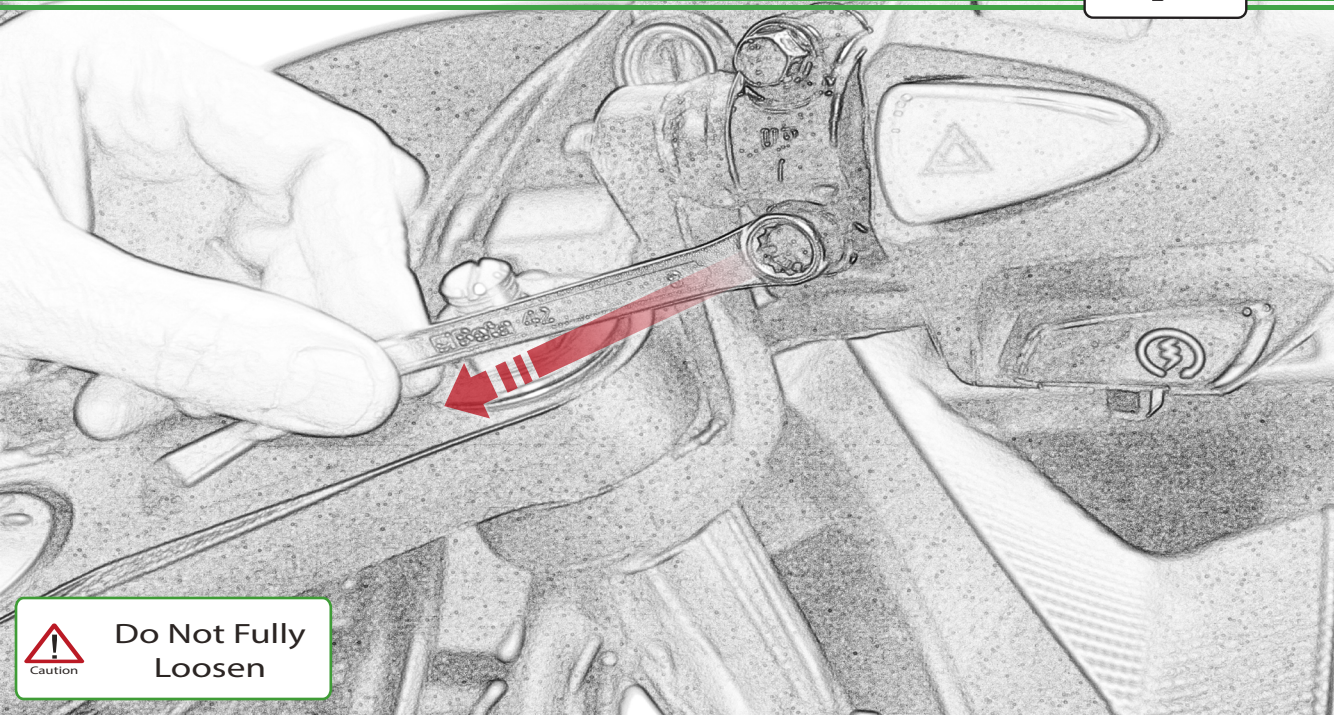

 Do Not Fully Loosen

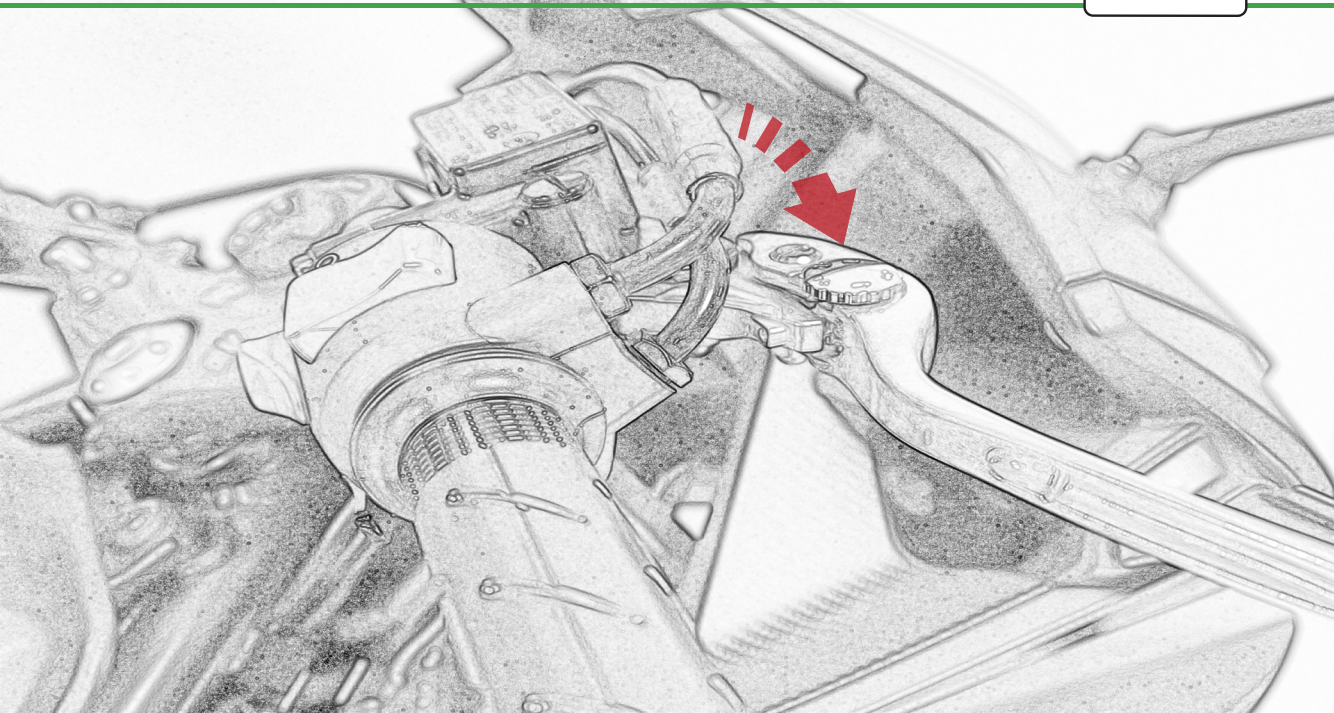

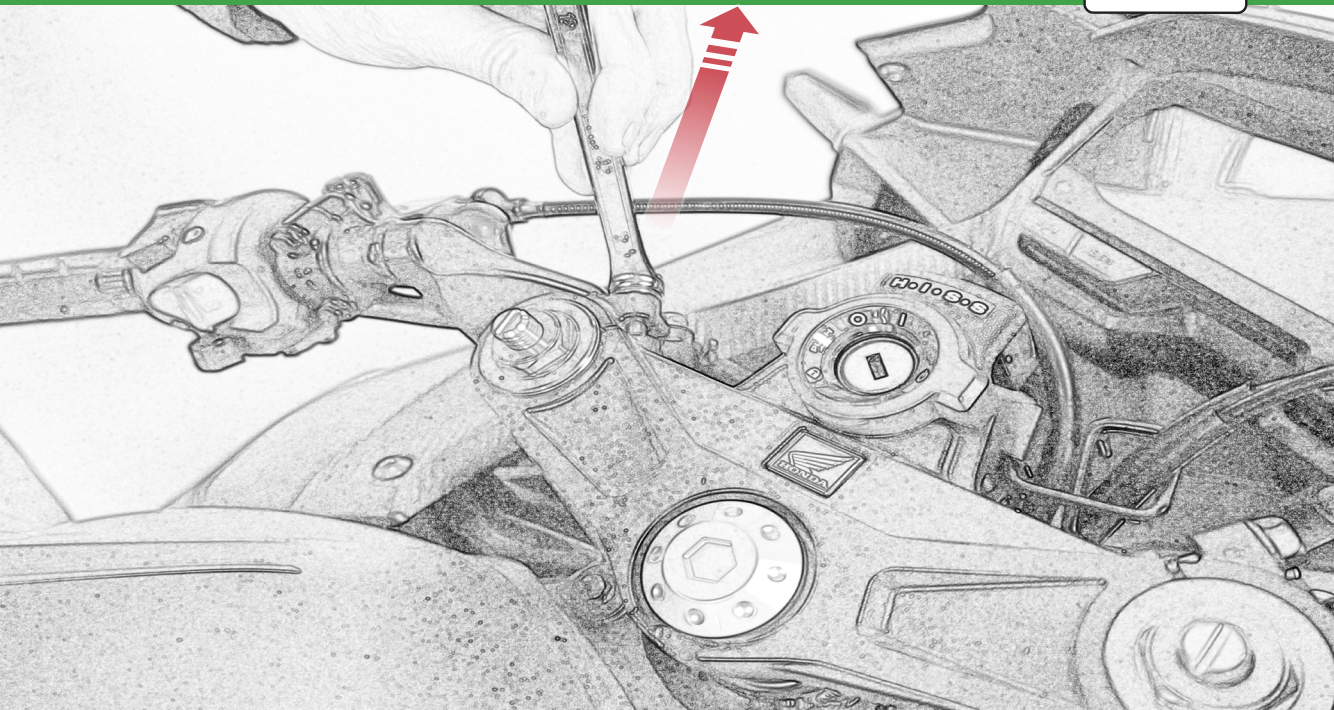


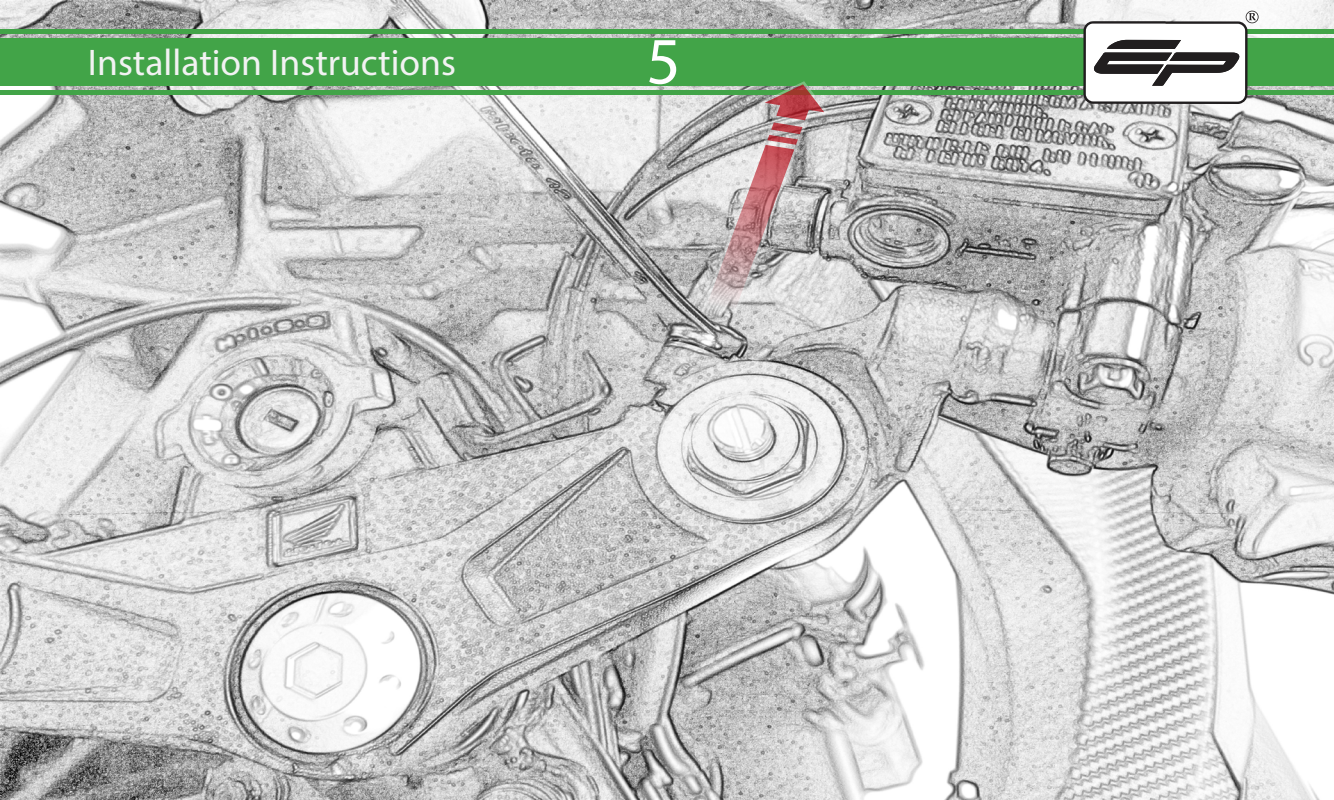



Installation Instructions





5

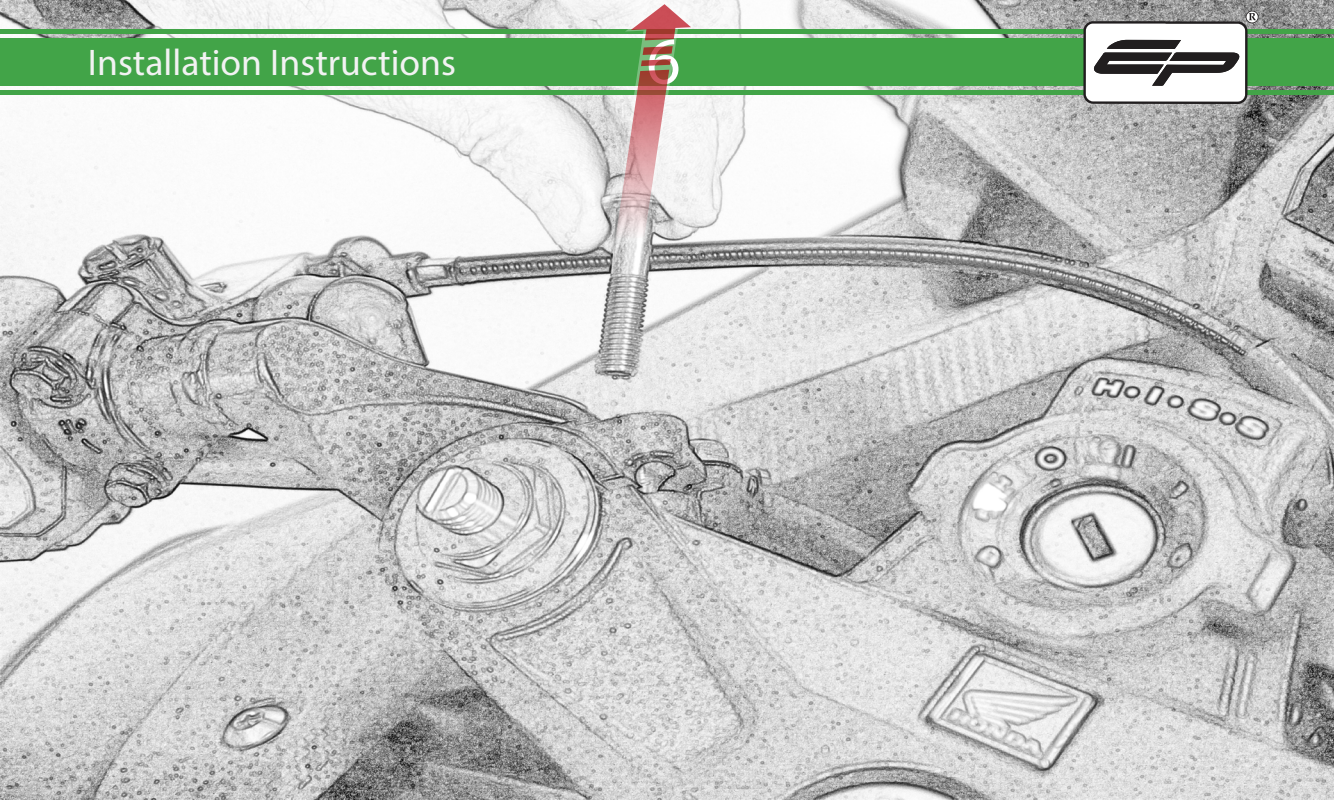

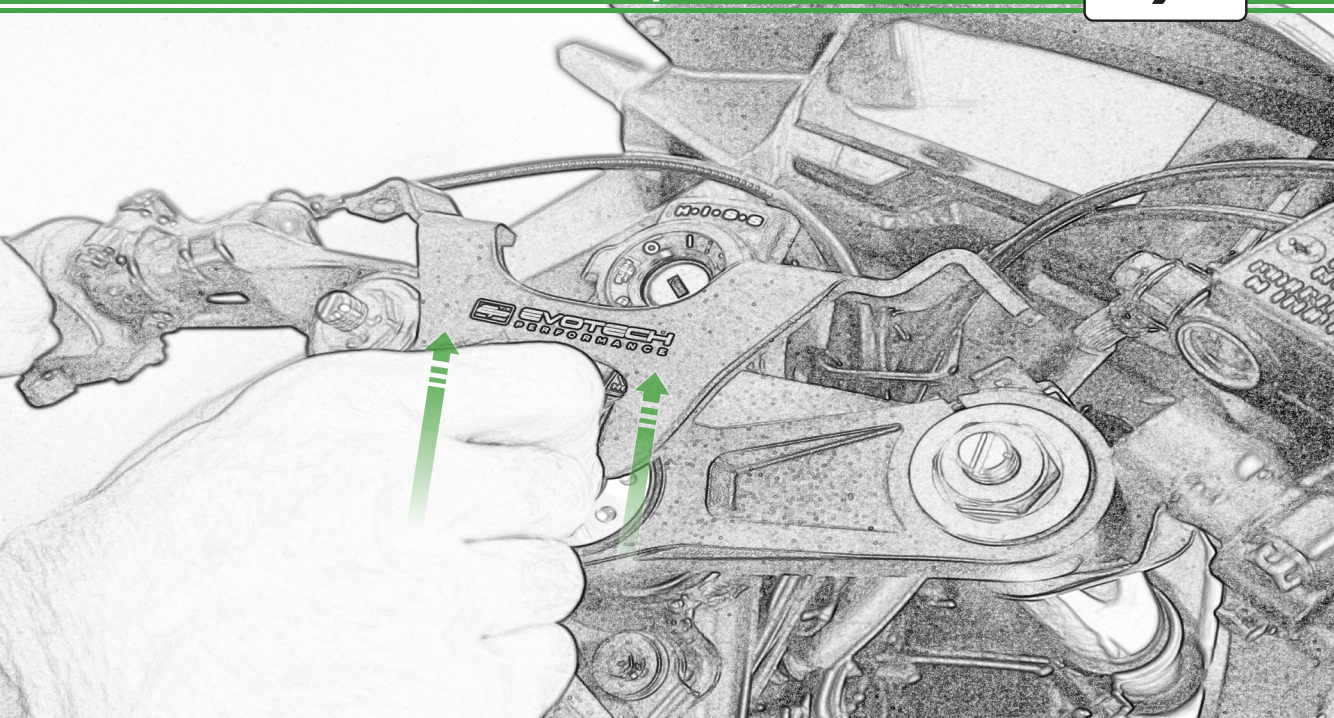

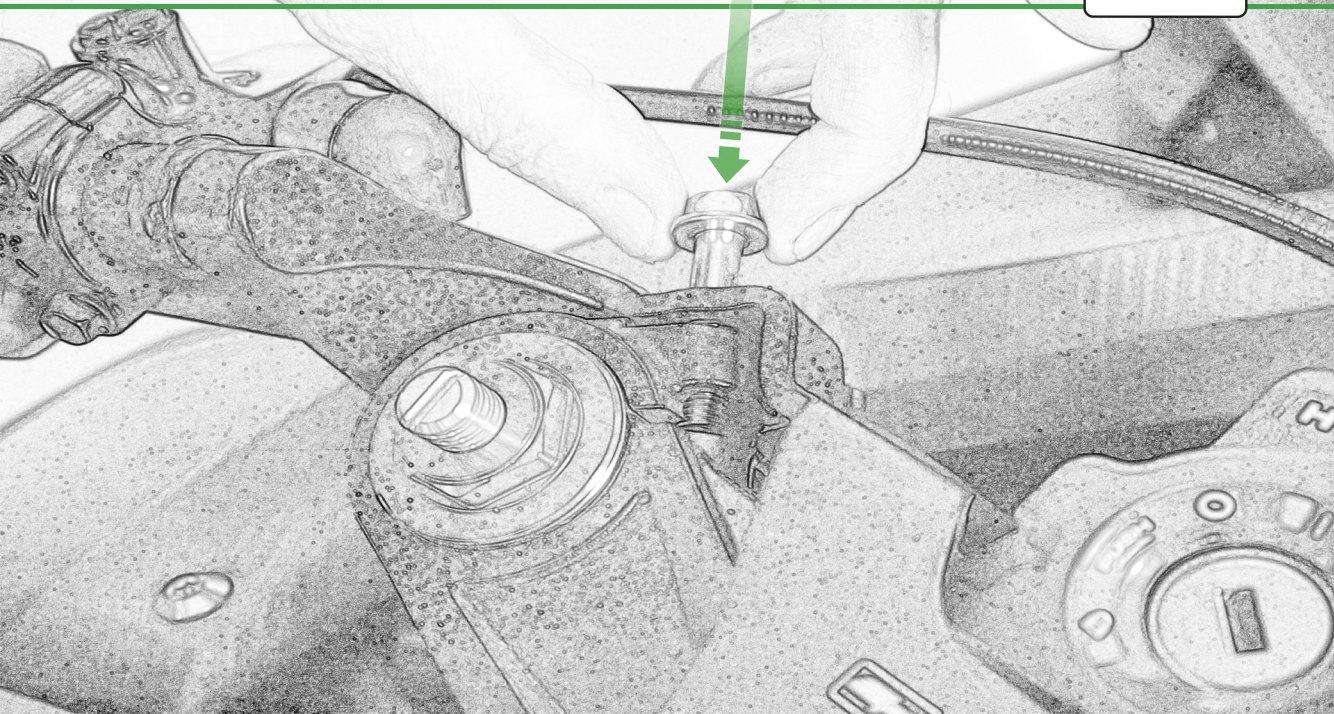

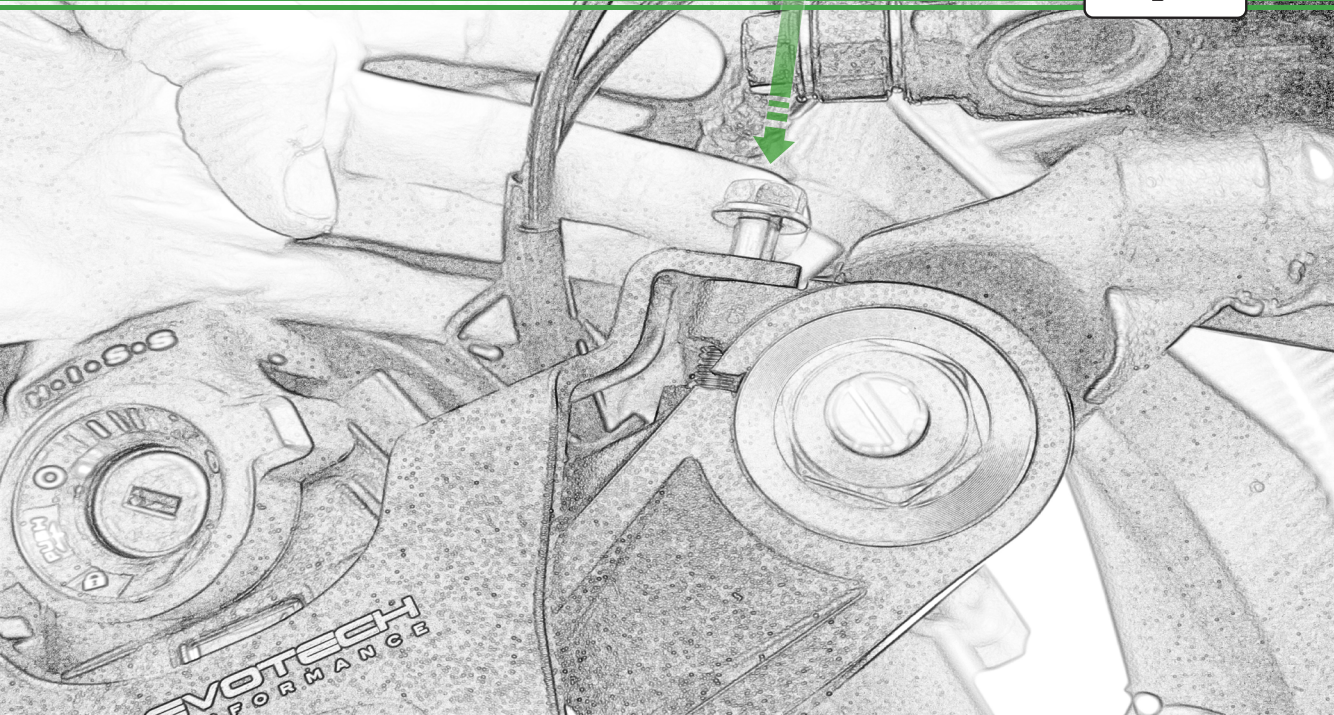


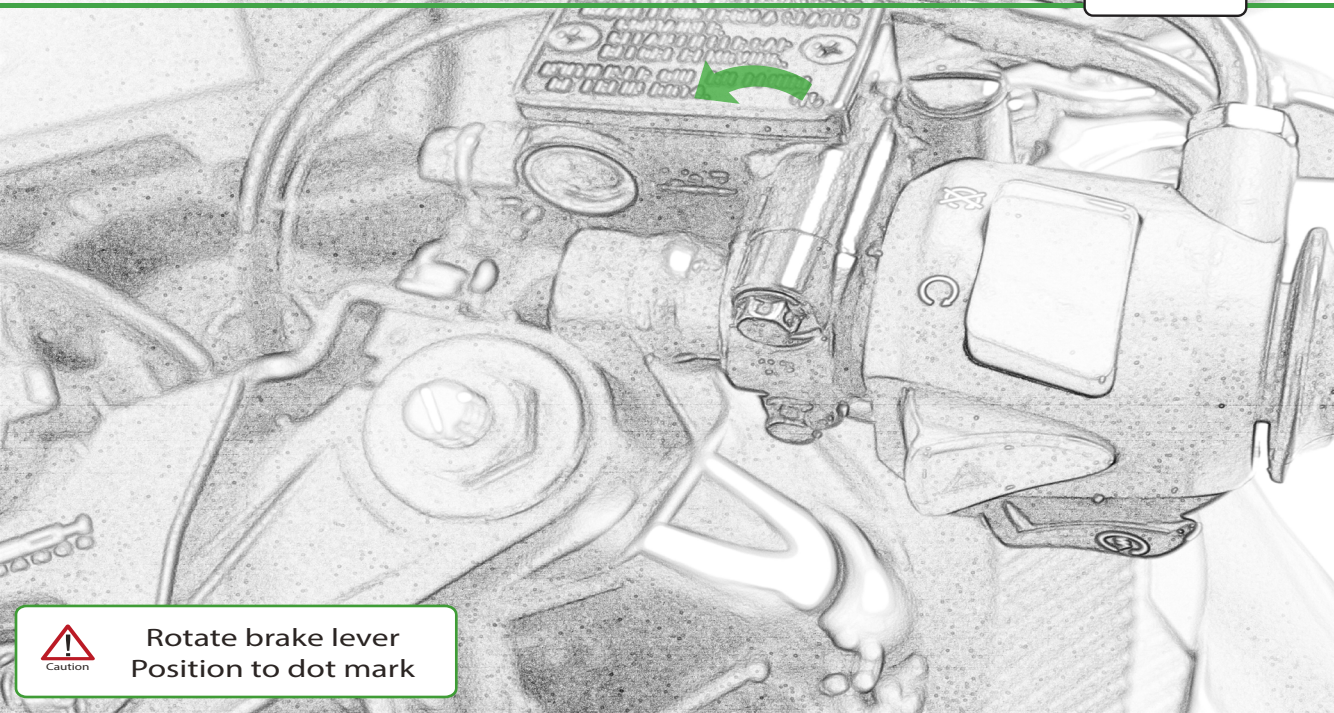

Caution


Rotate brake lever
Position to dot mark




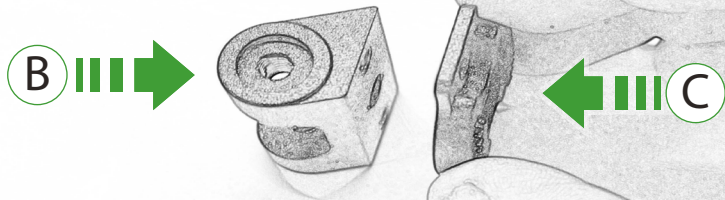






E IIII →

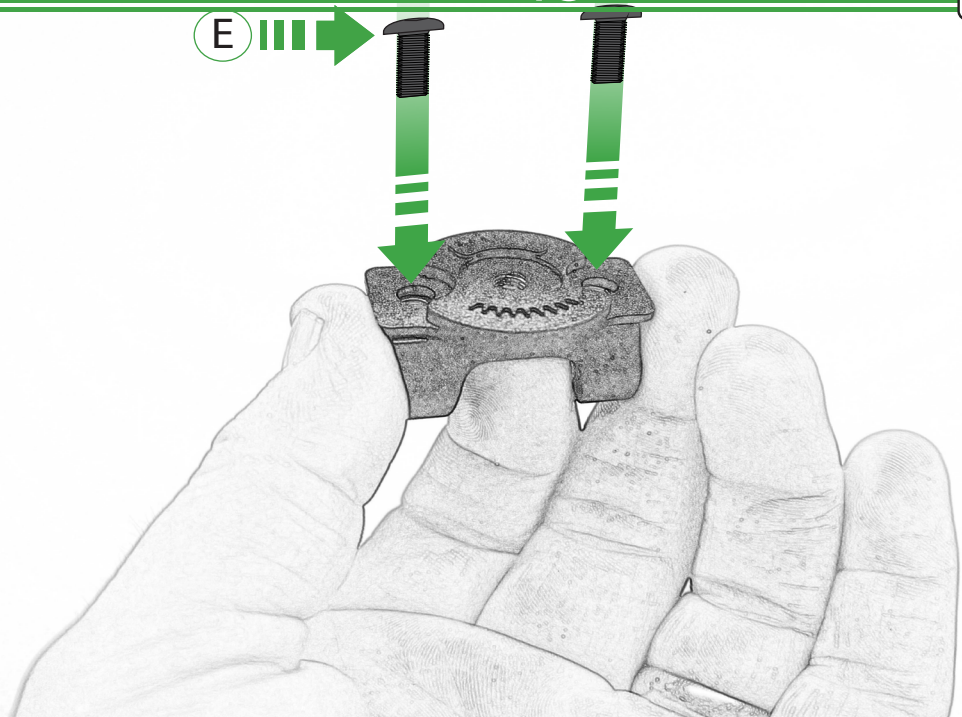


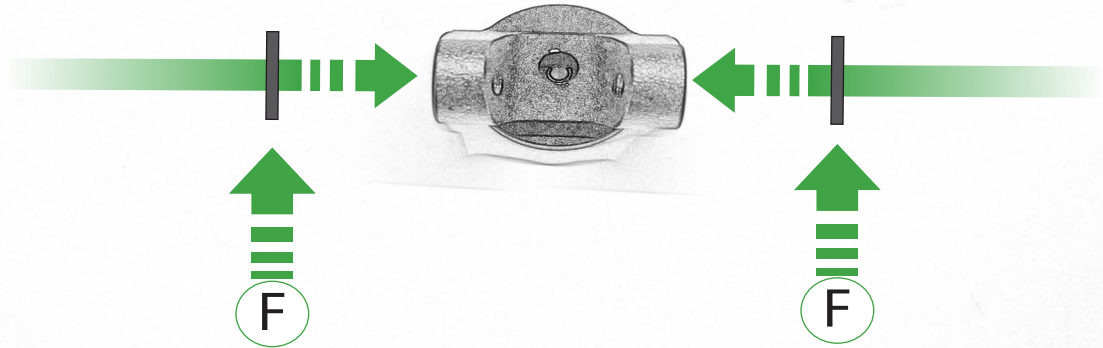

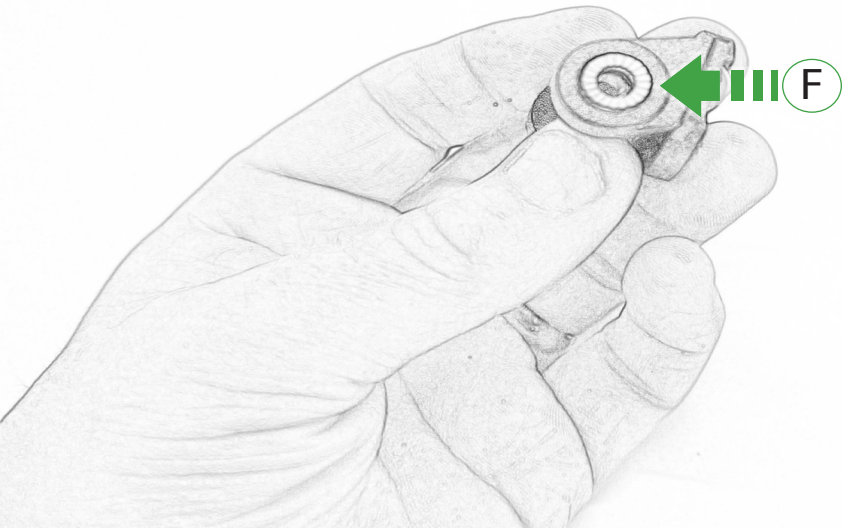

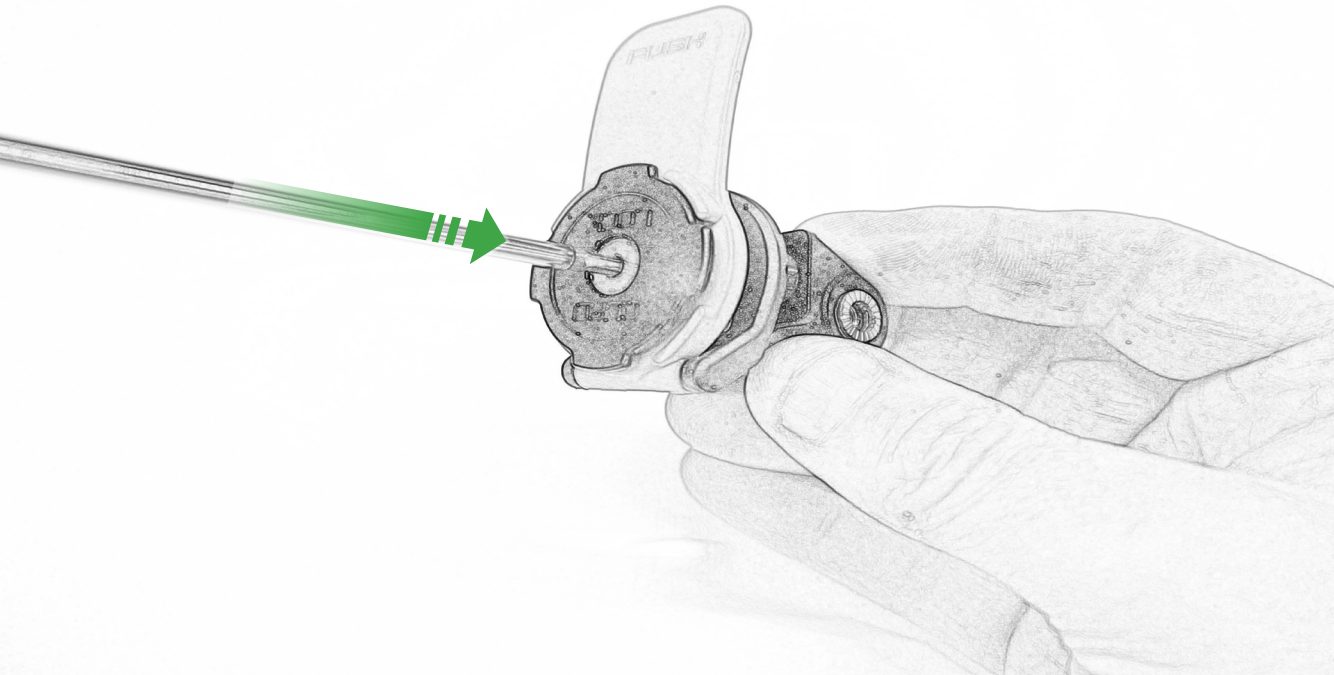

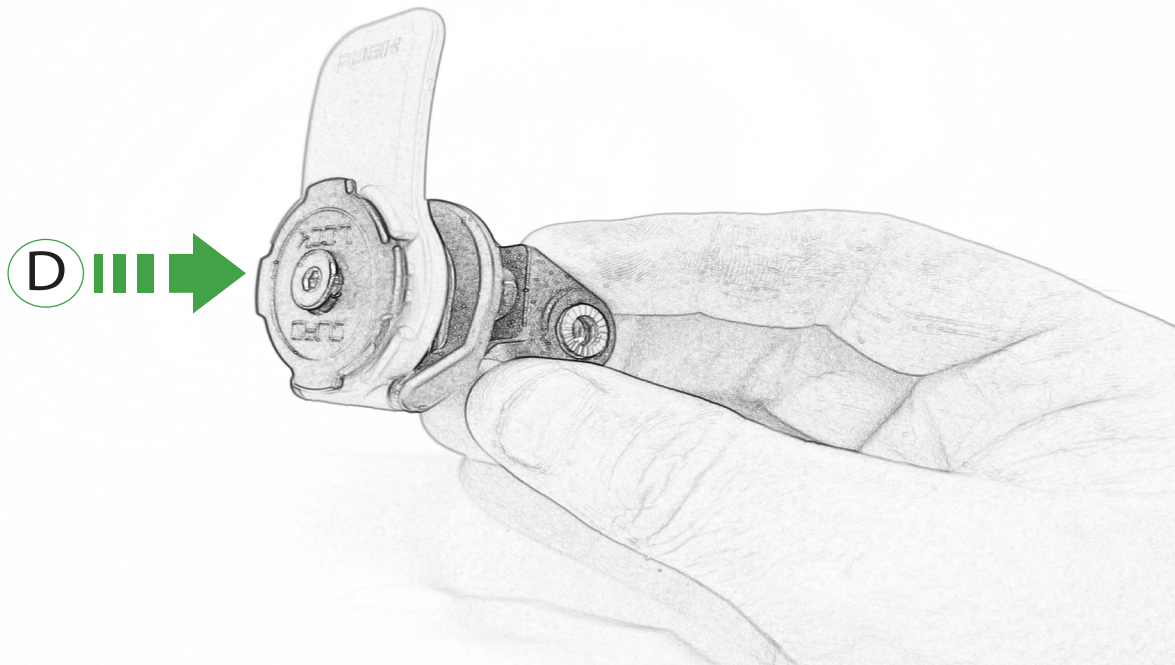

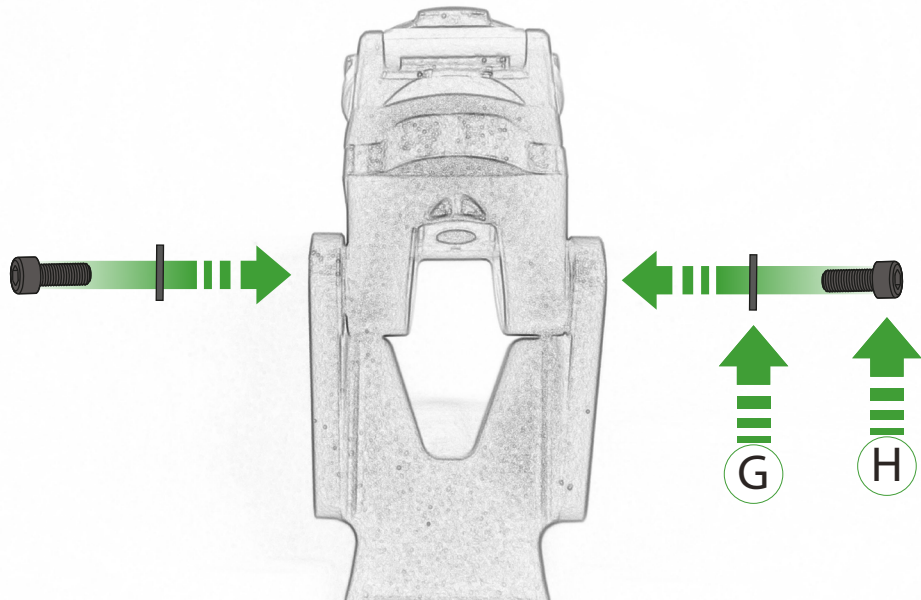



 **ESSENTIAL CHECKS**  [®]

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

P E R F O R M A N C E [®]



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com