



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Speed Triple RS Brake Protector Kit Installation Instructions





Kit Contents PRN014574-015506-015509


- (A) 1 x Bar End
- (B) 1 x Blade
- (C) 1 x Inner Bar
- (D) 1 x Middle Bar
- (E) 1 x Outer Bar
- (F) 1 x O-Ring
- (G) 1 x M6 x 25 Countersunk Screws
- (H) 1 x Location Pin

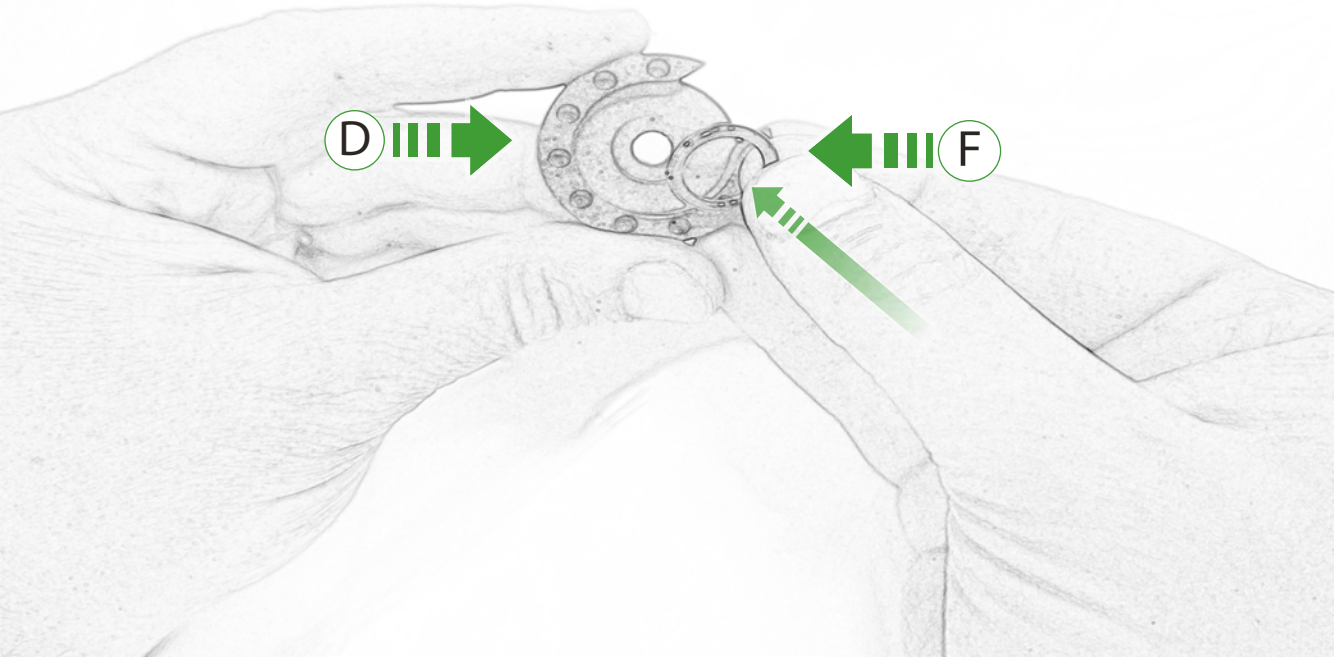


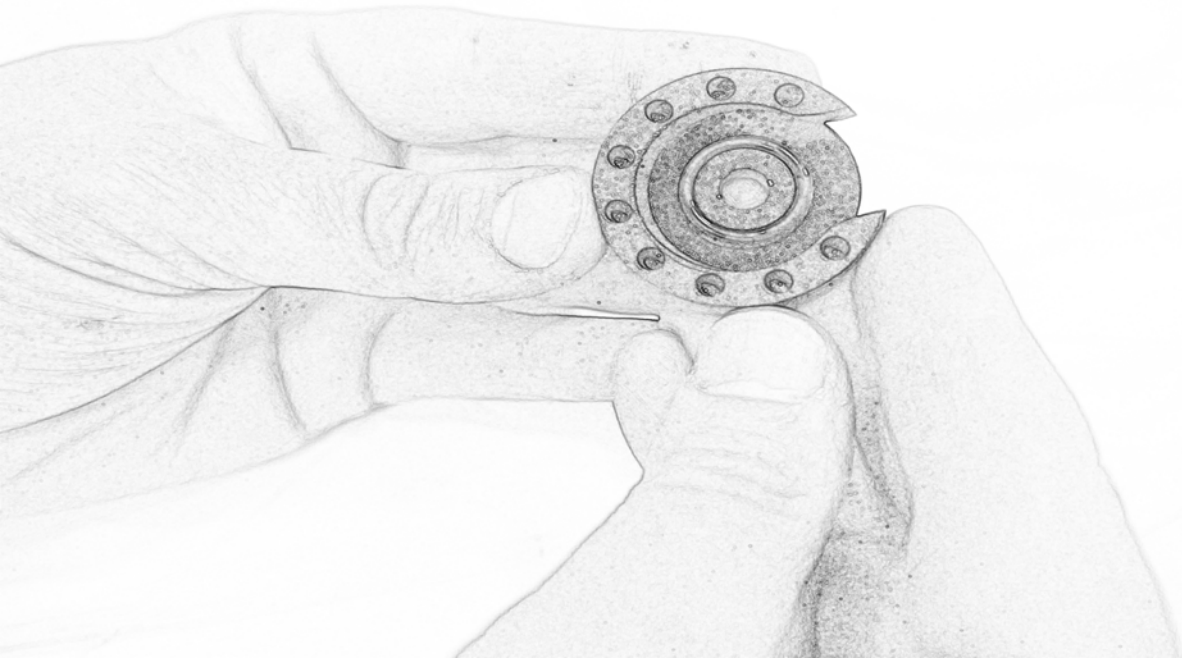

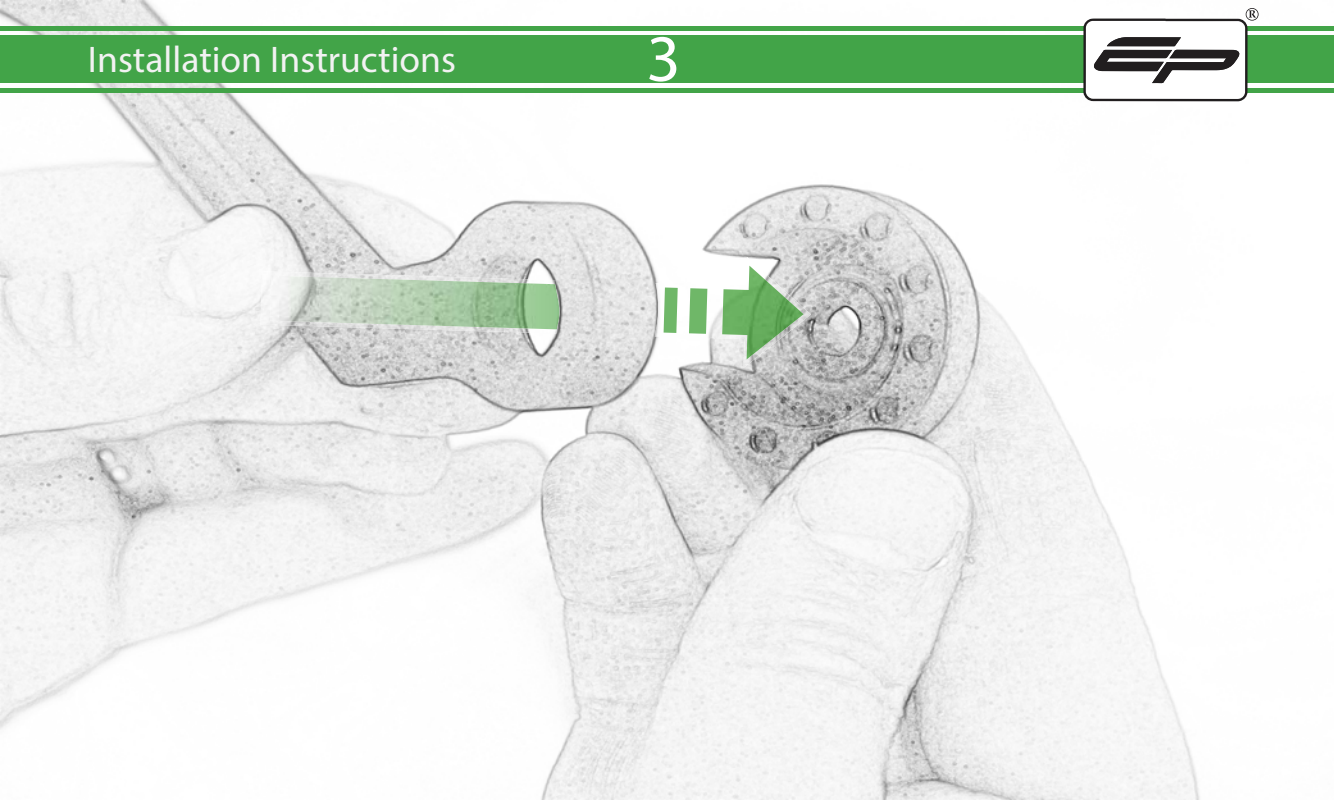

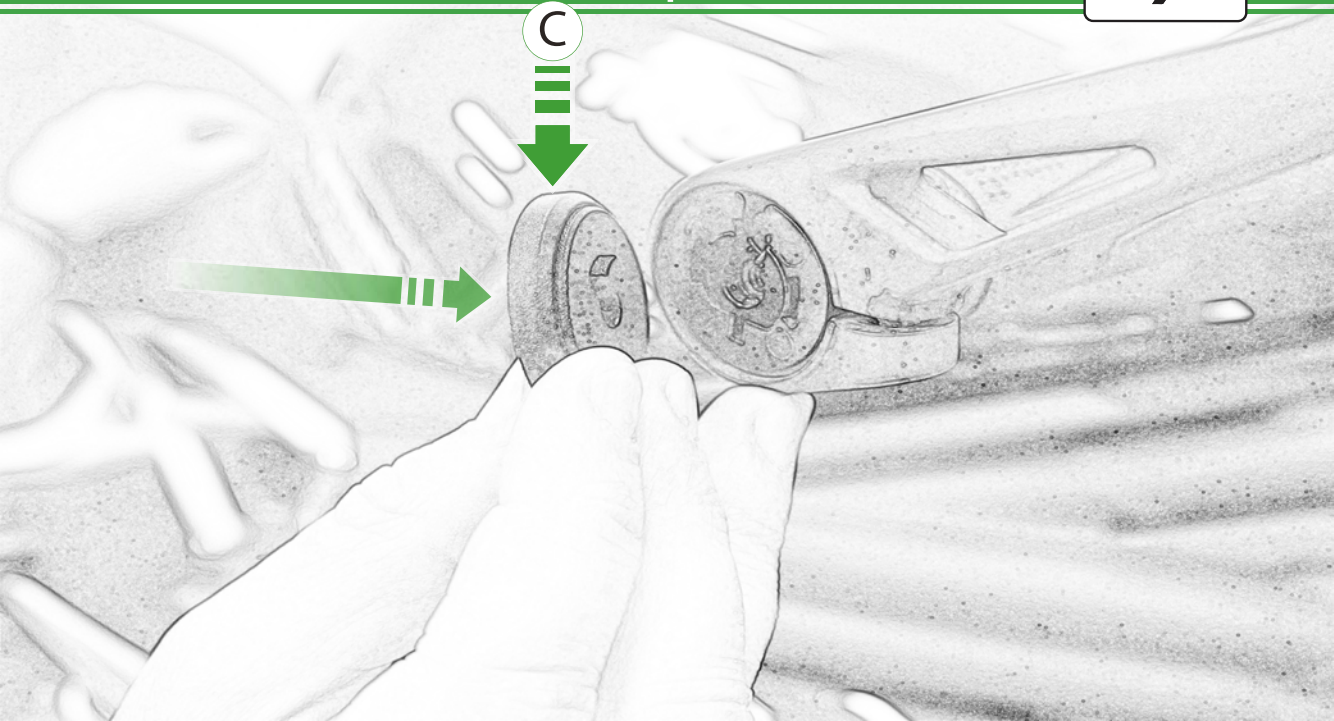


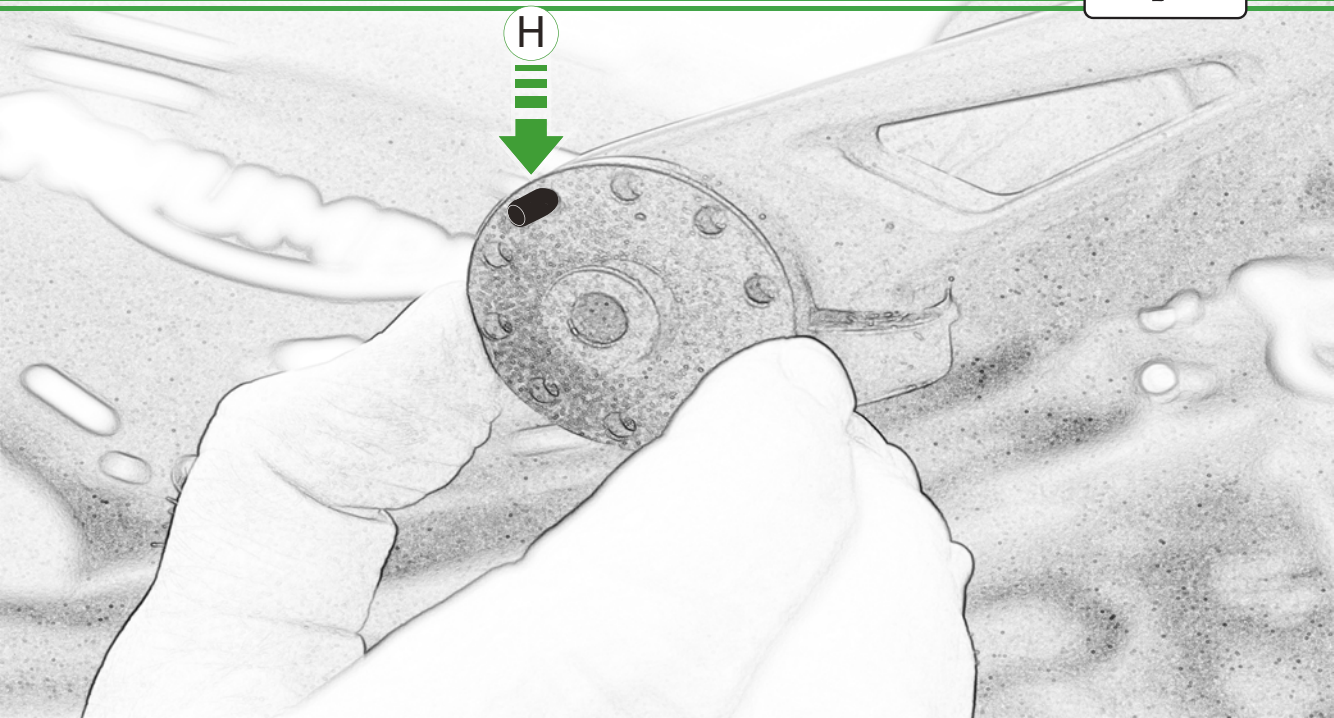


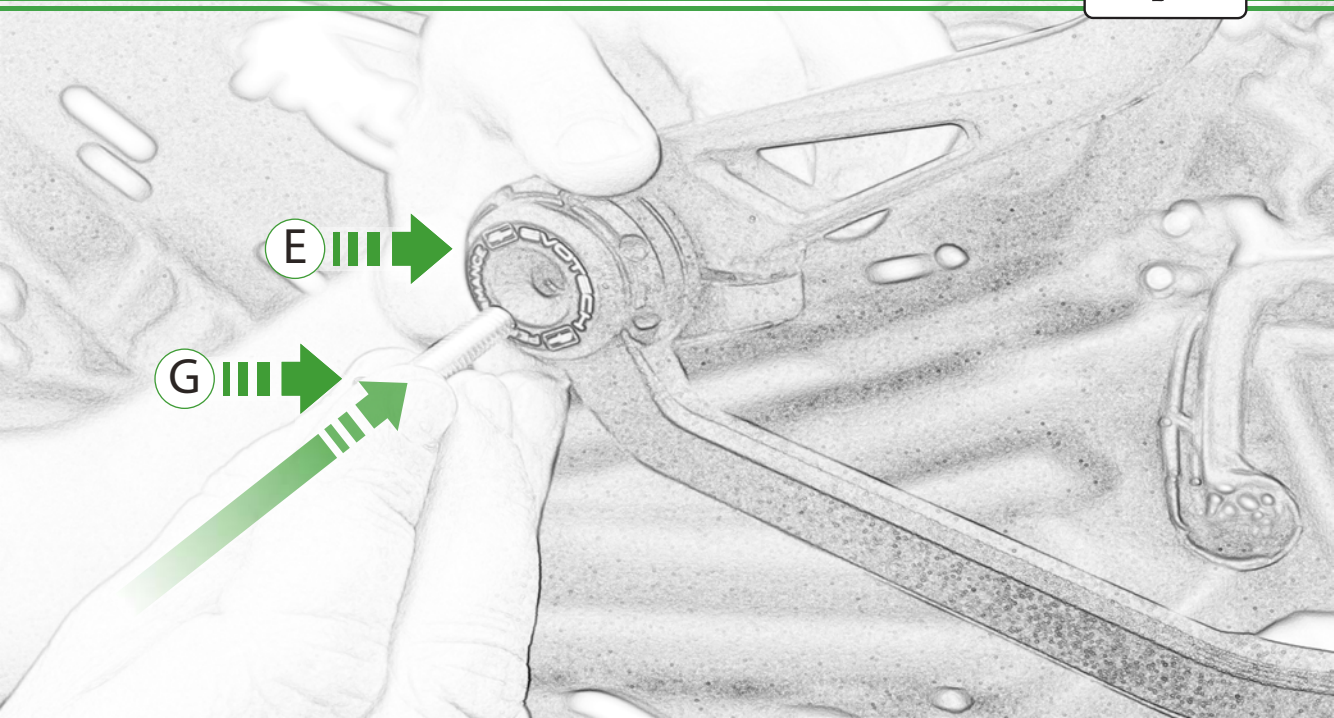






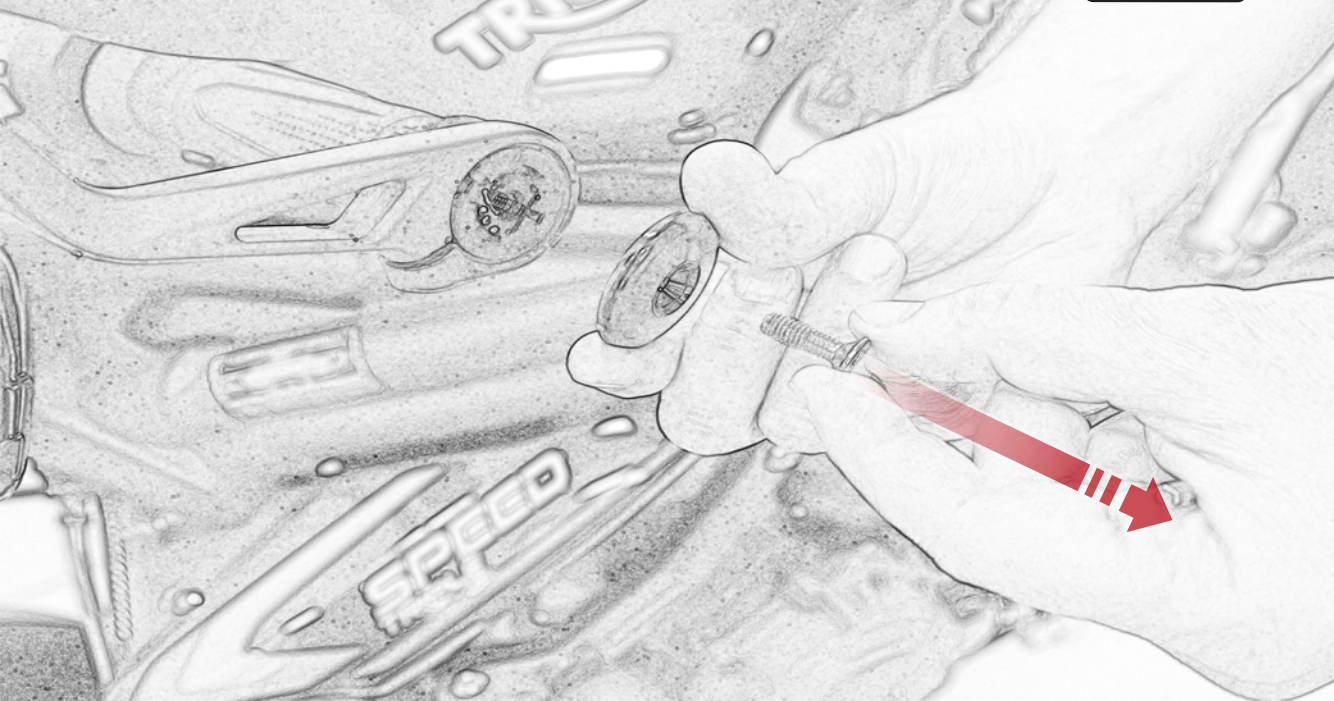

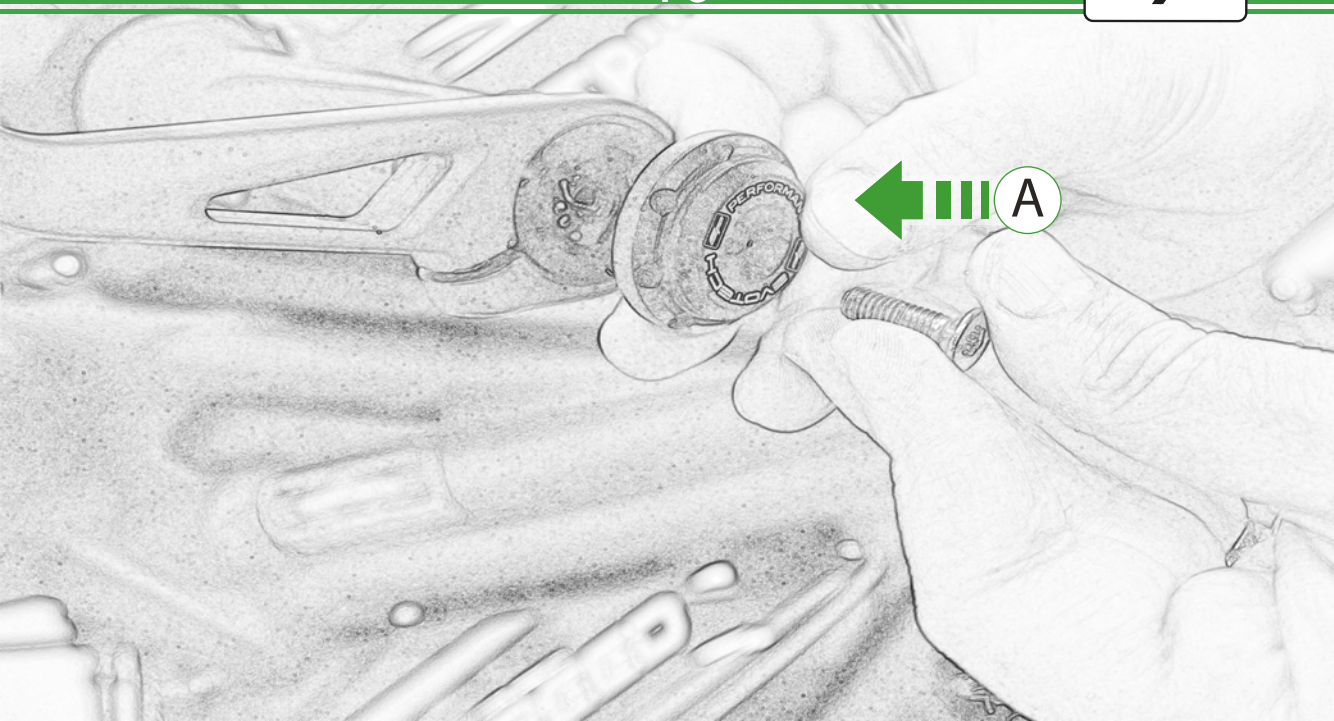

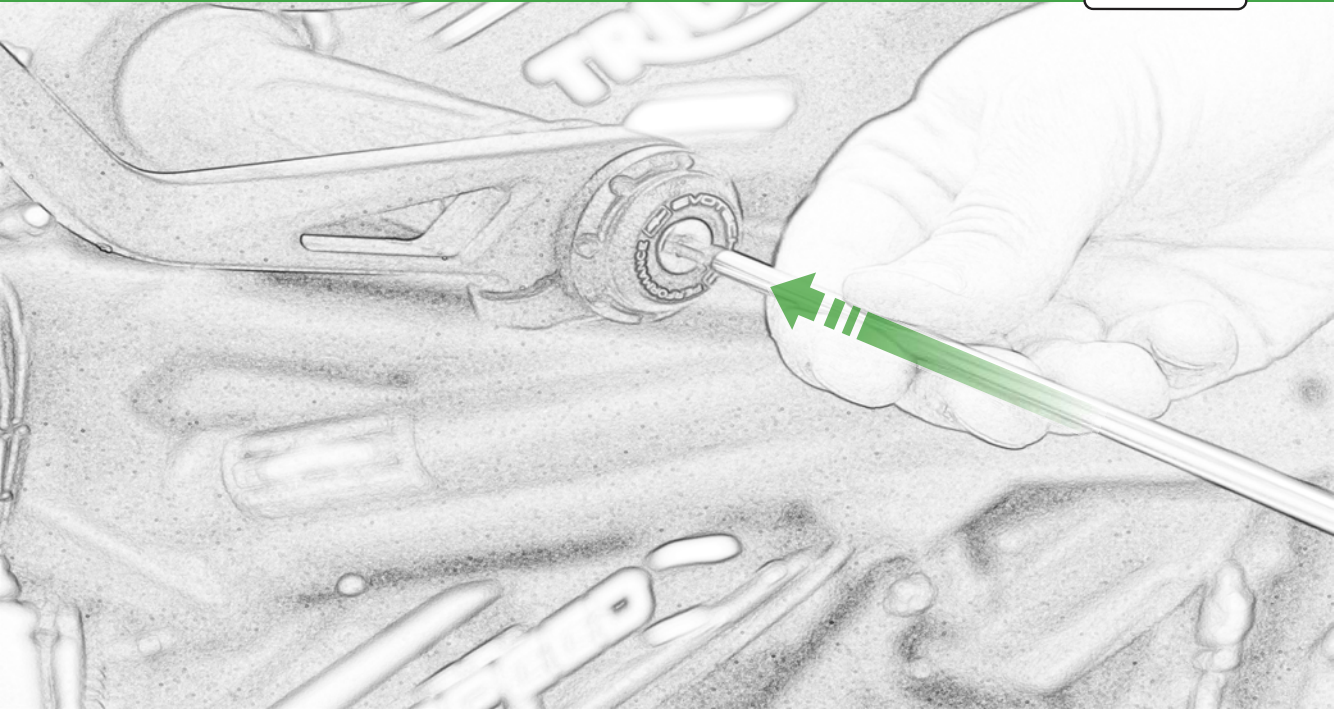



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com