



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)

Triumph Street Triple RS


Radiator Guard

Installation Instructions




Kit Contents PRN014759



- A 1 x Radiator Guard
- B 2 x Spacer
- C 6 x Rubber Bungs

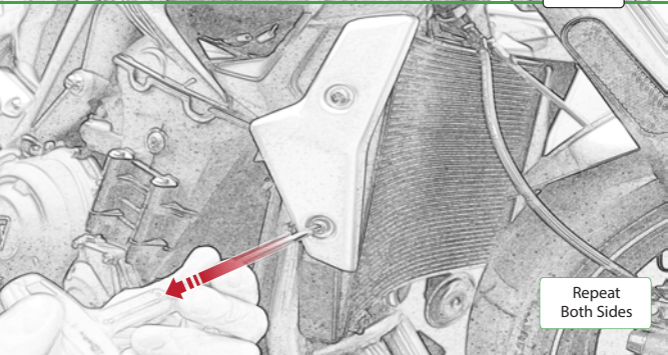

Repeat  
Both Sides

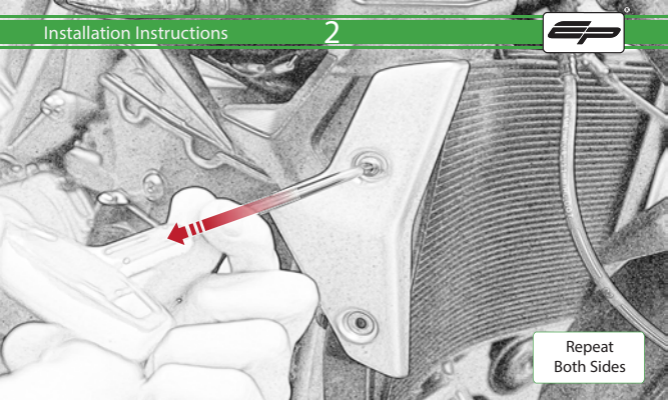


Repeat  
Both Sides

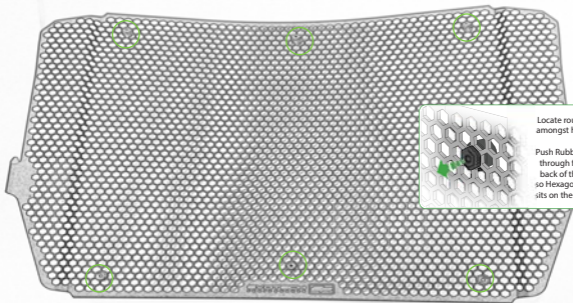


Locate round holes  
amongst hexagons.

Push Rubber Spacer  
through from the  
back of the guard  
so Hexagonal shape  
sits on the front face

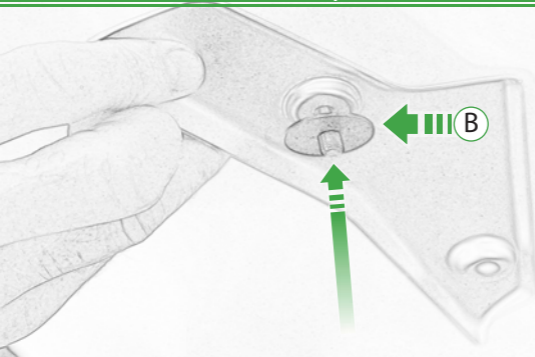


Repeat  
Both Sides

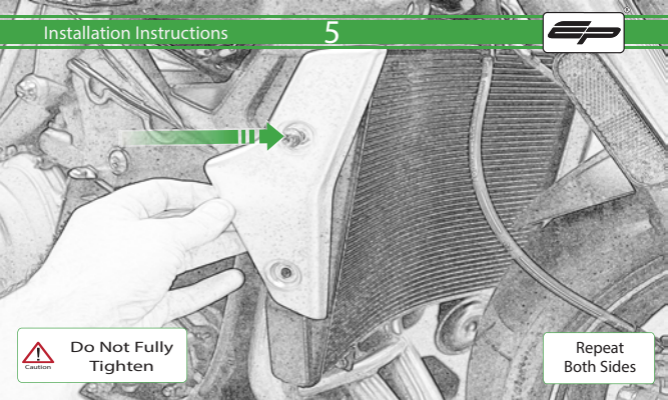


Caution


**Do Not Fully  
Tighten**

**Repeat  
Both Sides**

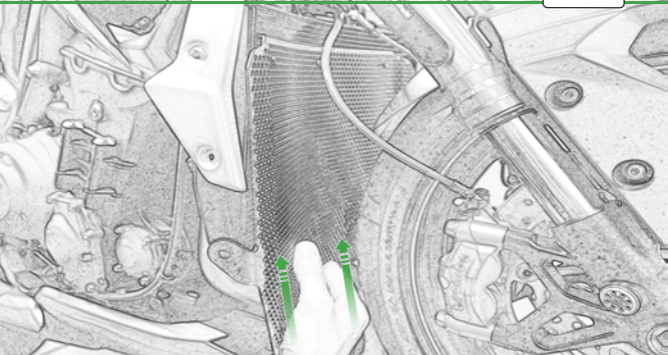




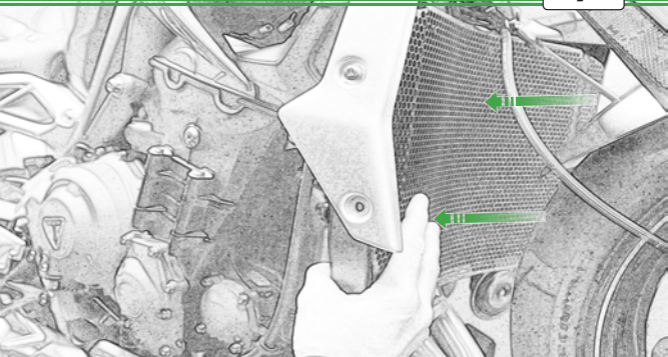

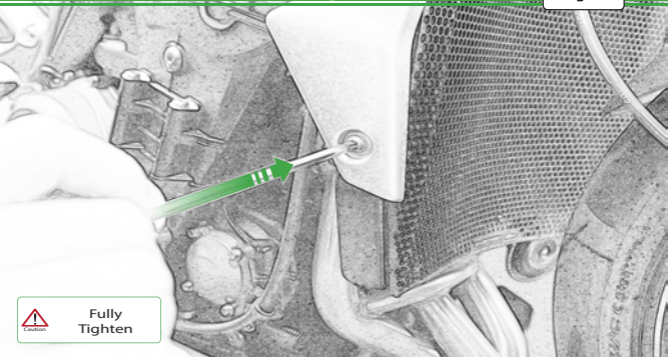


Caution


Fully  
Tighten

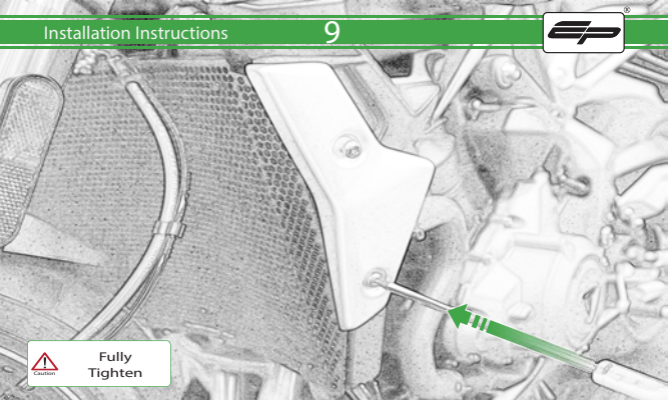

**Fully  
Tighten**

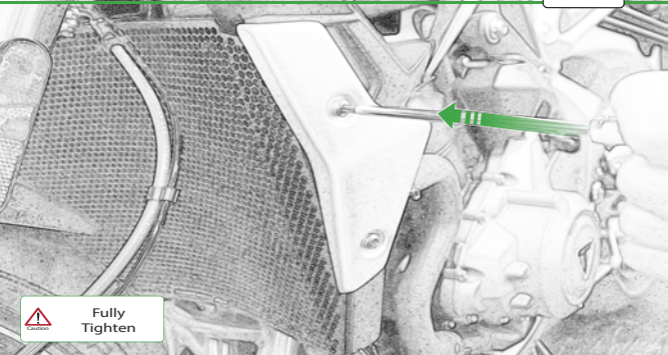

Fully  
Tighten



Caution

Fully  
Tighten



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)