

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Yamaha R1/R1M/R6 Bar End Set

Installation Instructions



Kit Contents PRN014760

- Ⓐ 2 x Bar End
- Ⓑ 2 x M6 x 35mm SS Caphead

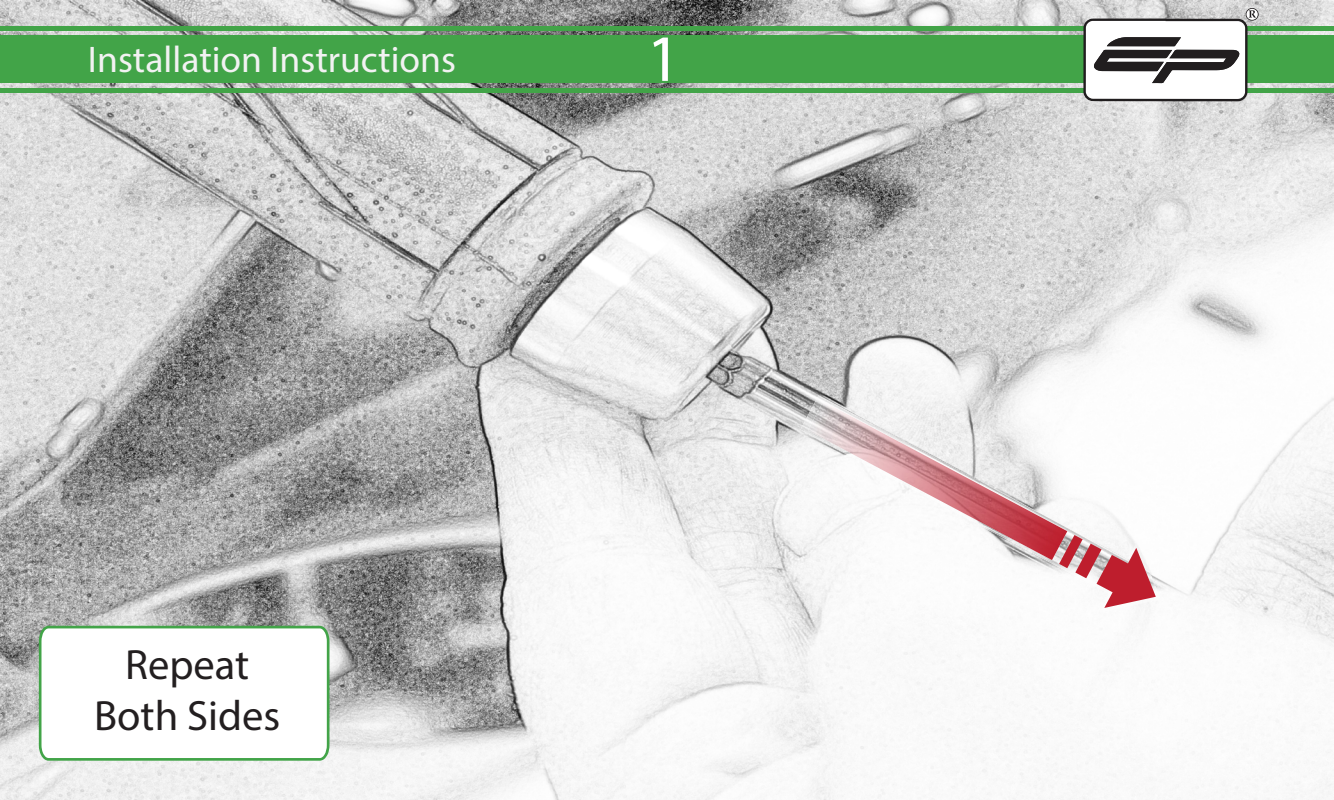

Repeat
Both Sides




A

B



Repeat
Both Sides

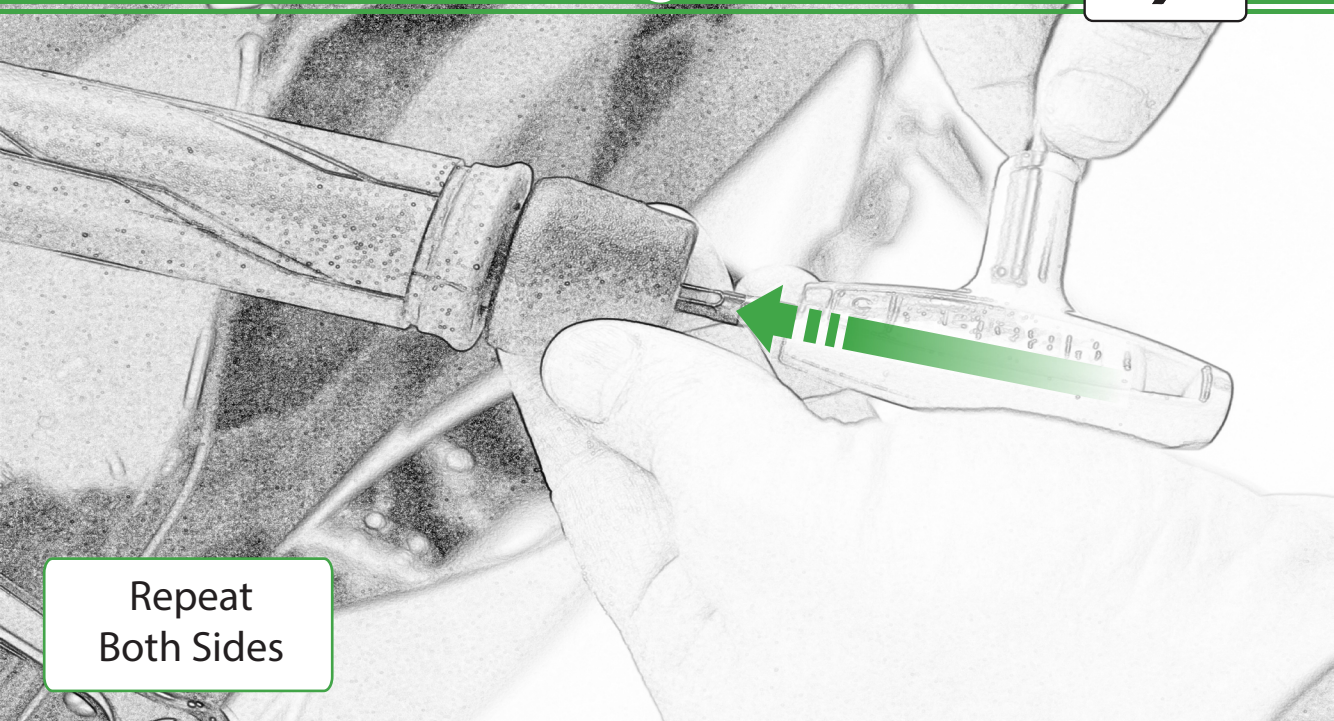


Repeat
Both Sides



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

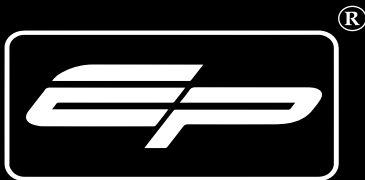

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com