



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Kawasaki Z H2 Exhaust Hanger


Installation Instructions





Kit Contents PRN014986

- (A) 1 x Spacer
- (B) 1 x Rubber Grommet
- (C) 1 x M8 Flange Nut
- (D) 1 x M8 x 25mm Button Head Bolt
- (E) 2 x M8 x 20mm Button Head Bolt

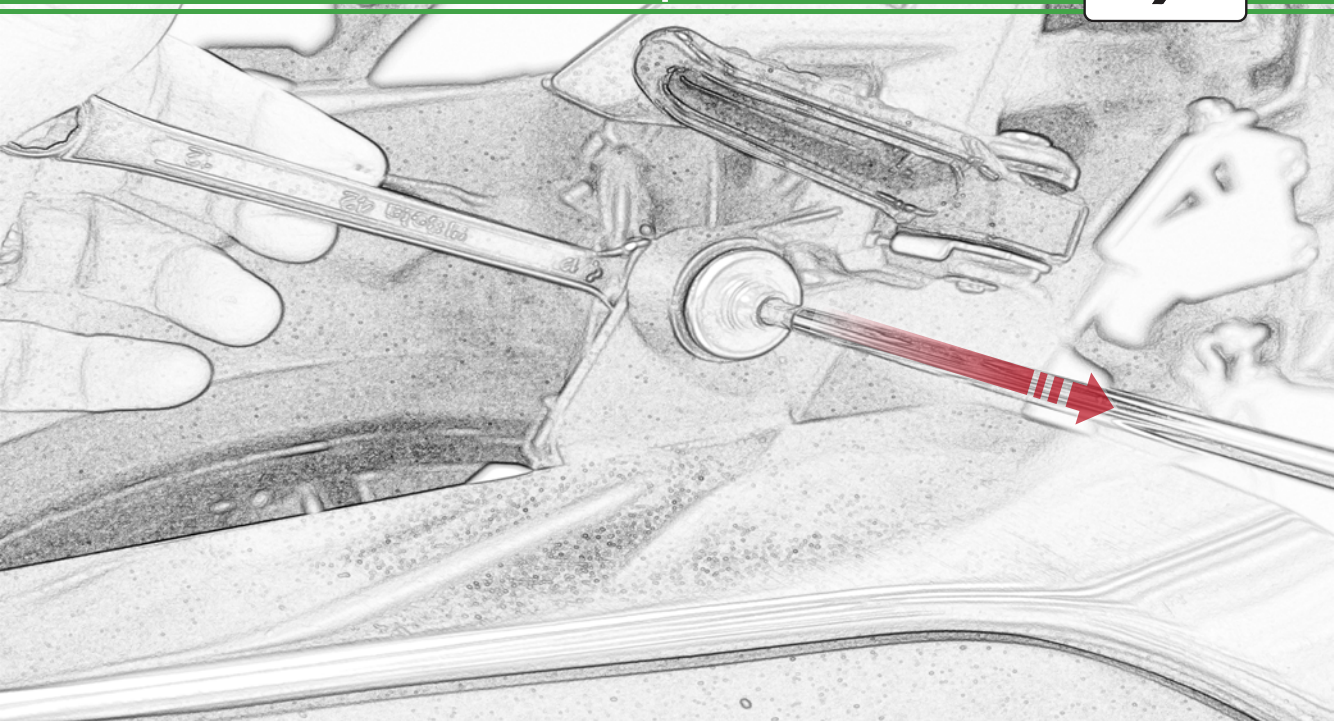


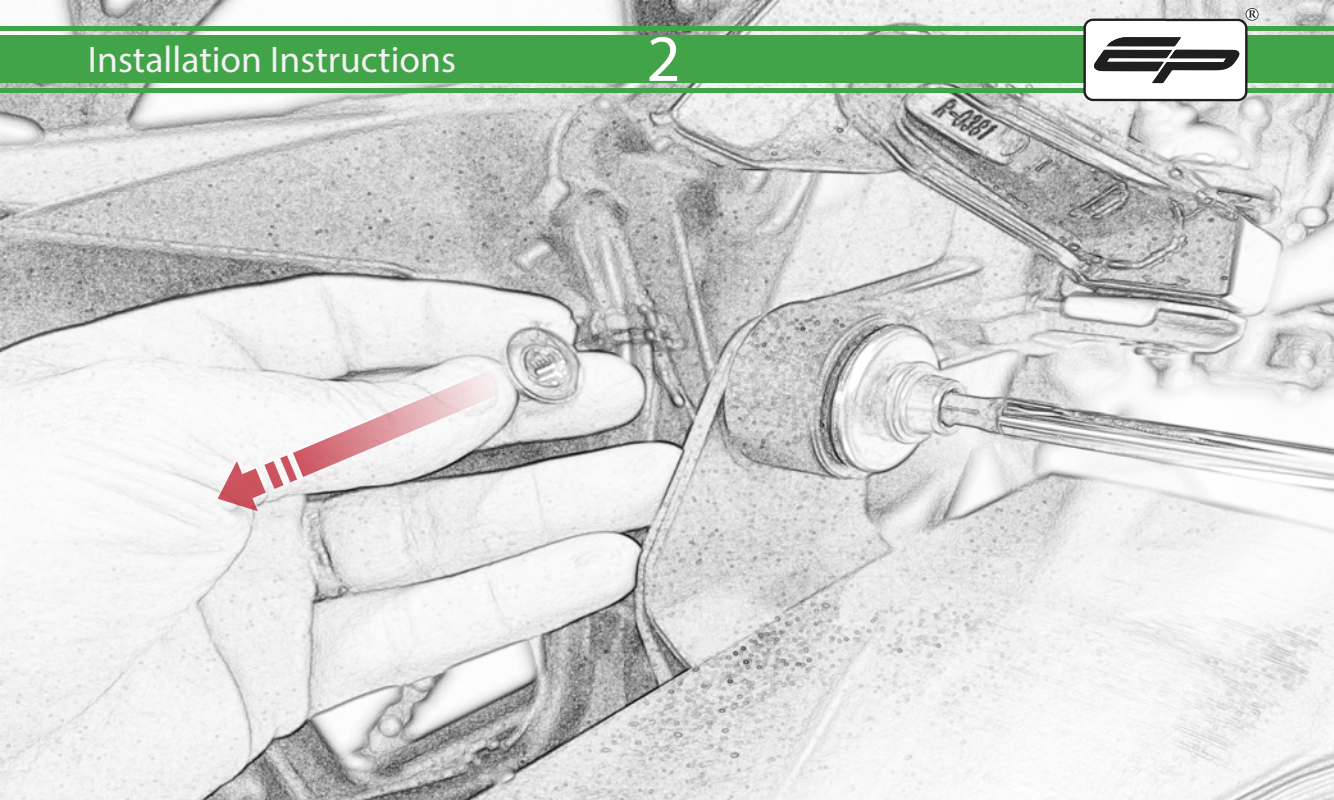

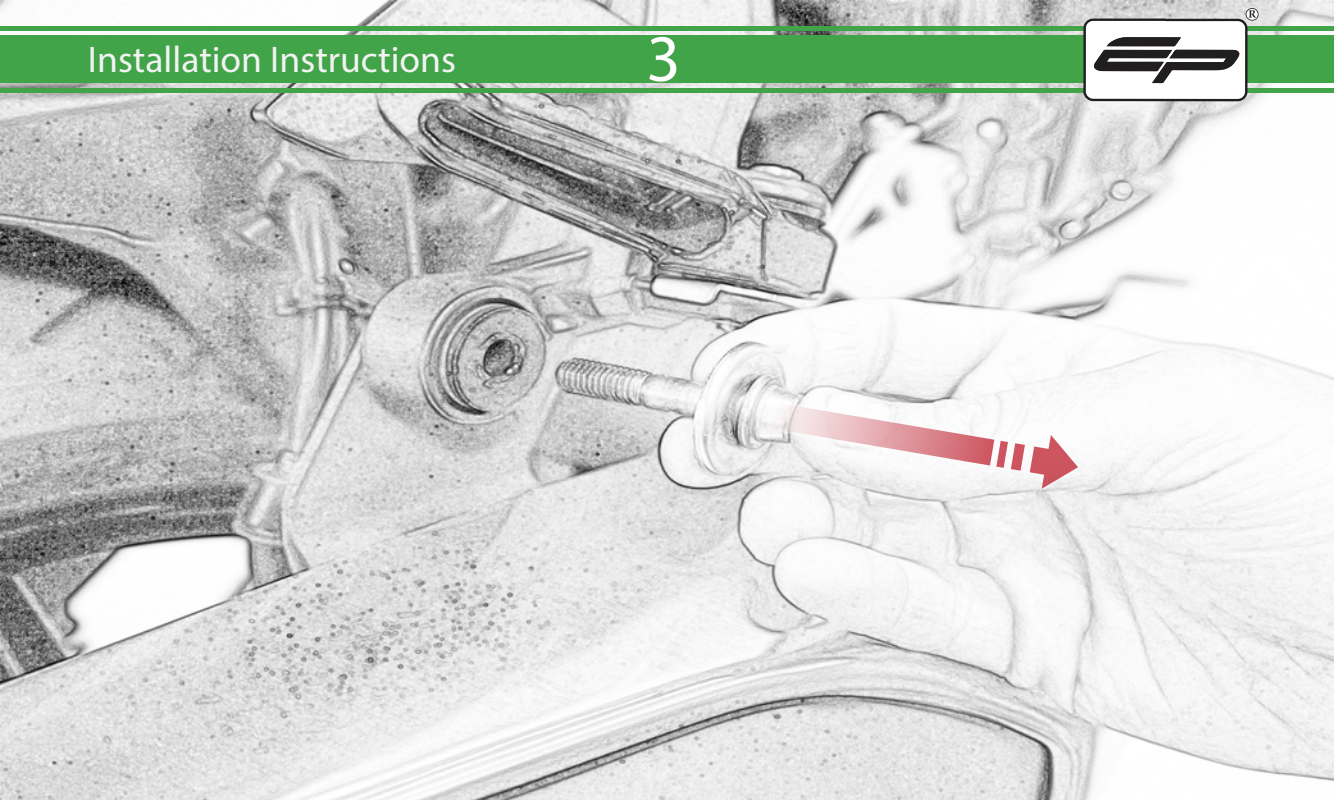


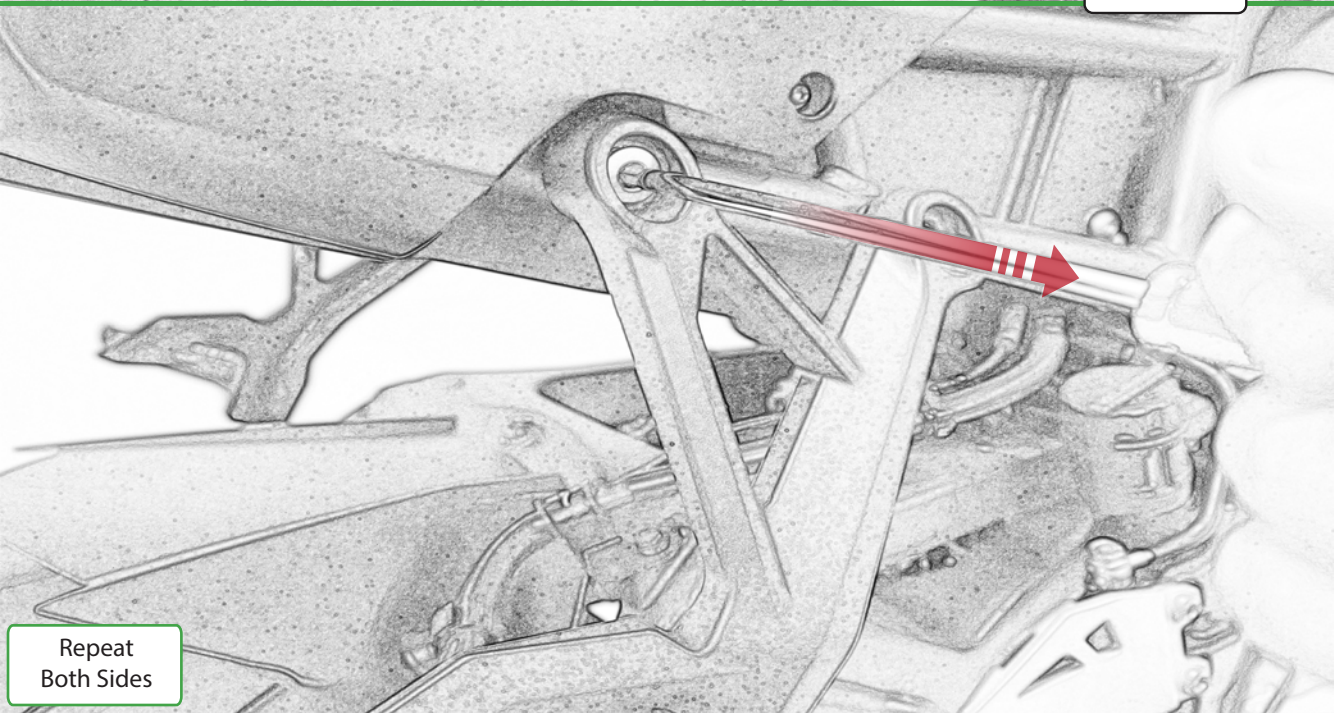


Repeat
Both Sides

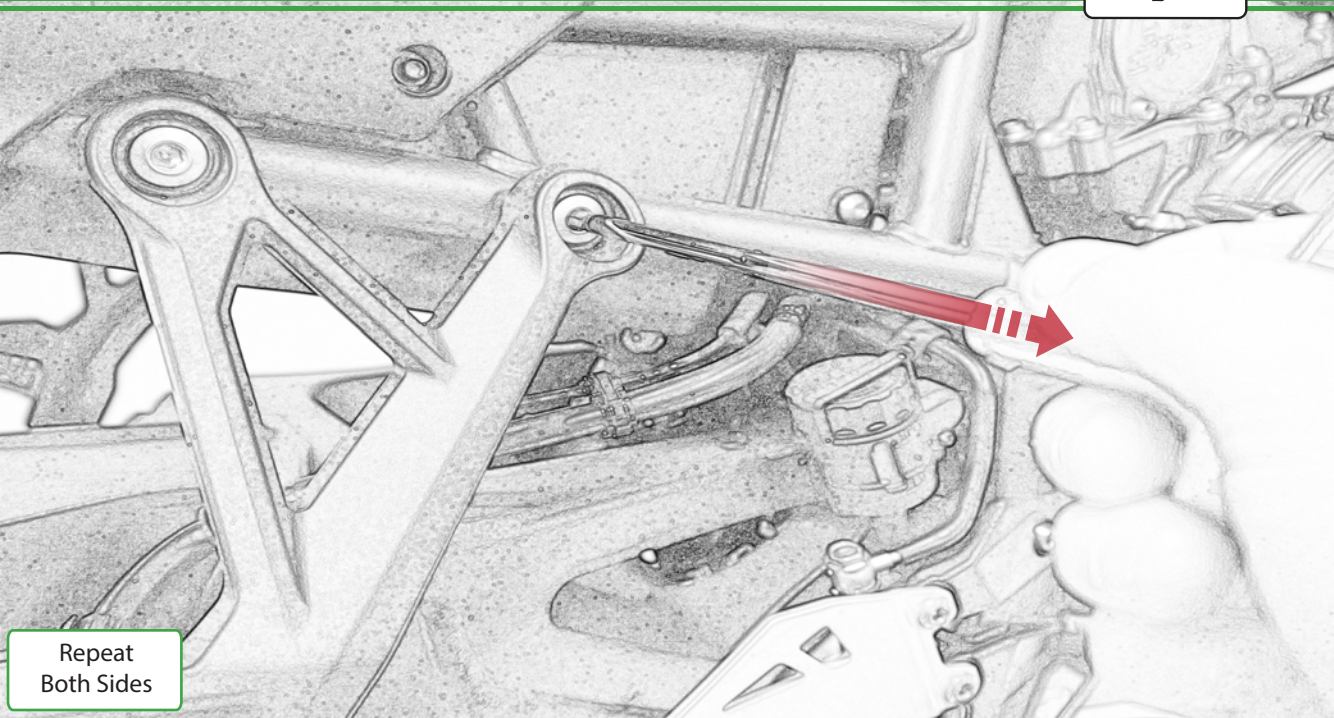



Repeat
Both Sides

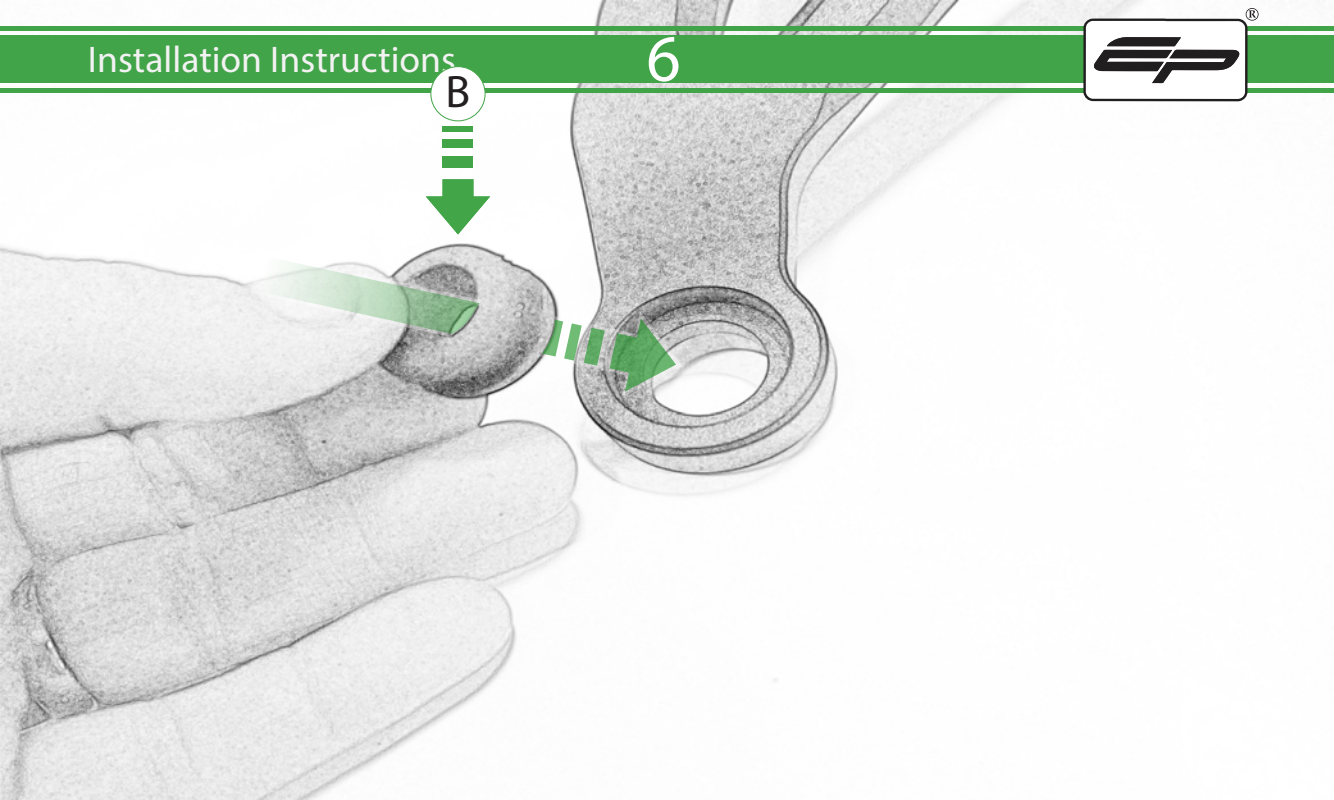




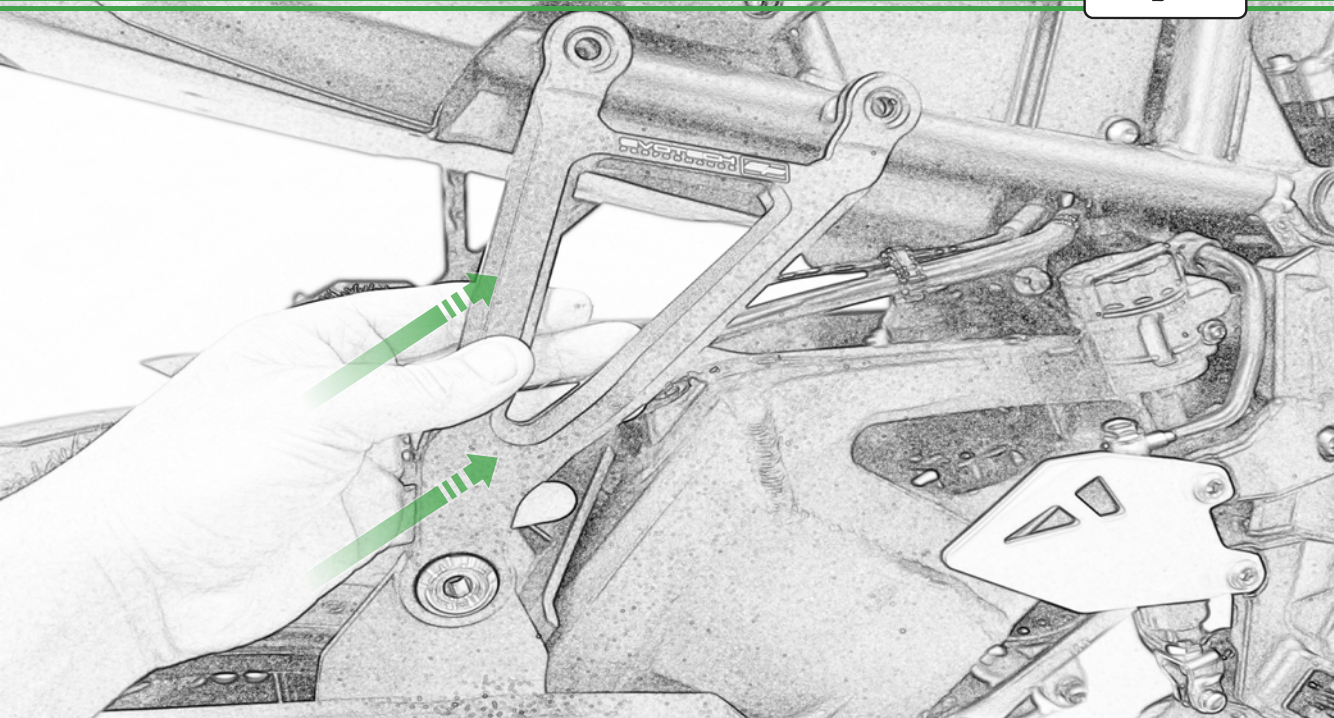

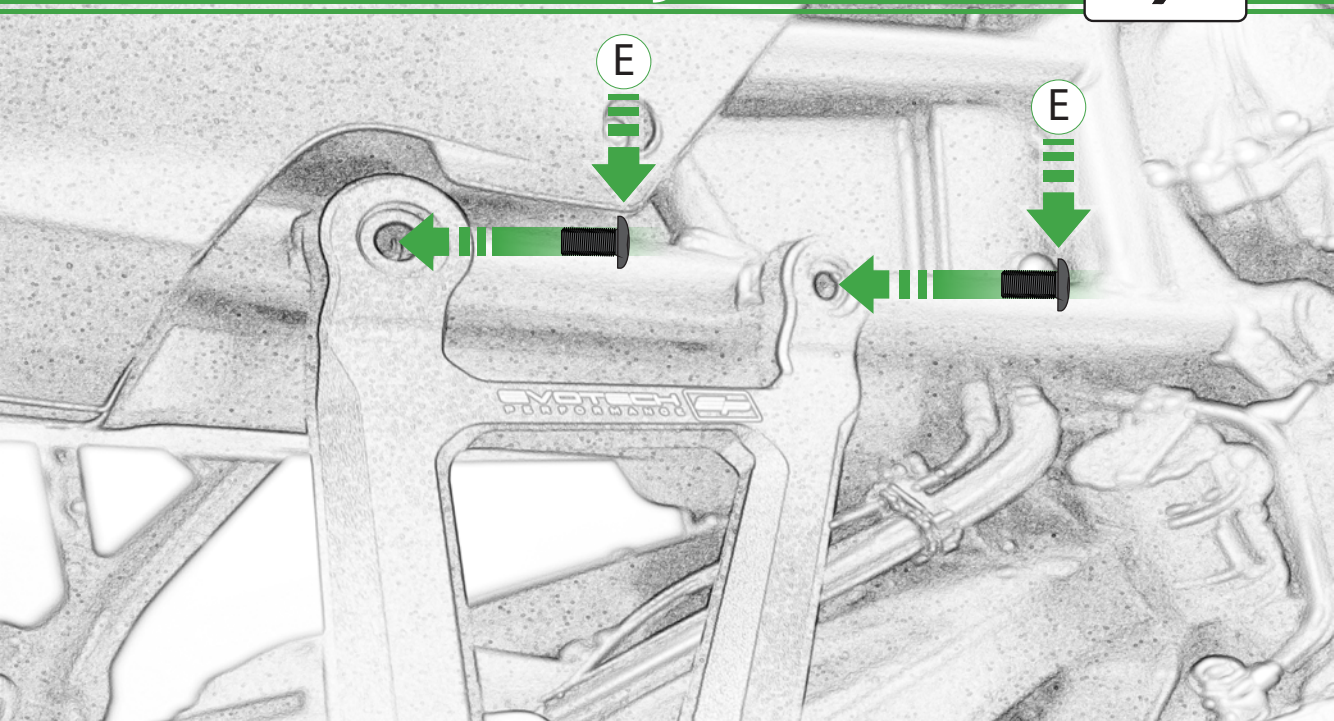

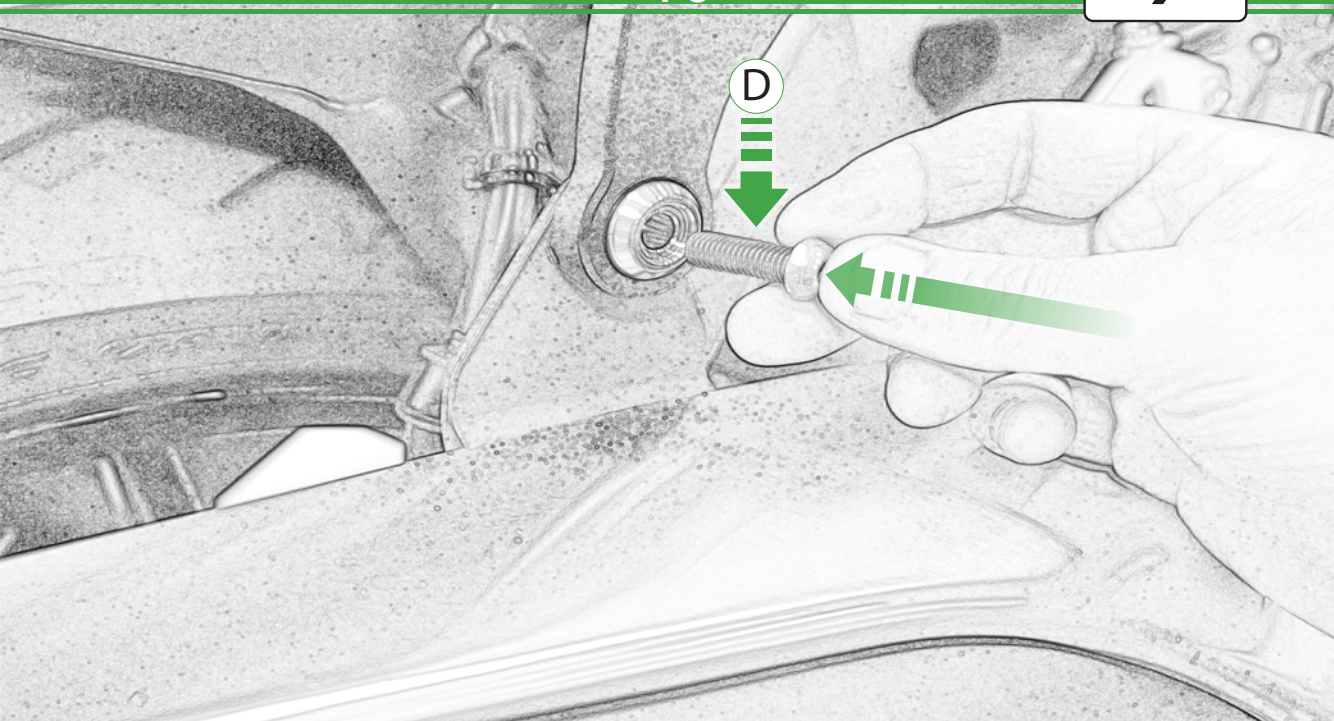



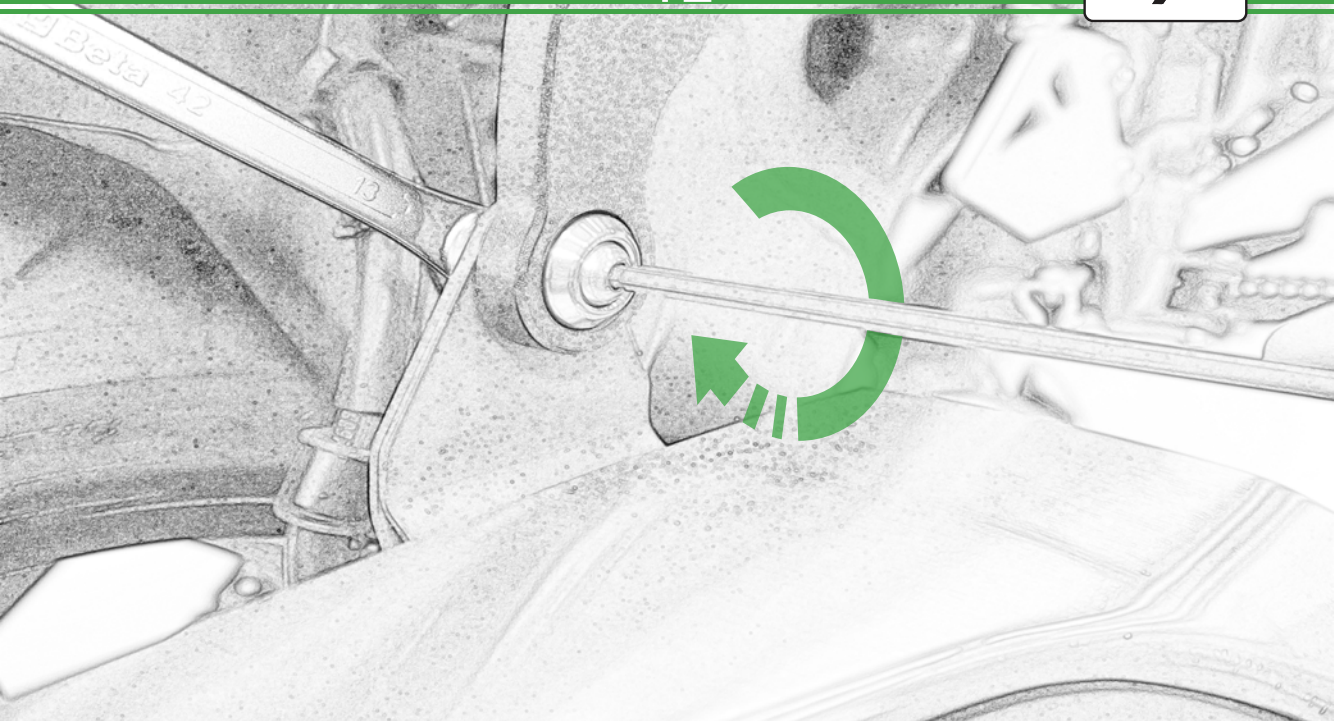



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com