



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Kawasaki Z H2 Crash Protection


Installation Instructions





## Kit Contents PRN014991


- (A) 1 x L/H Bobbin Bracket
- (B) 1 x R/H Bobbin Bracket
- (C) 1 x M10 x 70 Caphead (L/H Only)
- (D) 1 x M10 x 85 Caphead (L/H Only)
- (E) 2 x M10 x 80 Caphead (R/H Only)
- (F) 2 x M12 x 70 Caphead
- (G) 2 x Large Bobbin Head
- (H) 2 x Bobbin Spacer
- (I) 2 x Poly Washer
- (J) 2 x M12 Washer
- (K) 4 x Frame Spacer

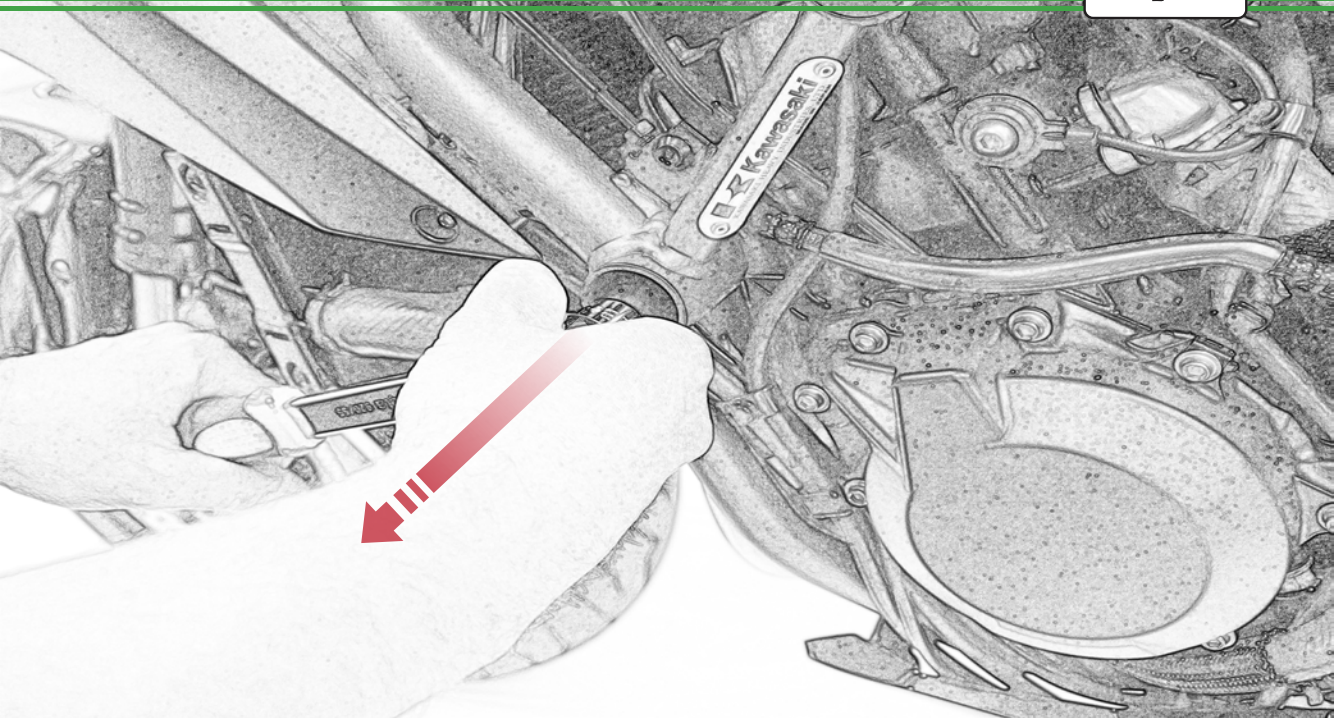

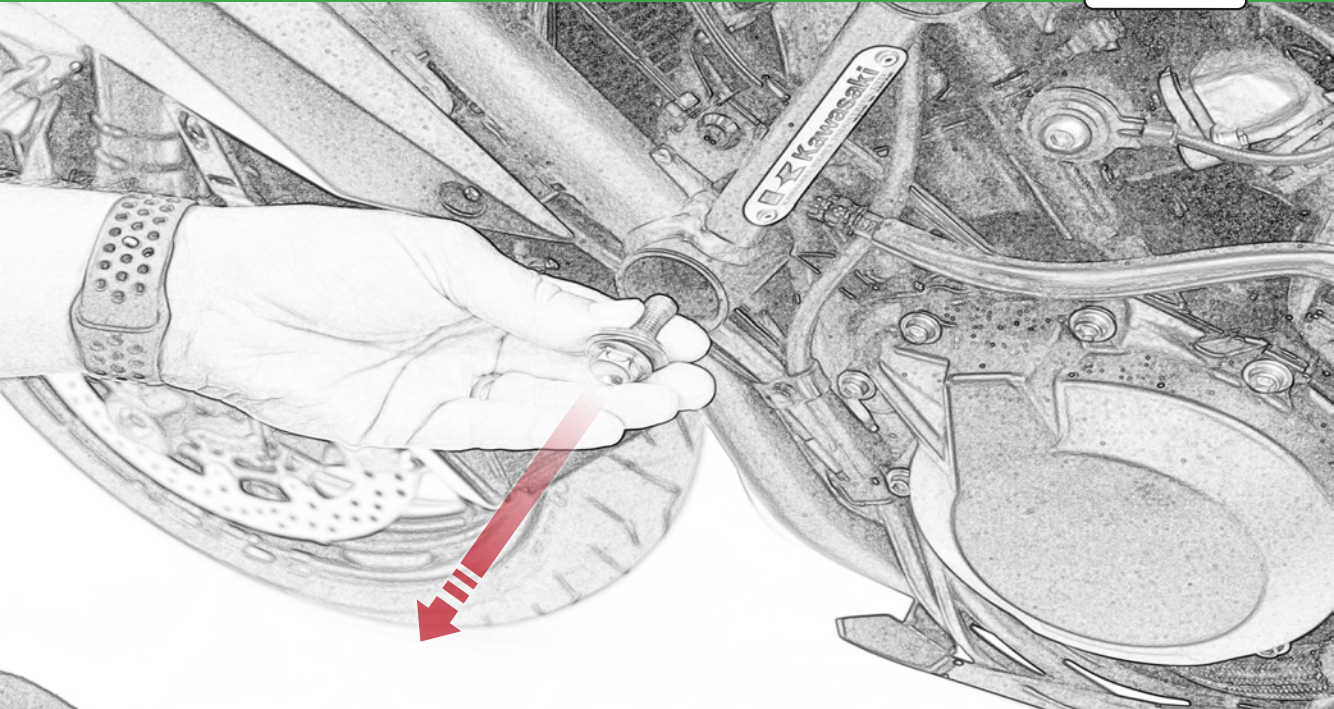


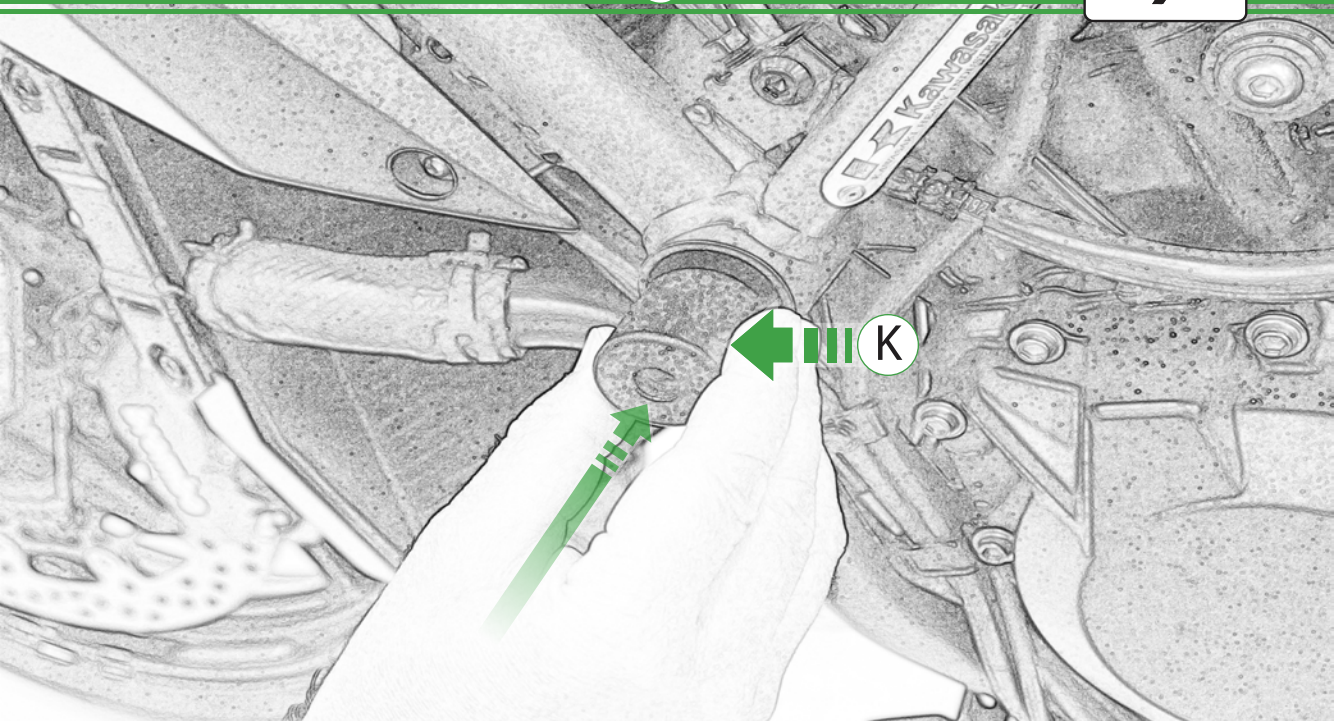

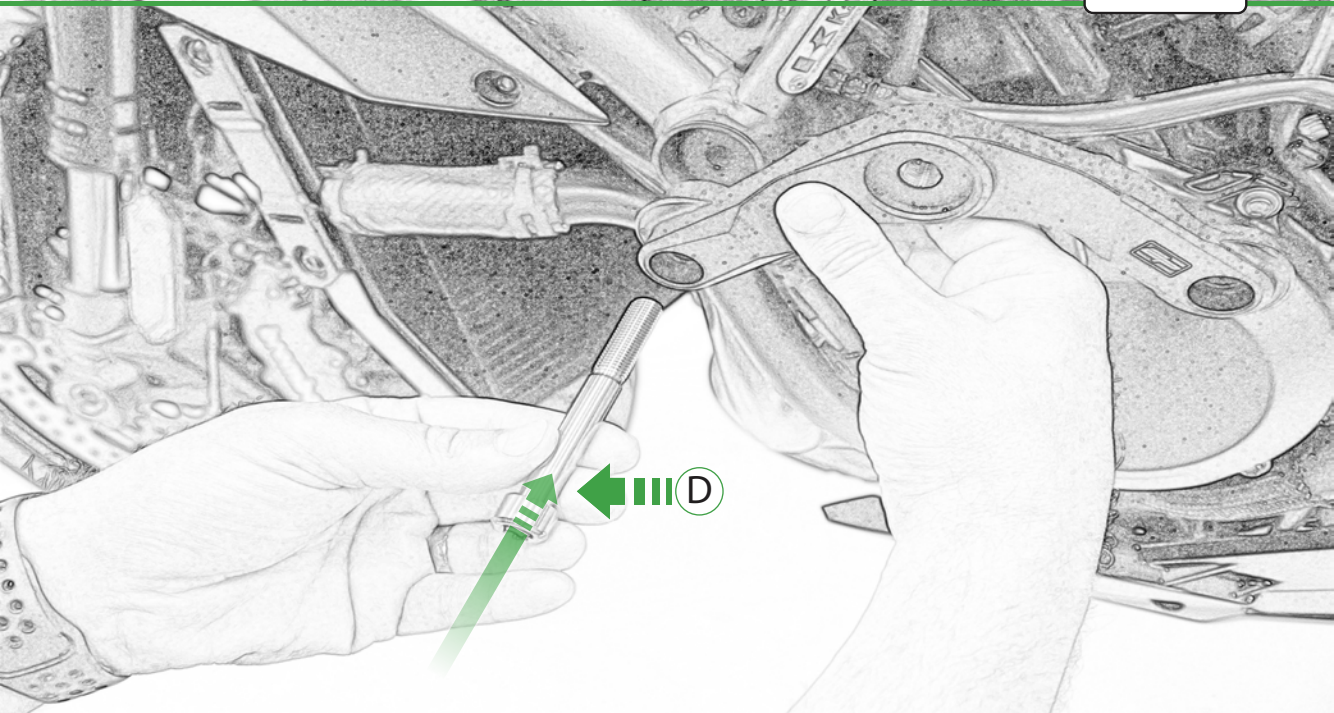


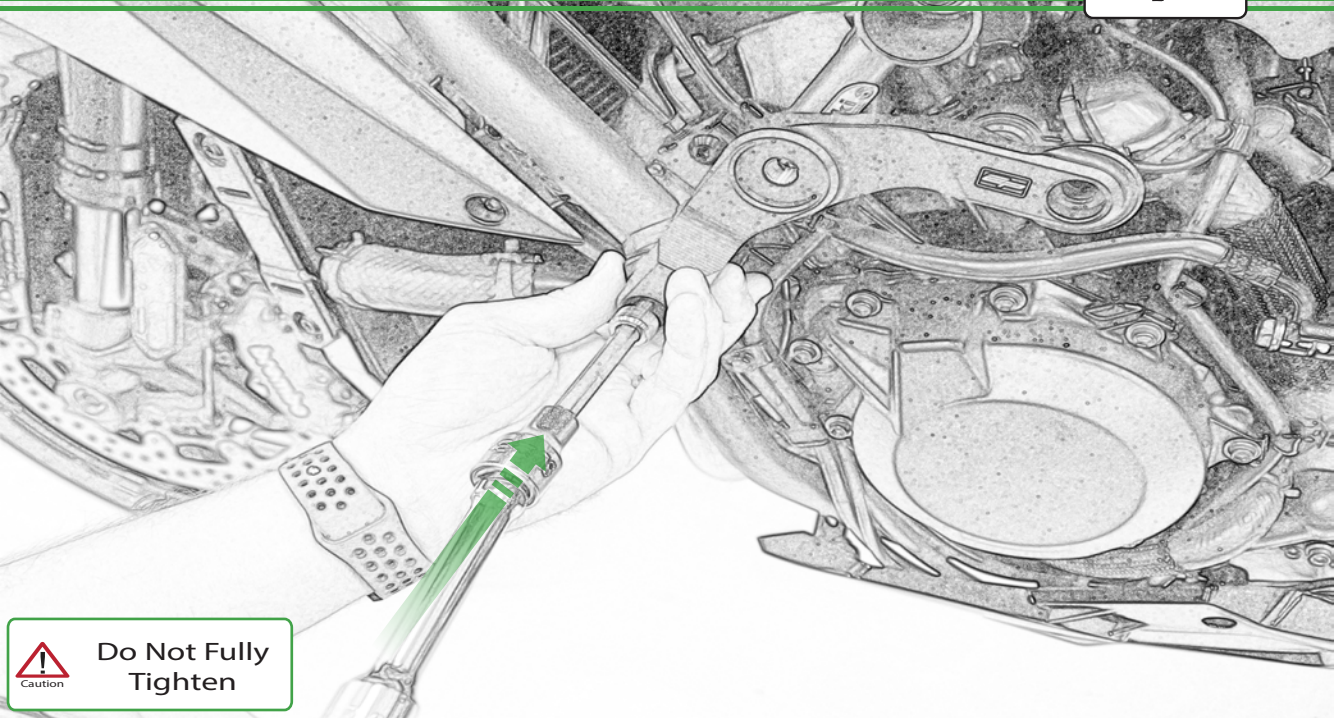


Do Not Fully  
Tighten

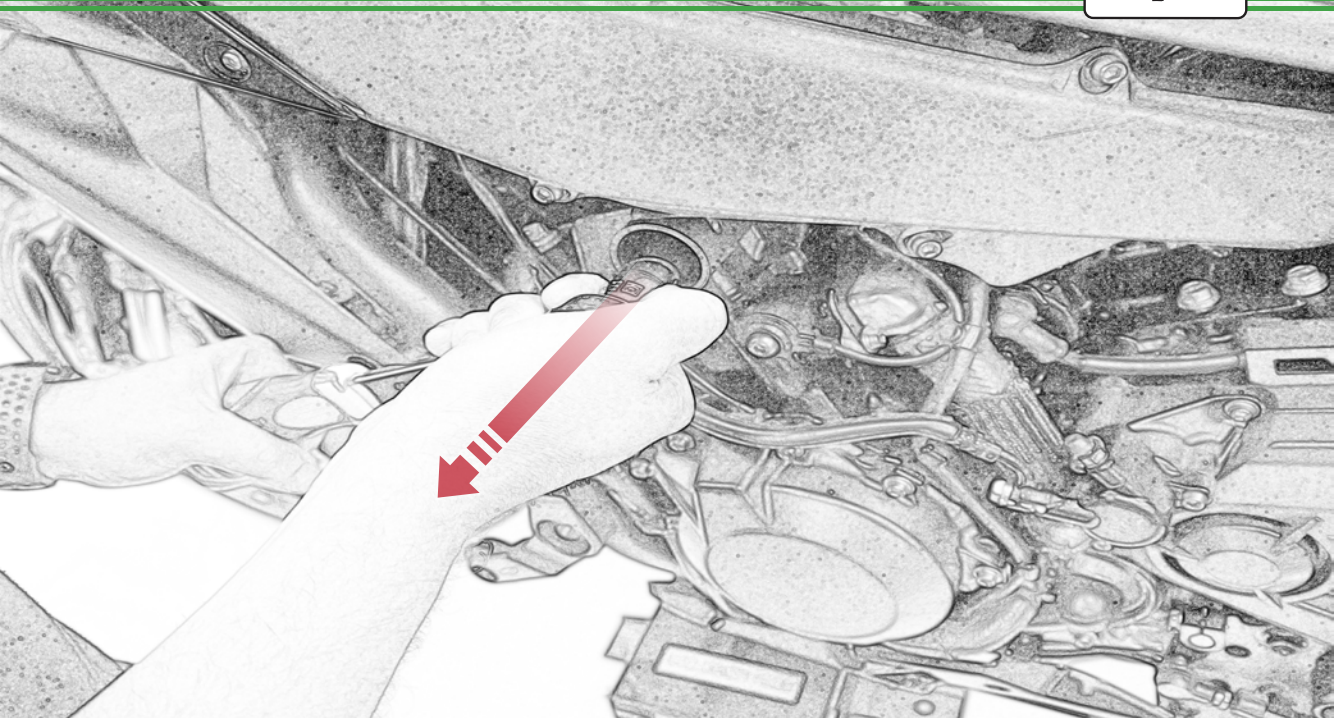





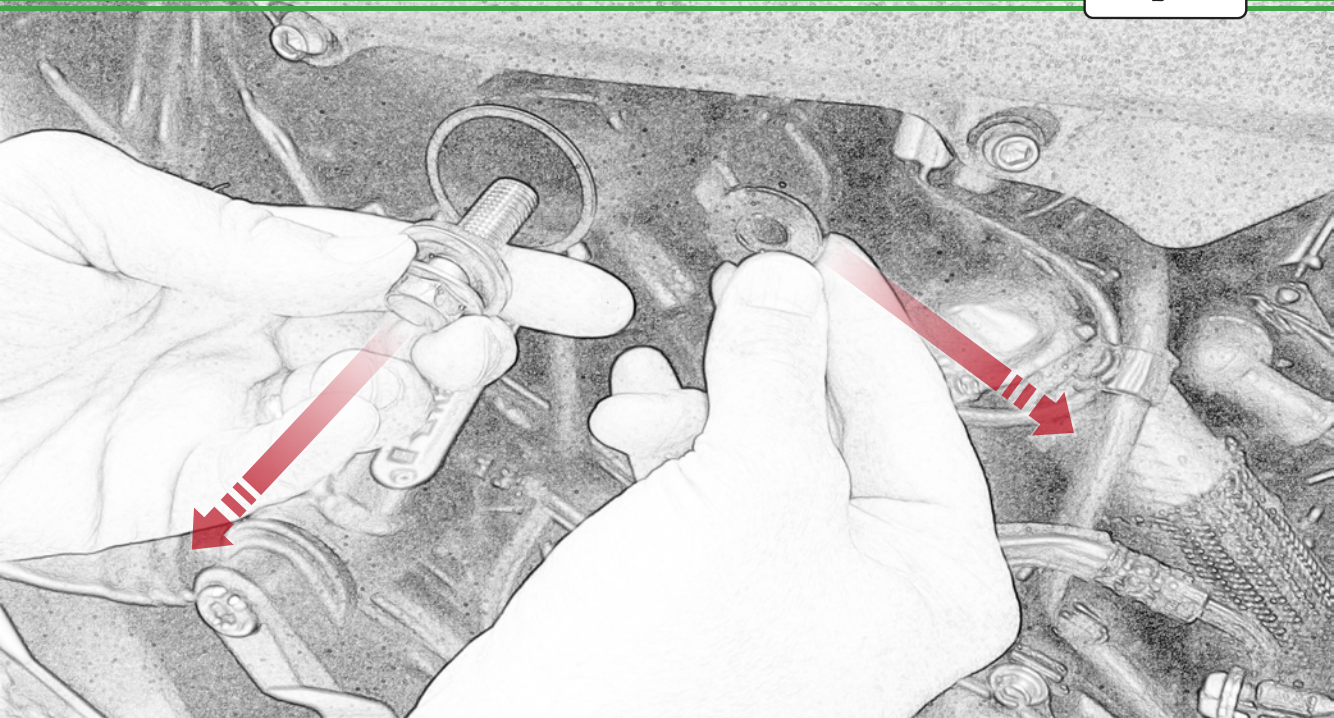




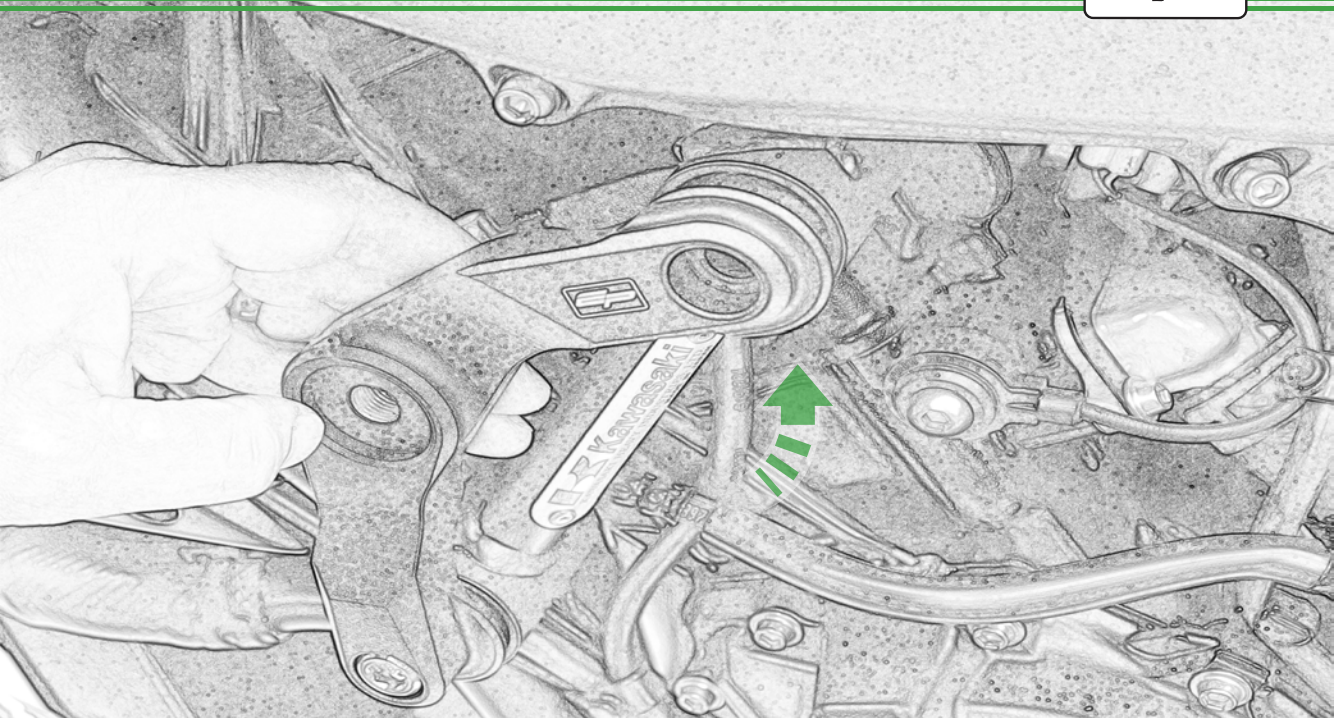

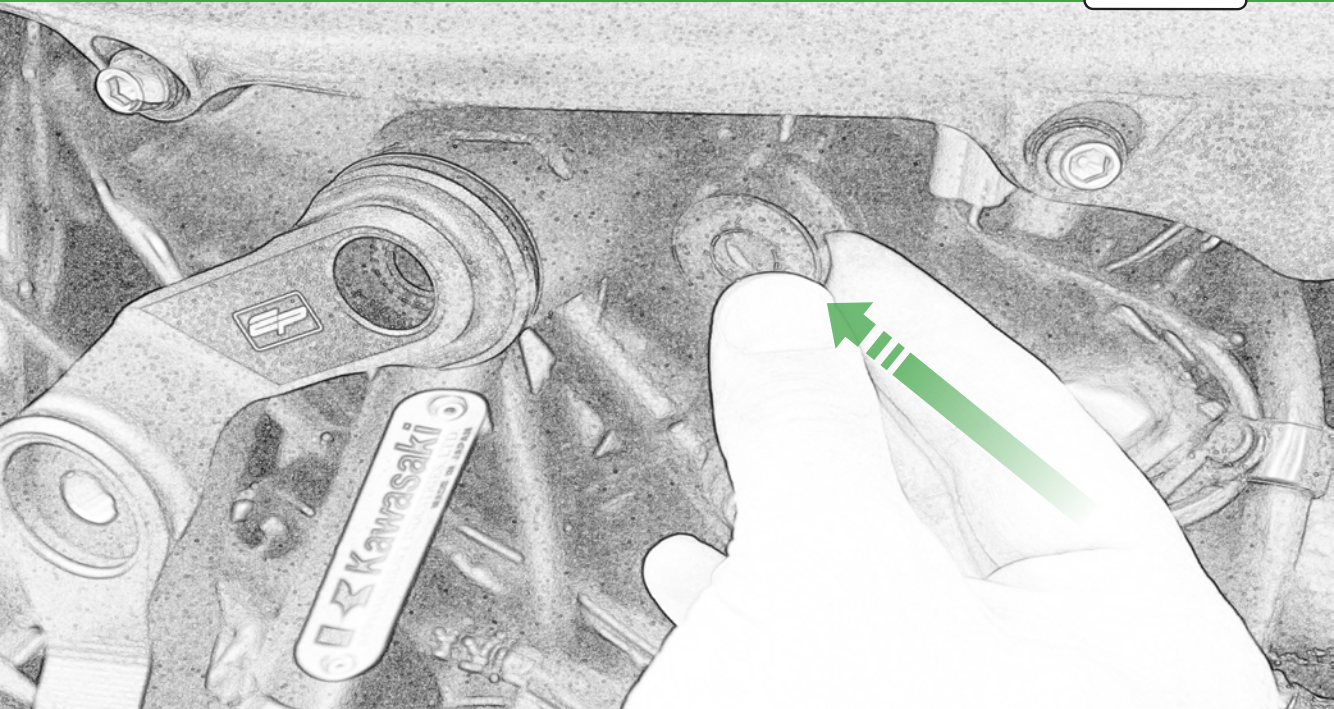


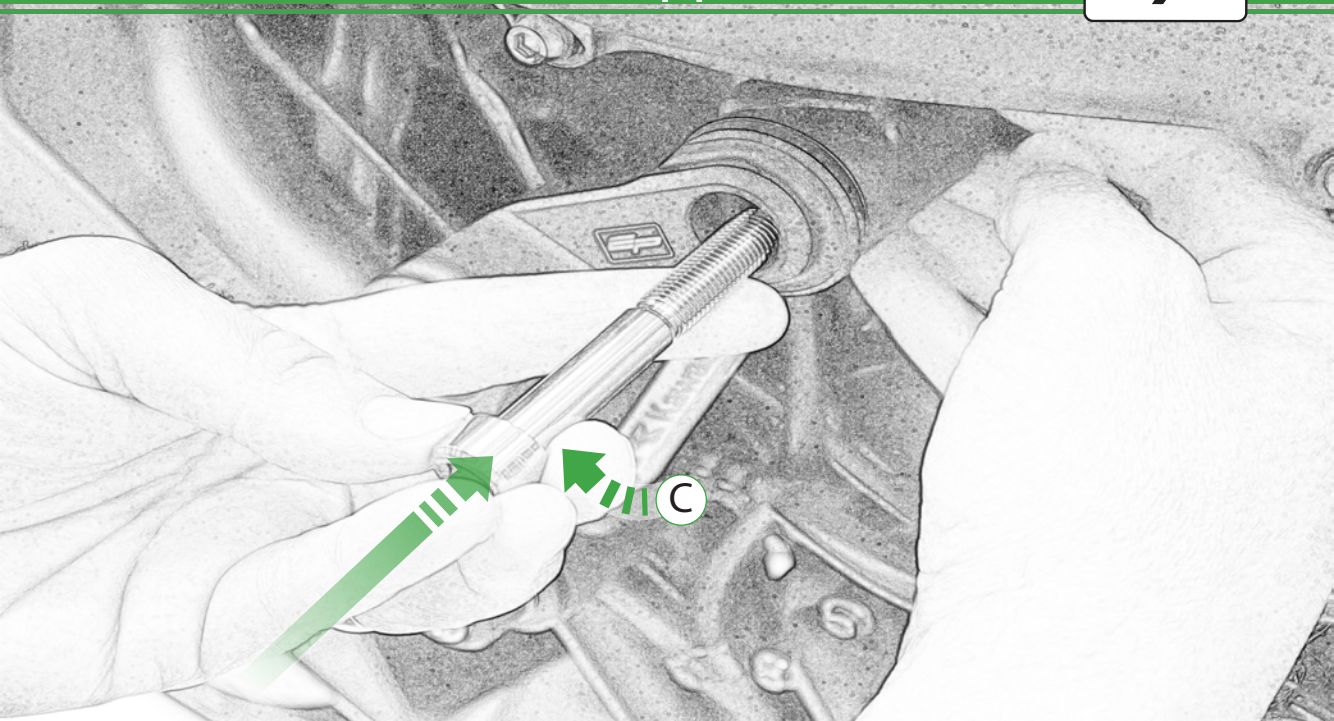

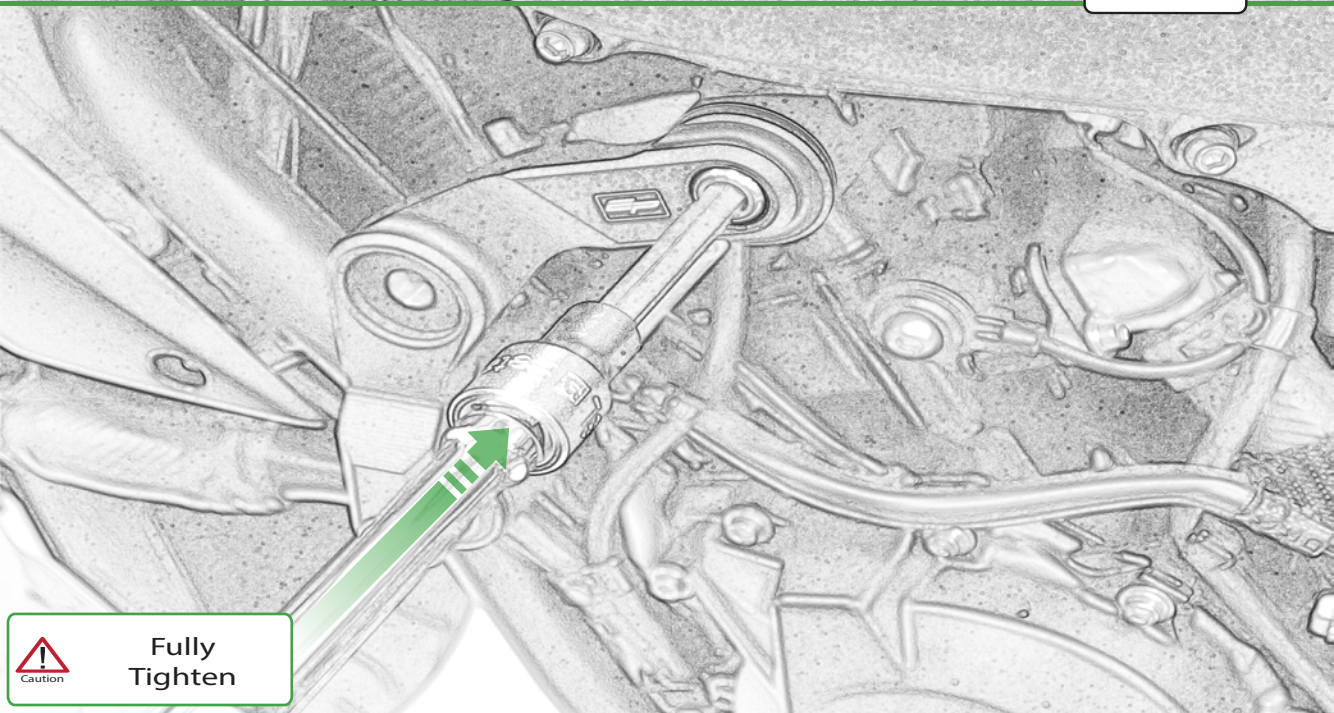


Caution

Fully  
Tighten

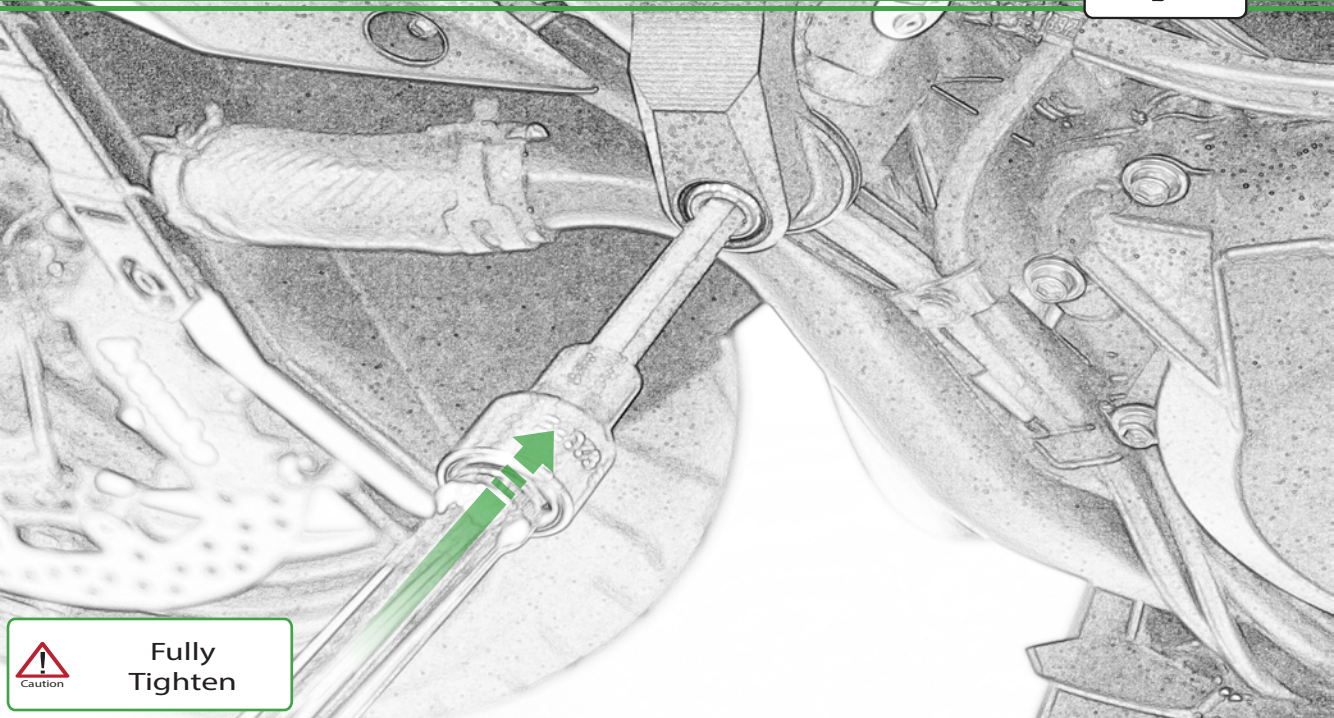


Fully  
Tighten

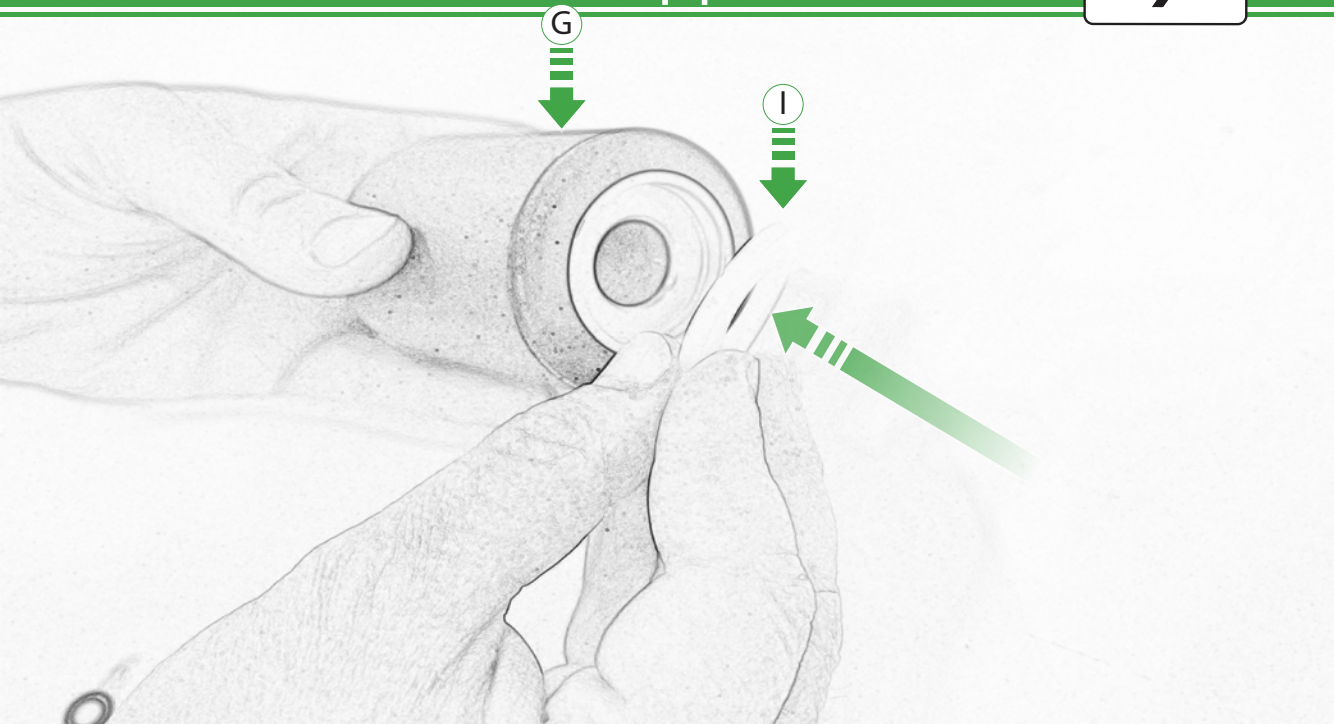







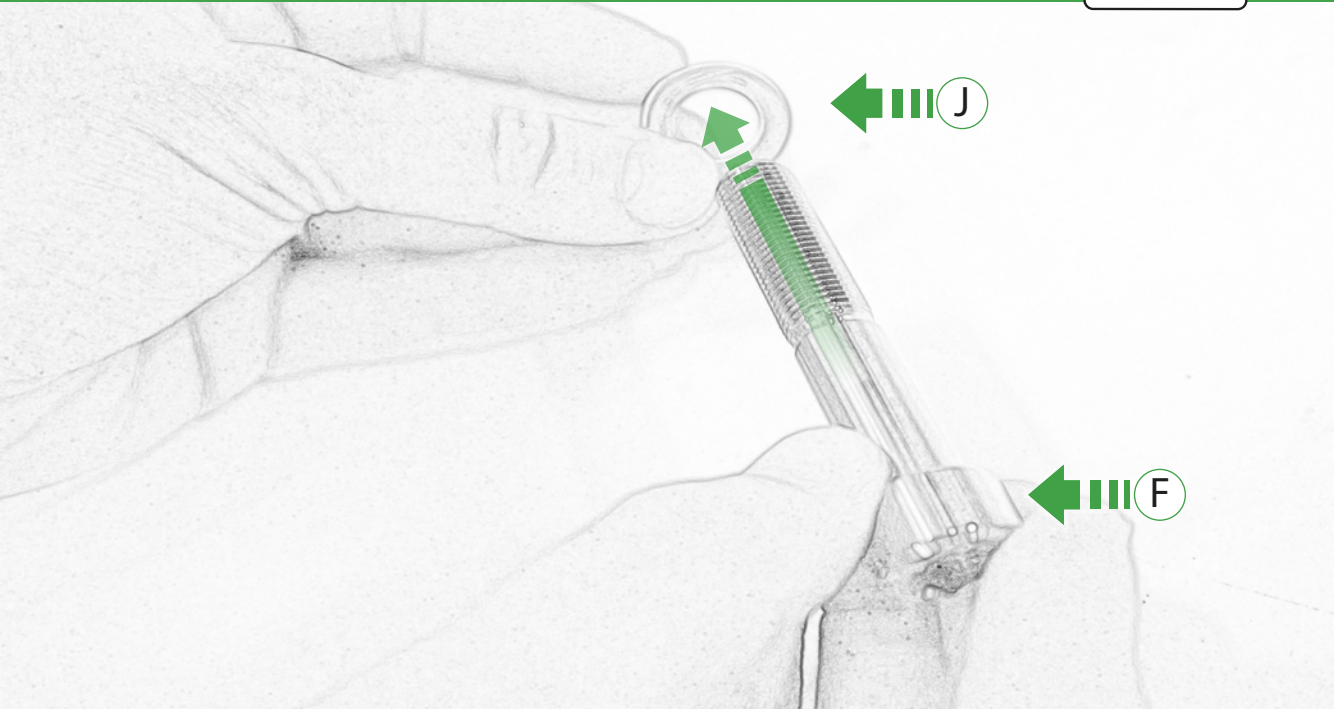



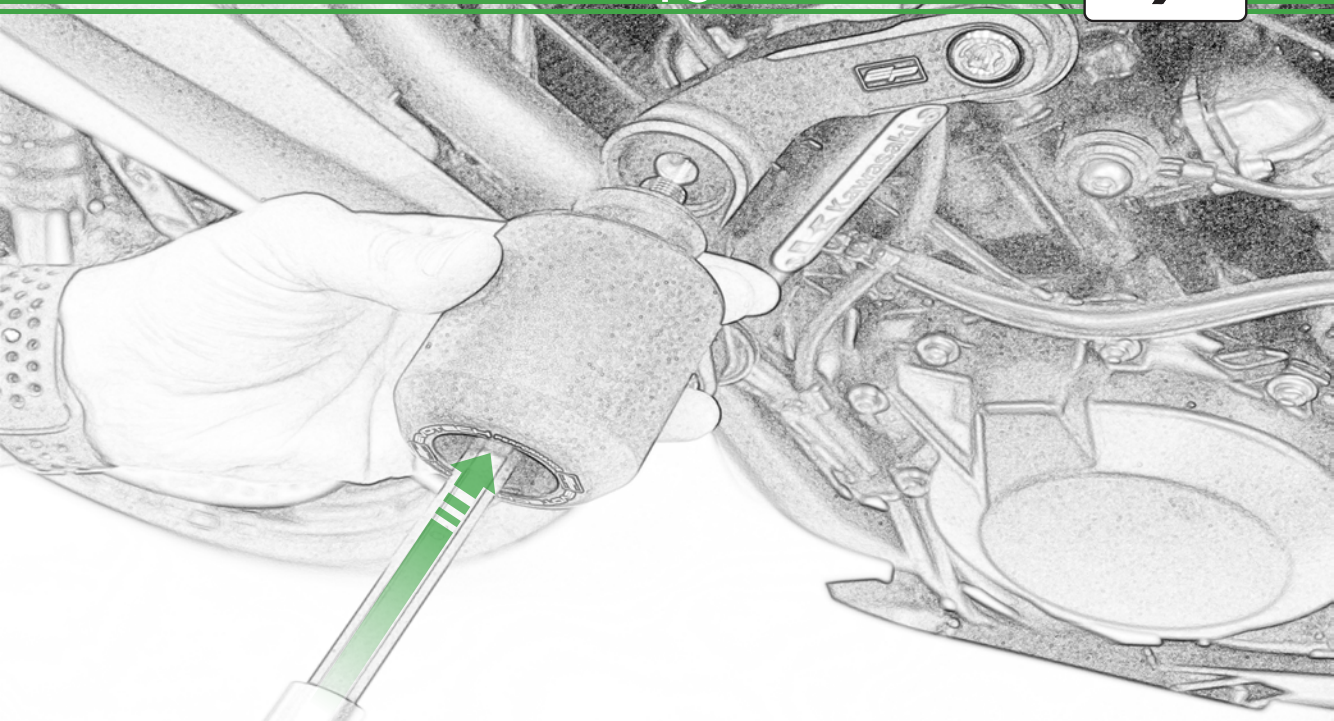

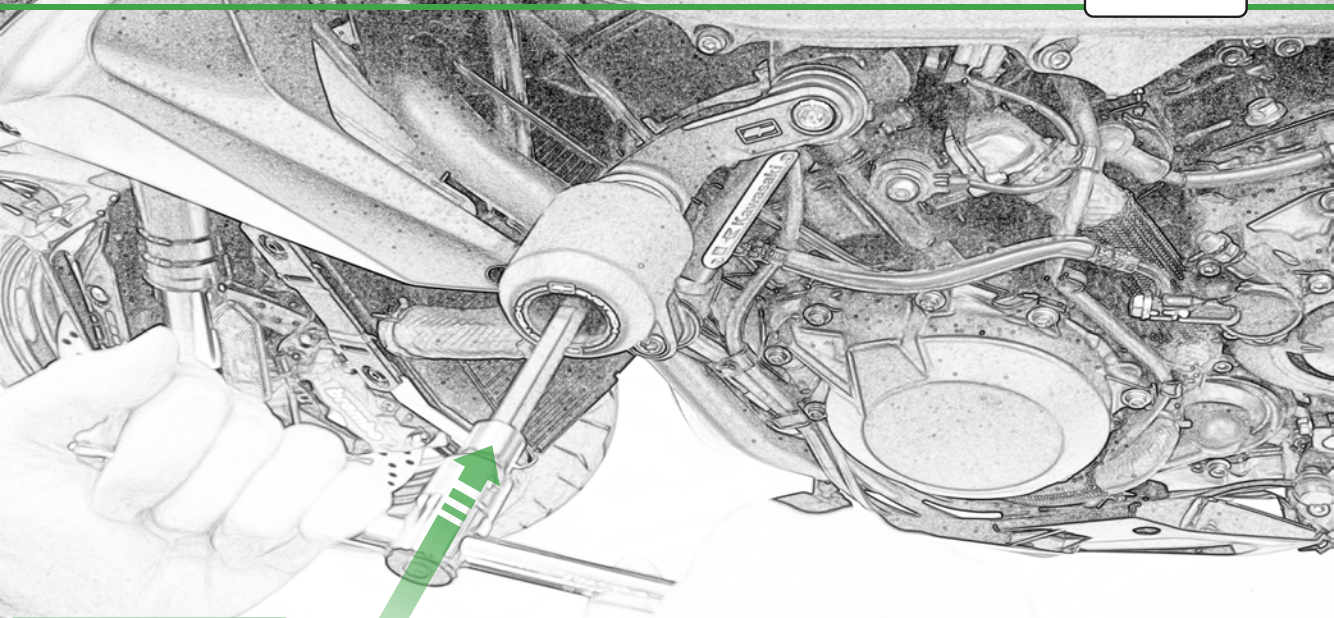

Caution

Fully  
Tighten



Repeat Stages

1 - 19

For Right Hand Side



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)