

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


KTM 1290 Super Duke R Fly Screen


Installation Instructions




Kit Contents PRN015199

- (A) 1 x Fly Screen
- (B) 1 x Mounting Bracket
- (C) 1 x Special Washer
- (D) 1 x M5 x 20 Black Button Head
- (E) 4 x M5 x 10 Black Button Head

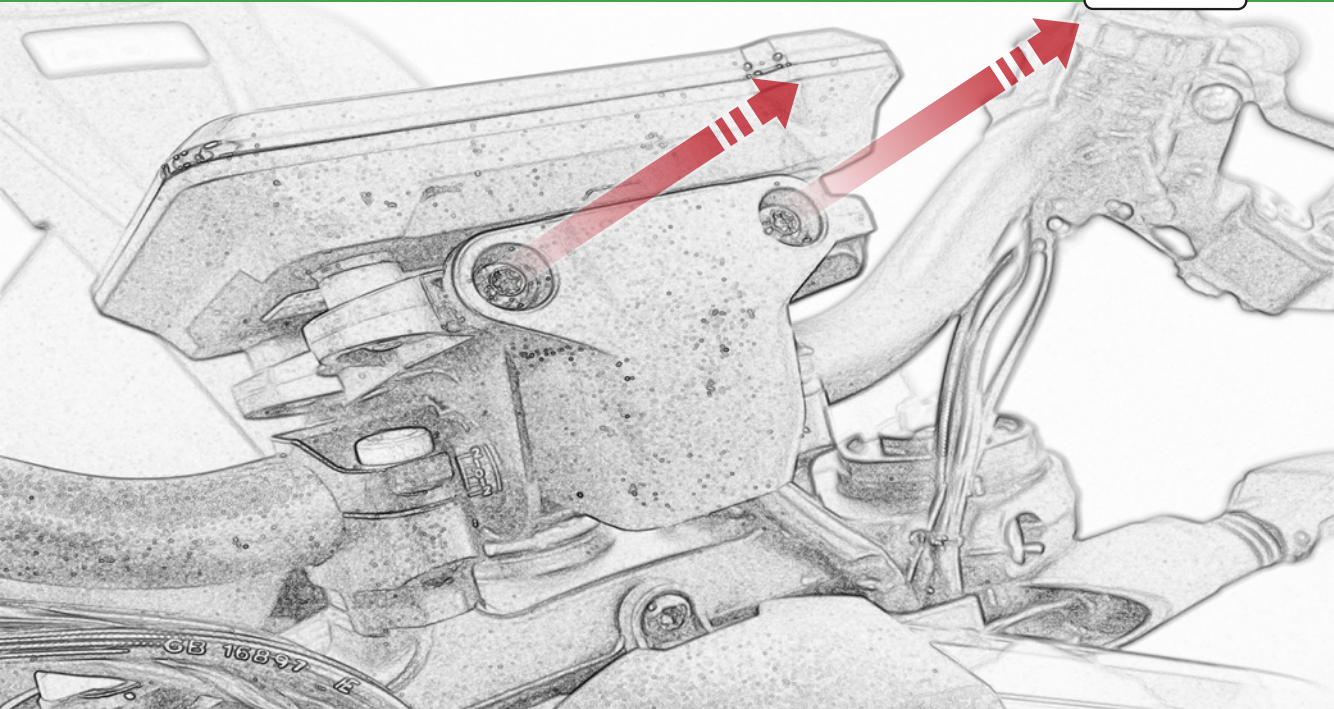


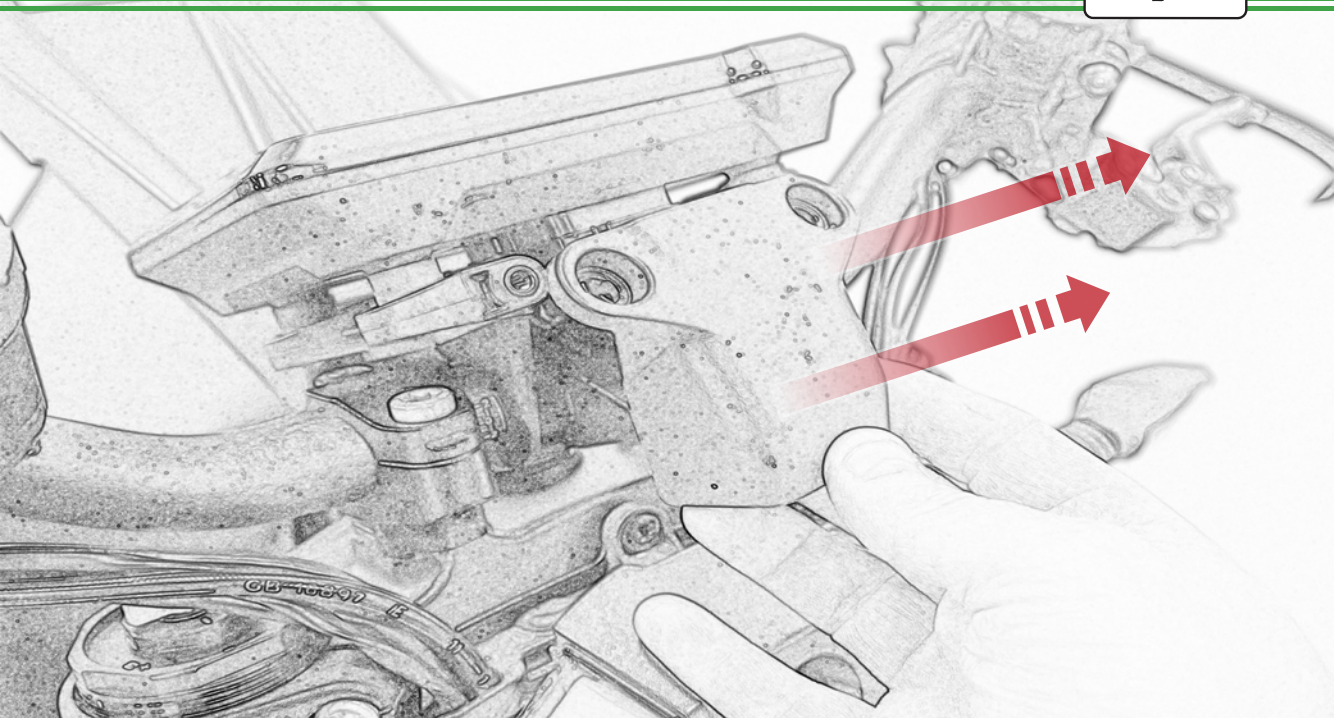


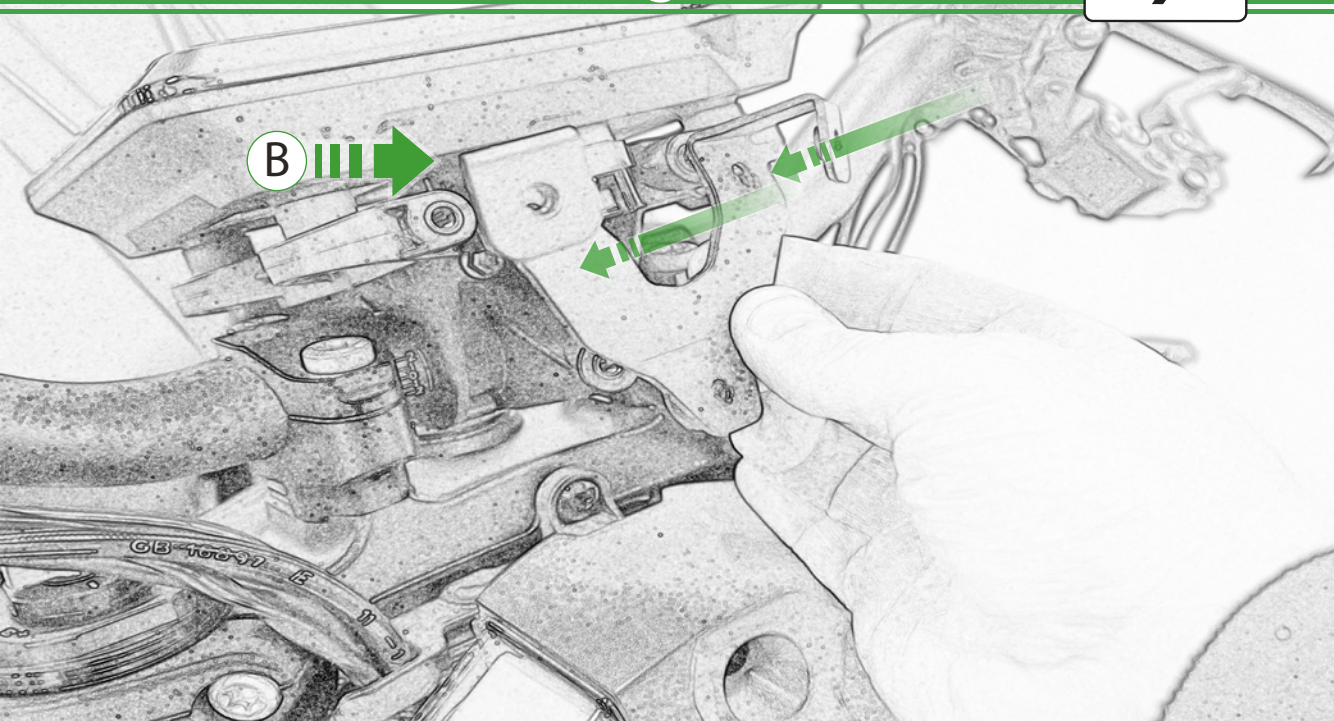



B


GB-TW-97-15

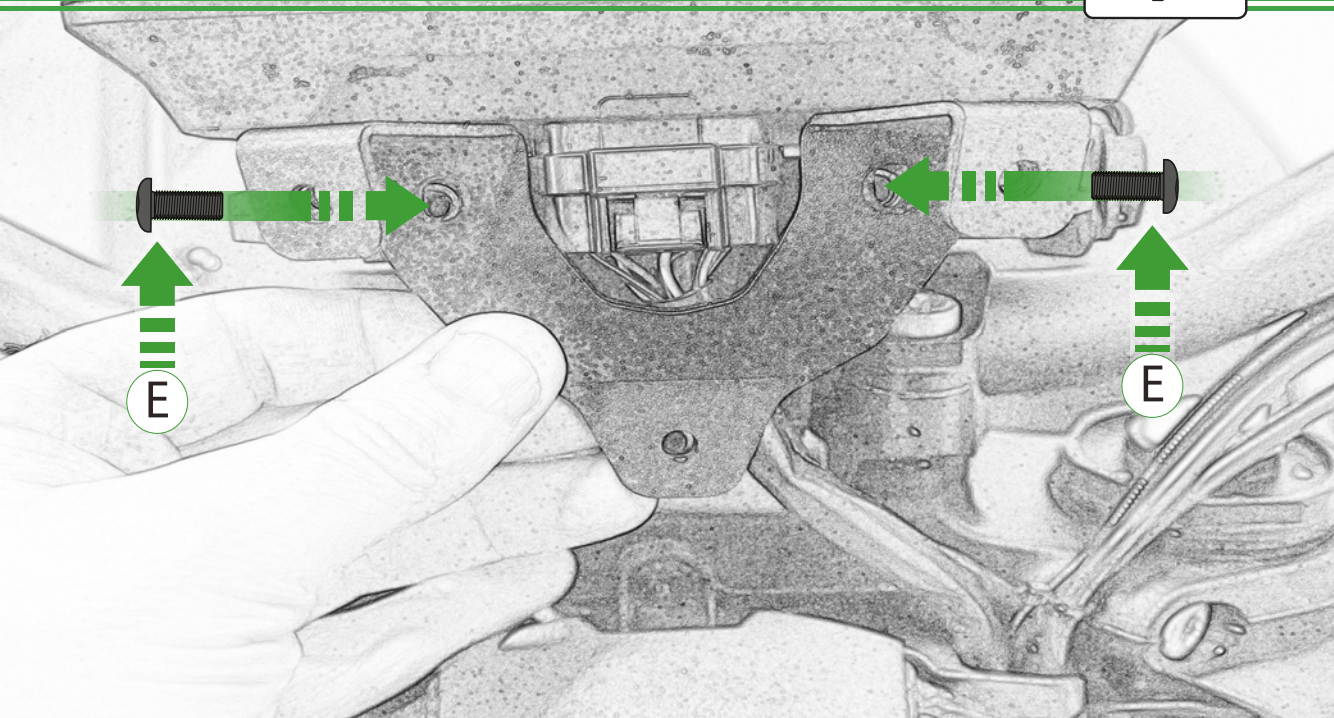


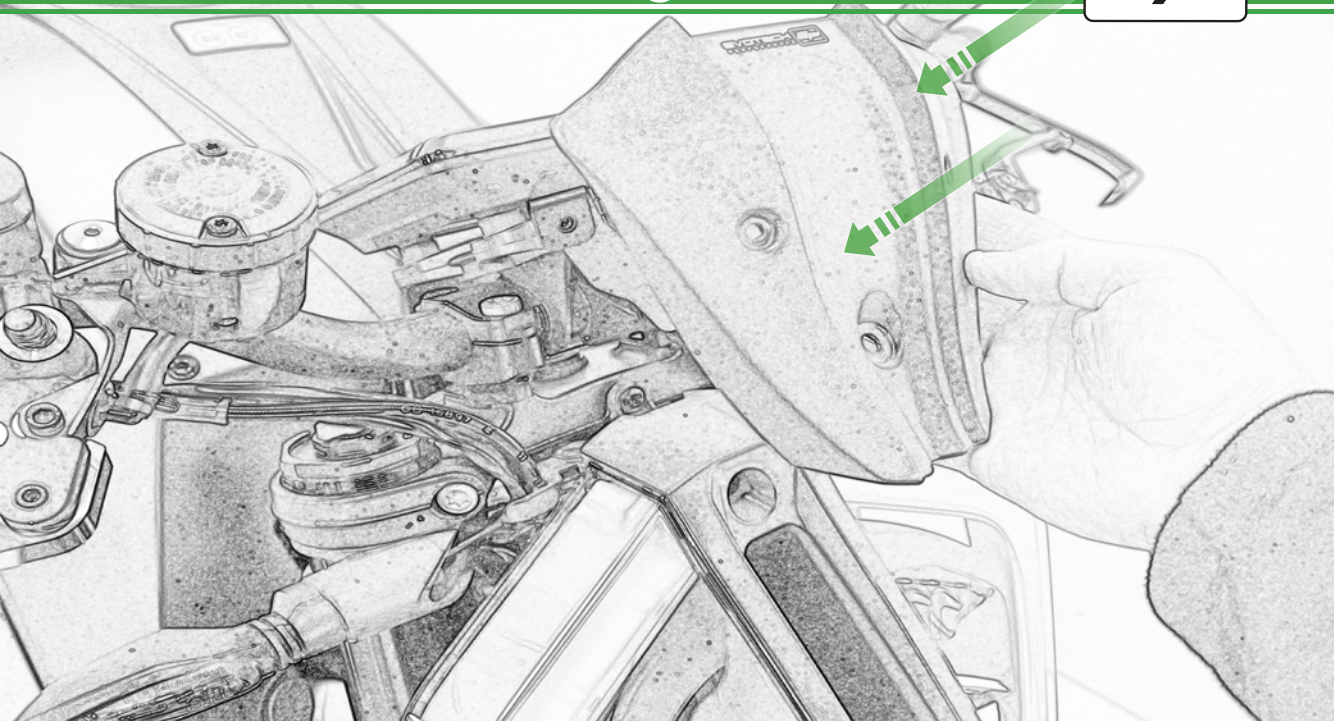

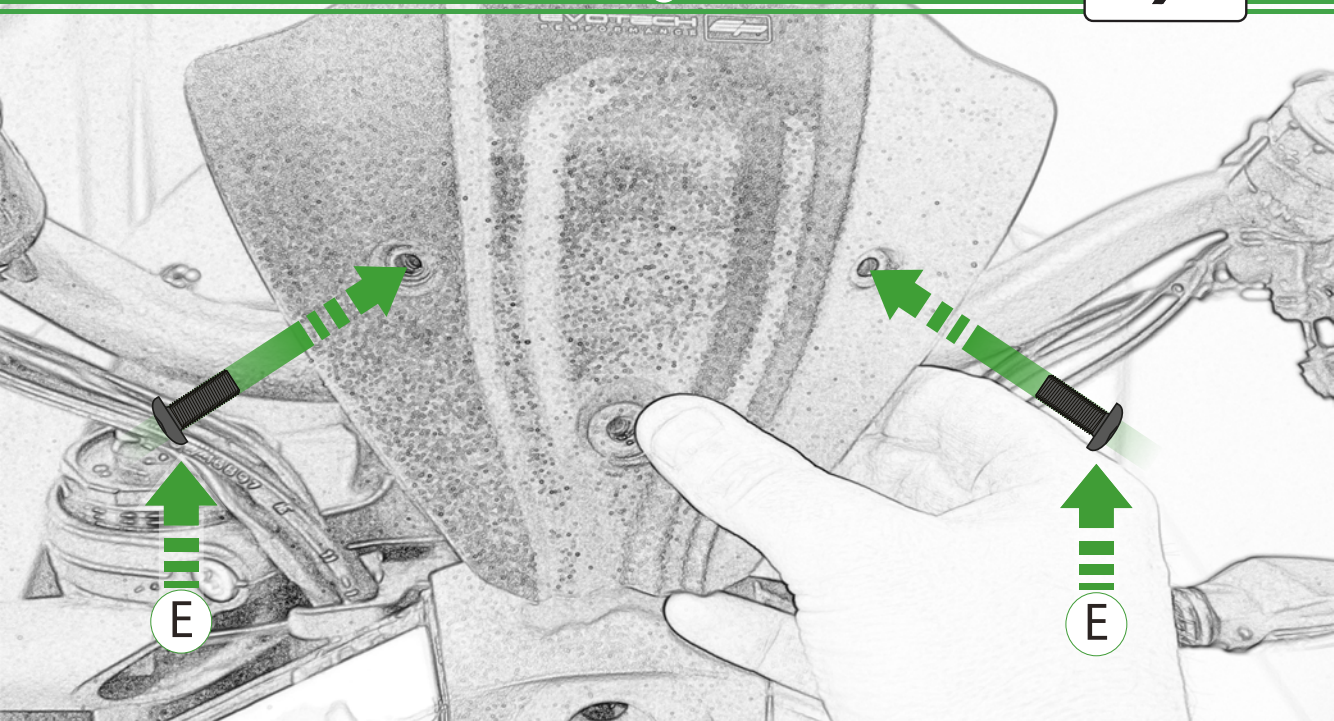

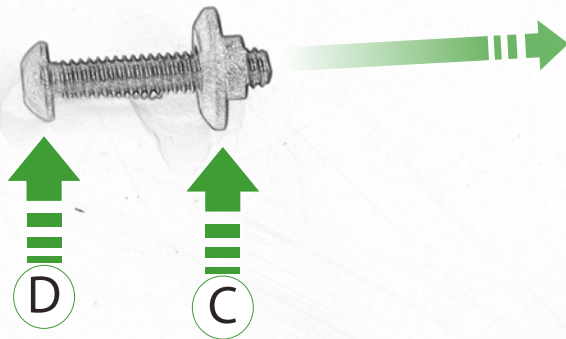

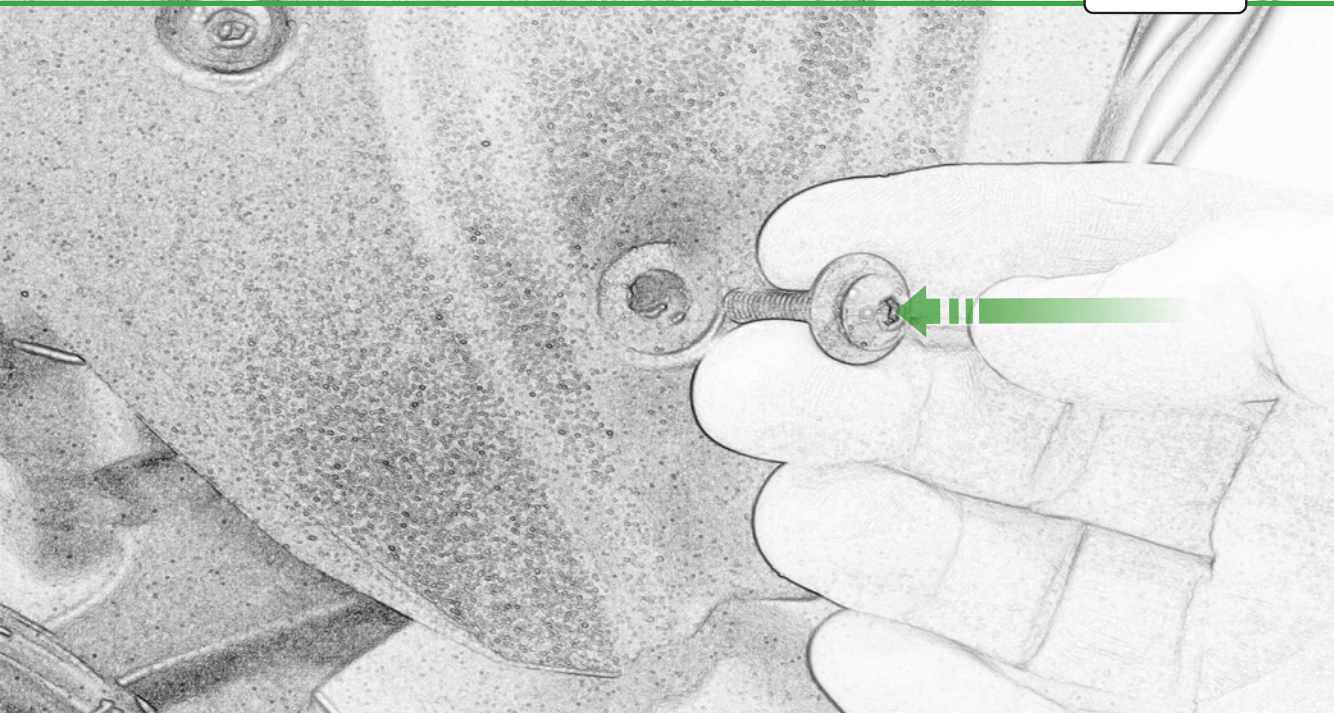

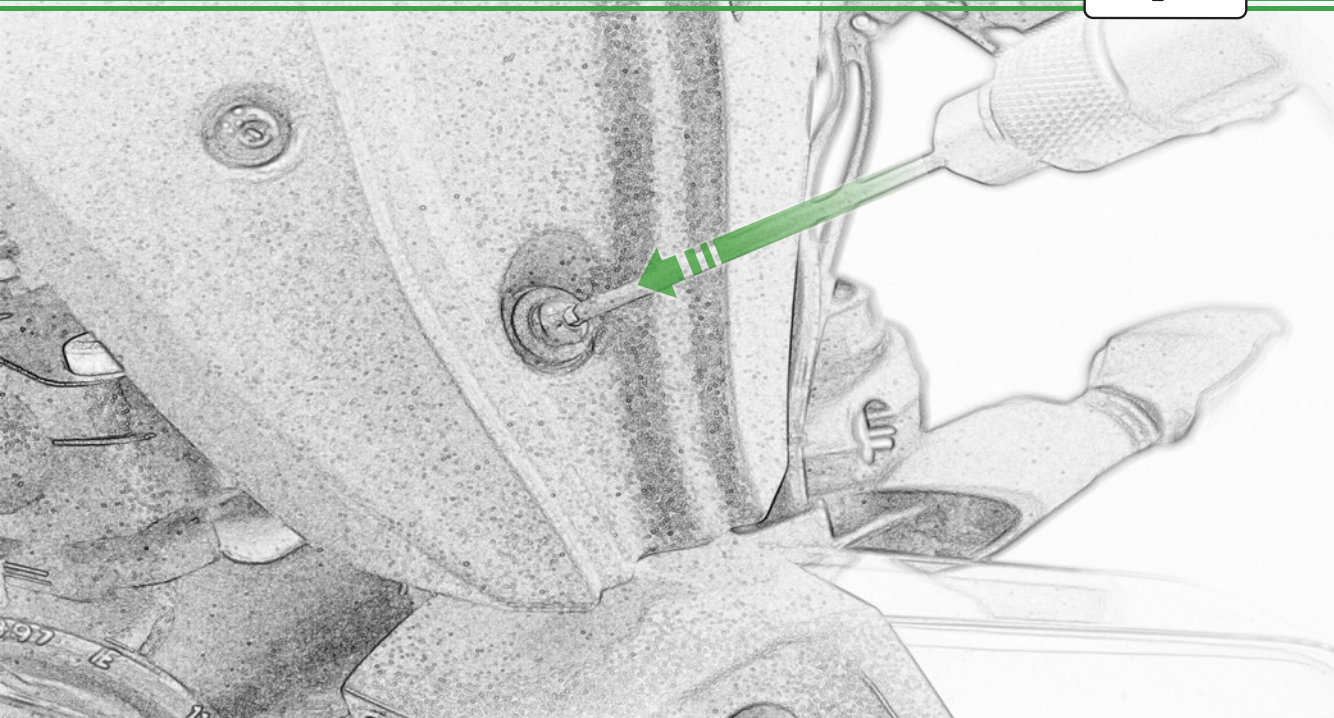



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com