



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Triumph Trident

Installation Instructions




Kit Contents PRN015344

Ⓐ 6 x Rubber Bungs







Repeat
Both Sides

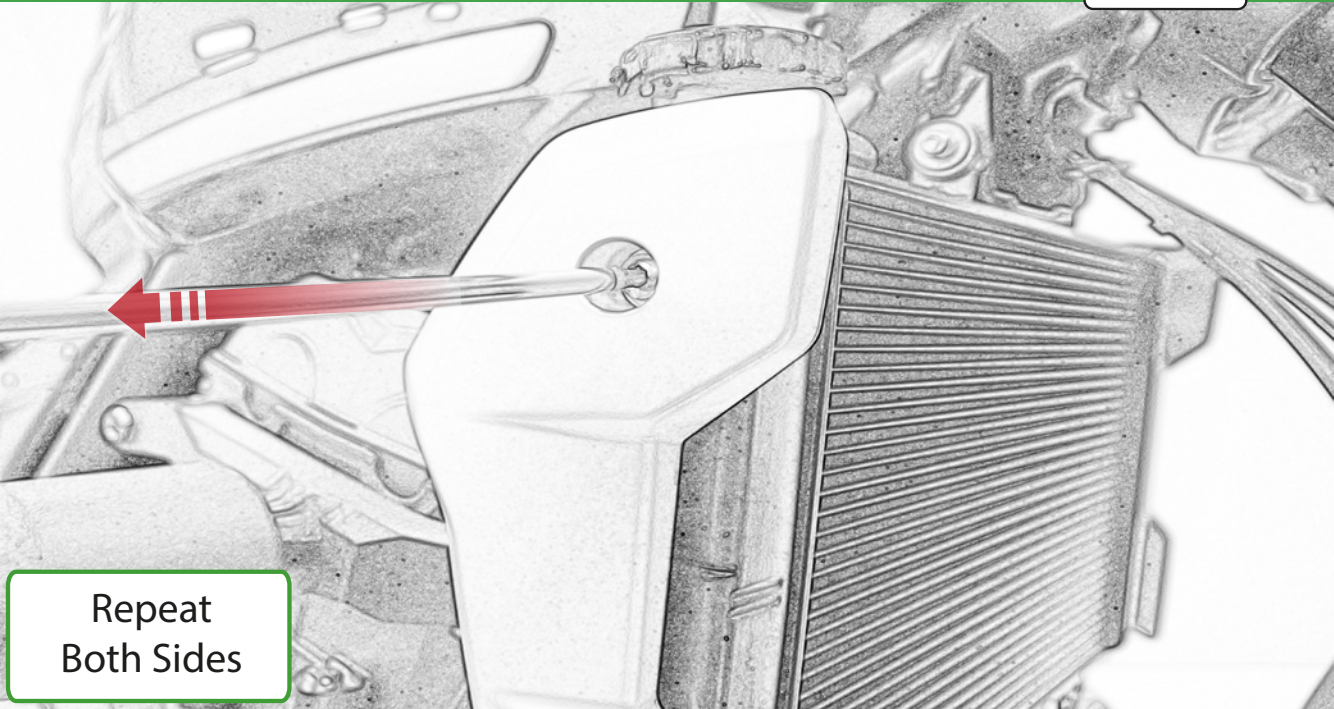

Repeat
Both Sides

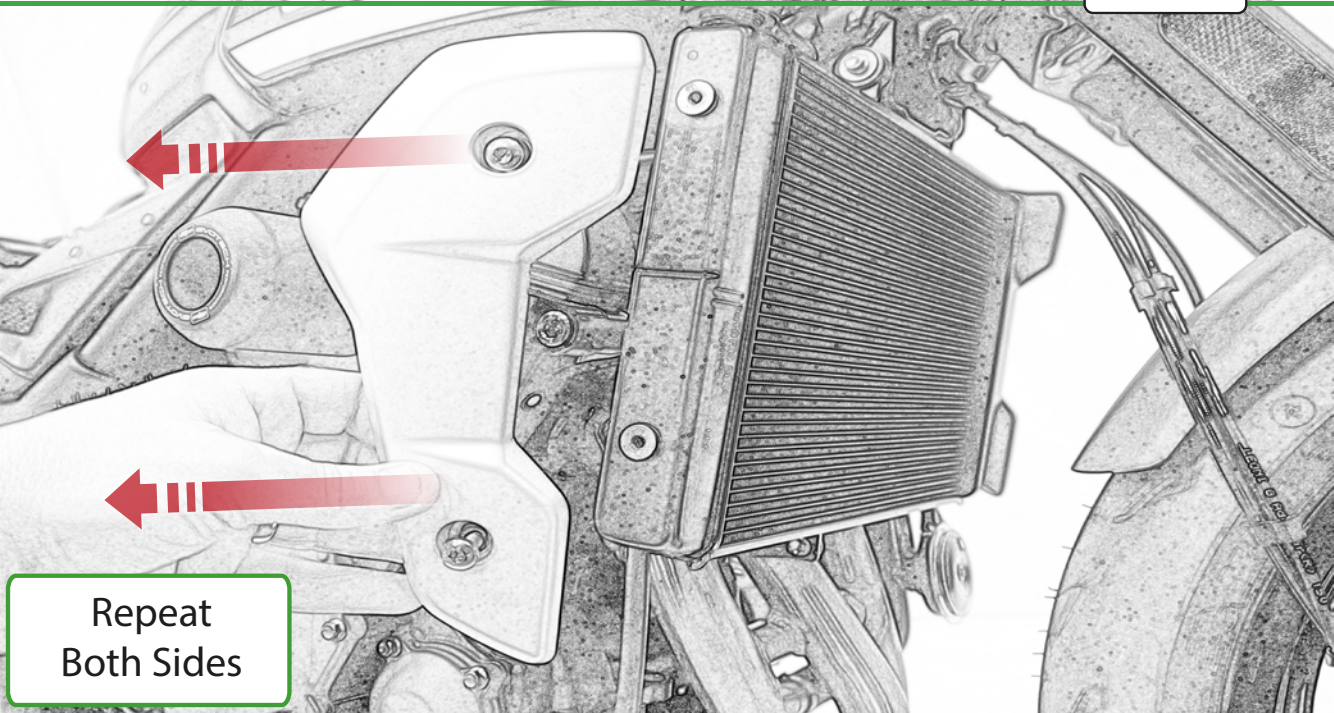


Repeat
Both Sides

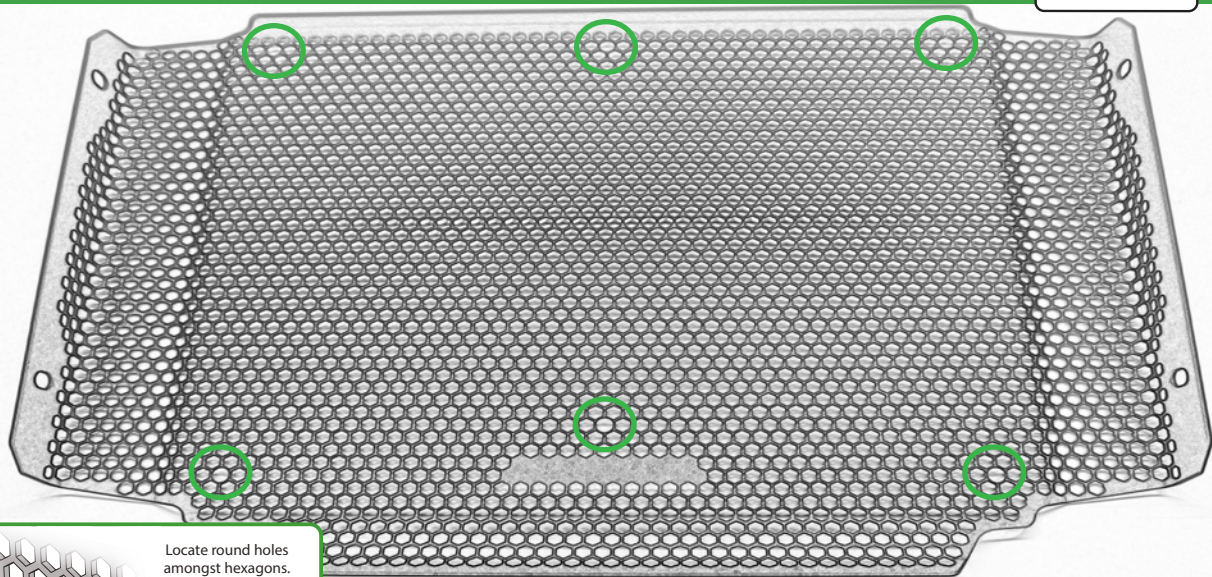



Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face




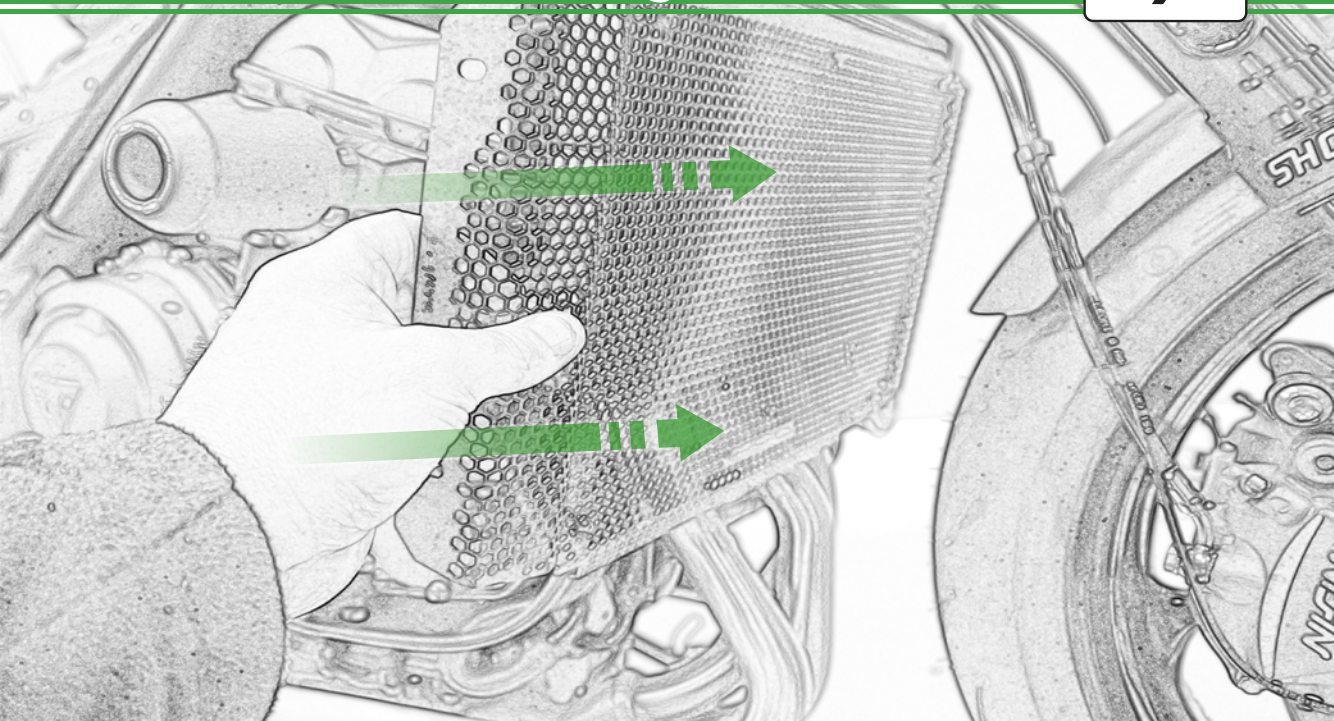

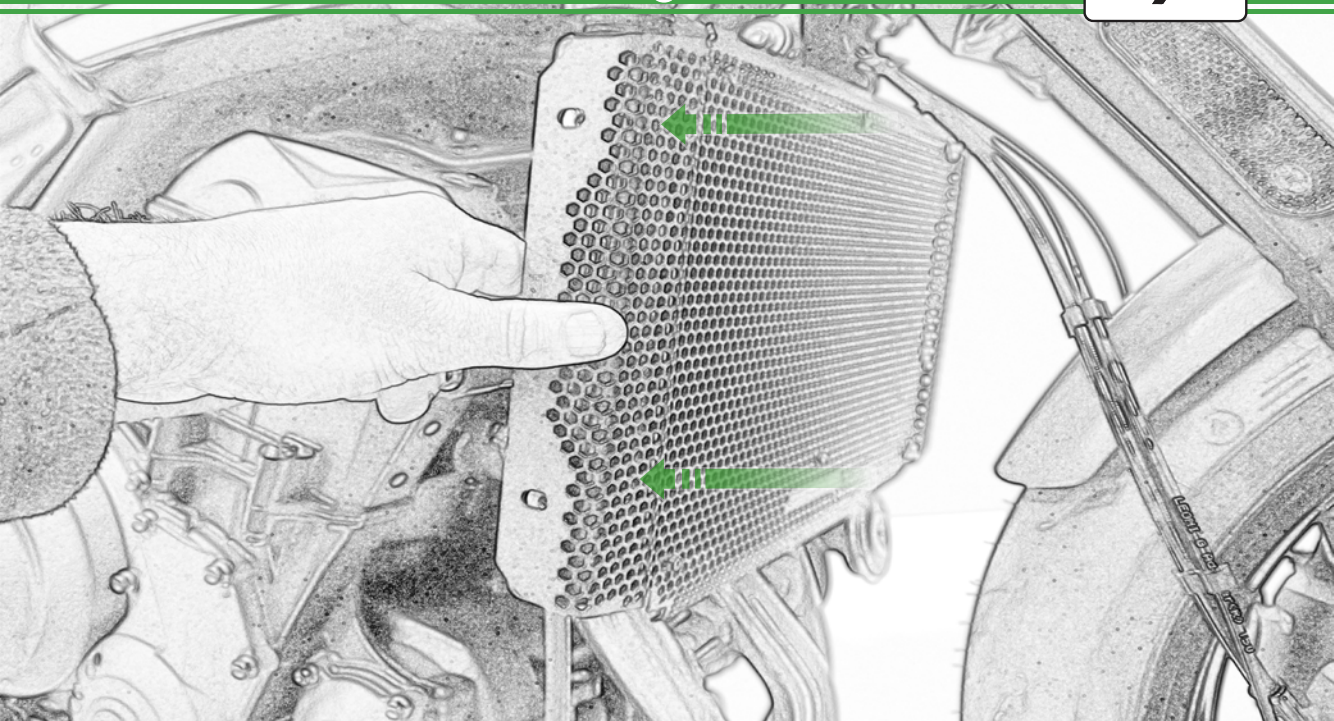

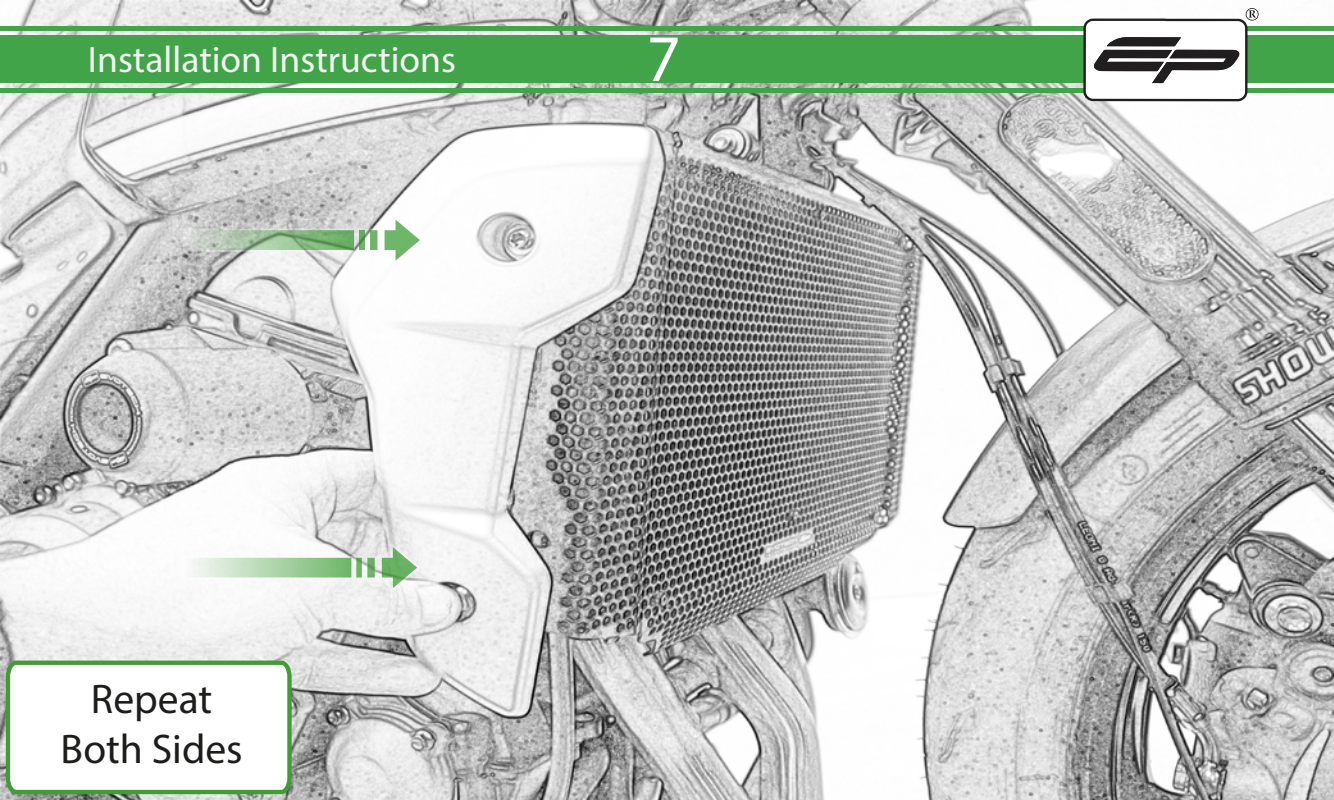


Repeat
Both Sides

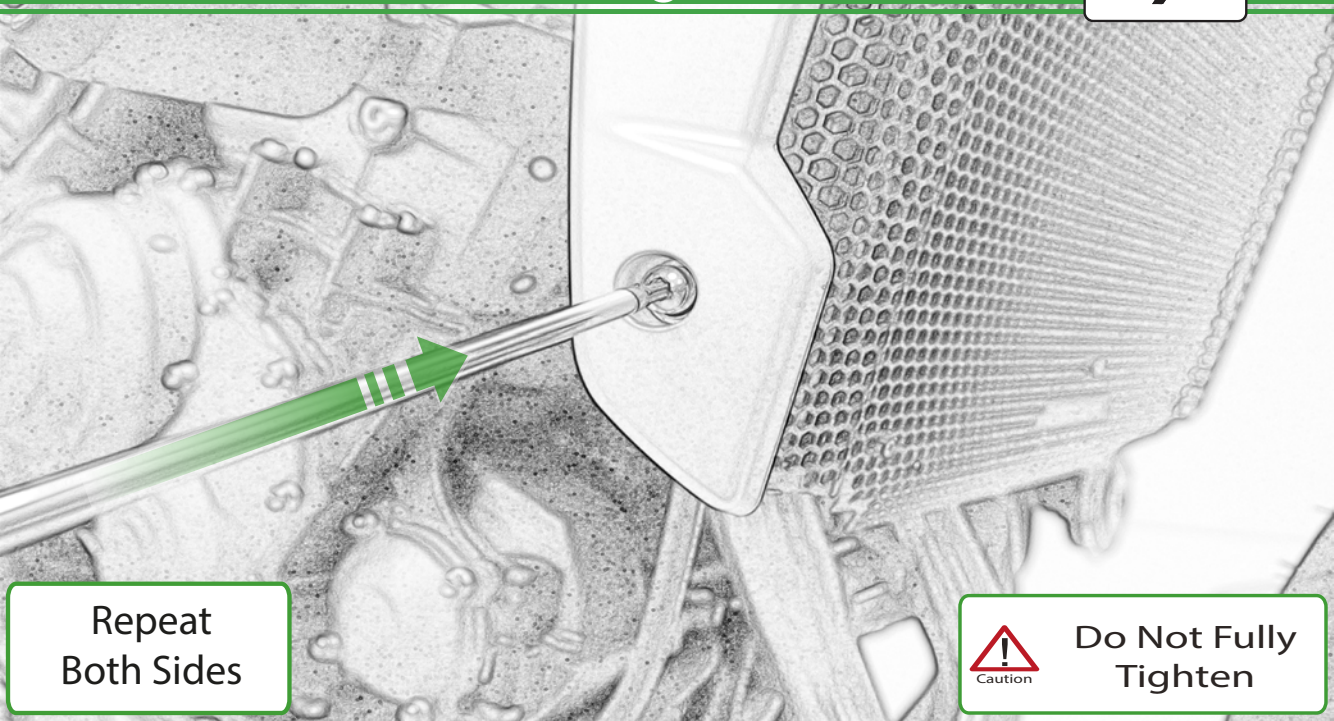


Repeat
Both Sides

 Do Not Fully
Tighten

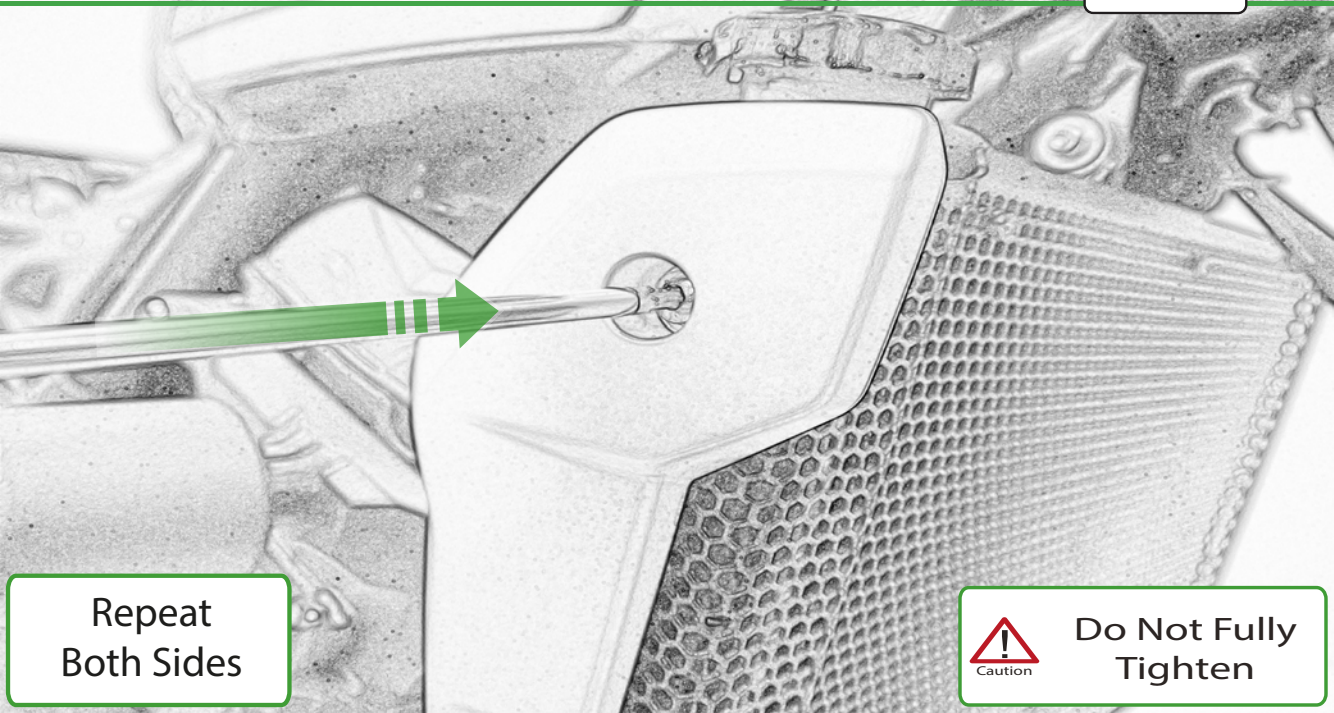

Repeat
Both Sides


 Do Not Fully
Tighten

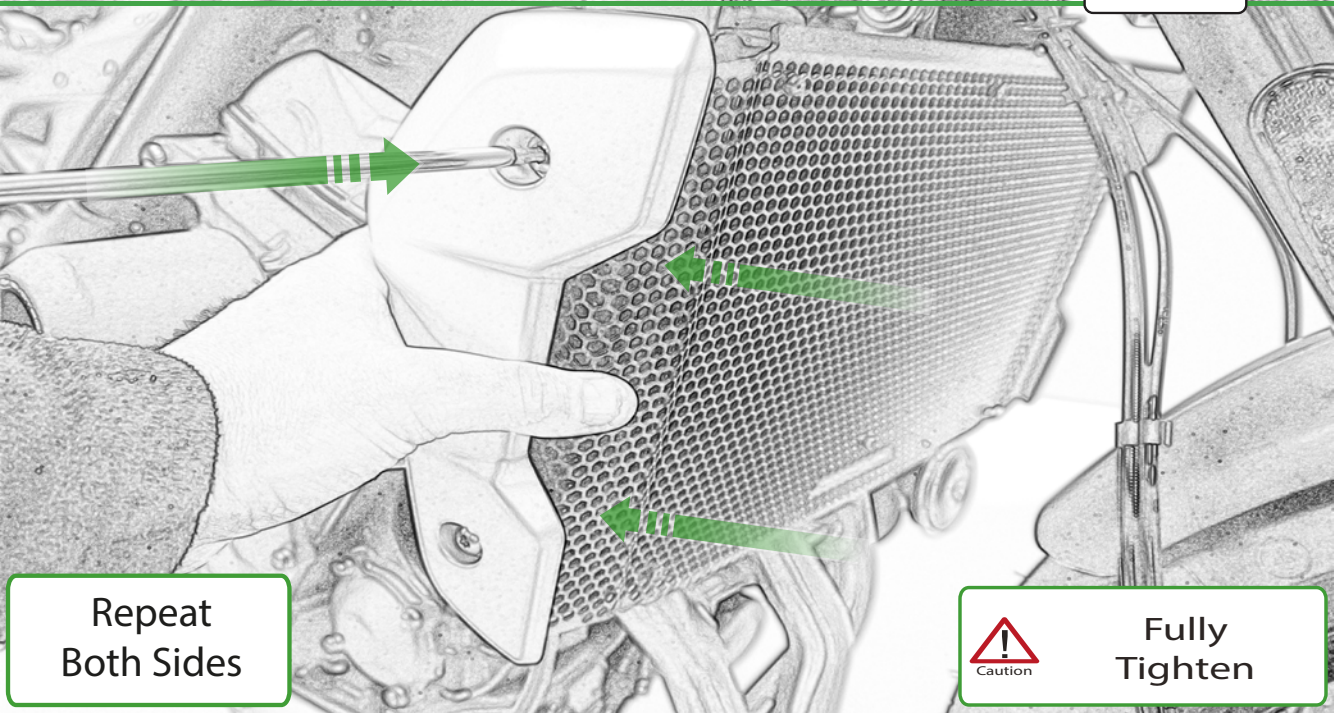

Repeat
Both Sides



Fully
Tighten

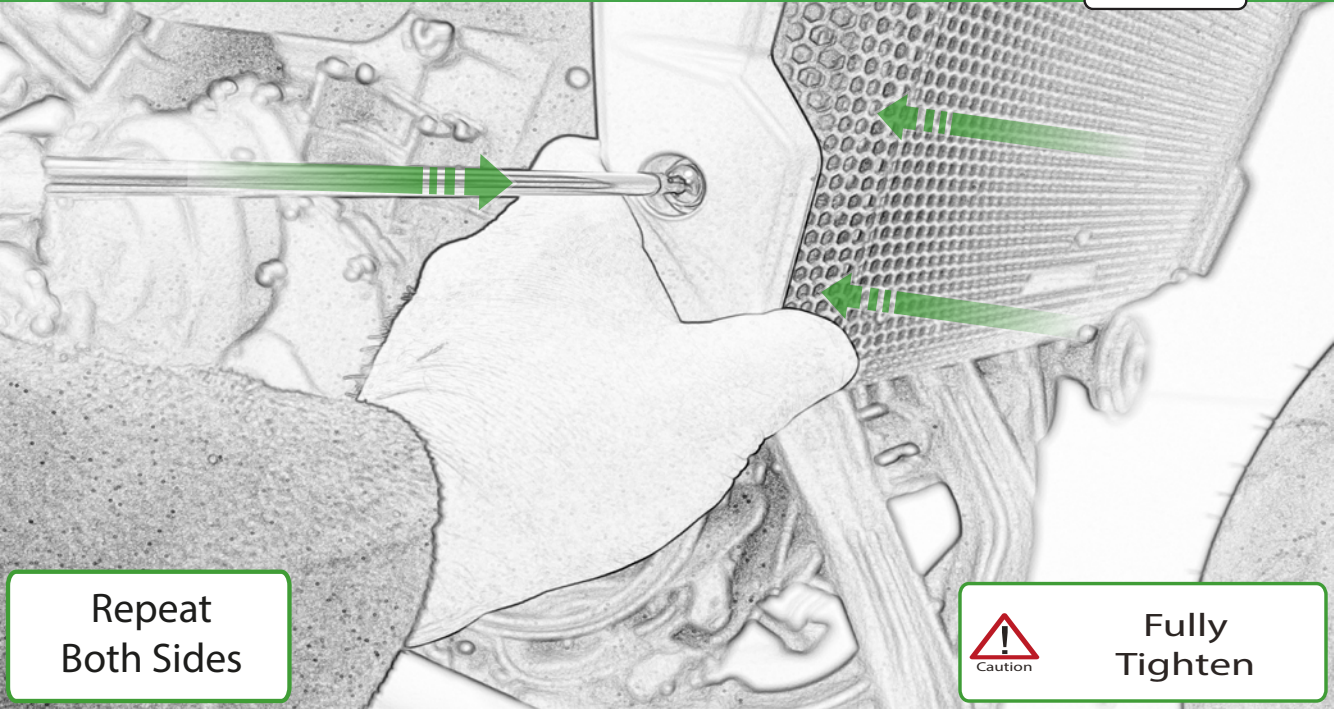

Repeat
Both Sides



Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com