




BMW Bar End Weights


Installation Instructions





Kit Contents


- Ⓐ 2 x Bar Ends Weights
- Ⓑ 2 x M10 x 50mm Caphead

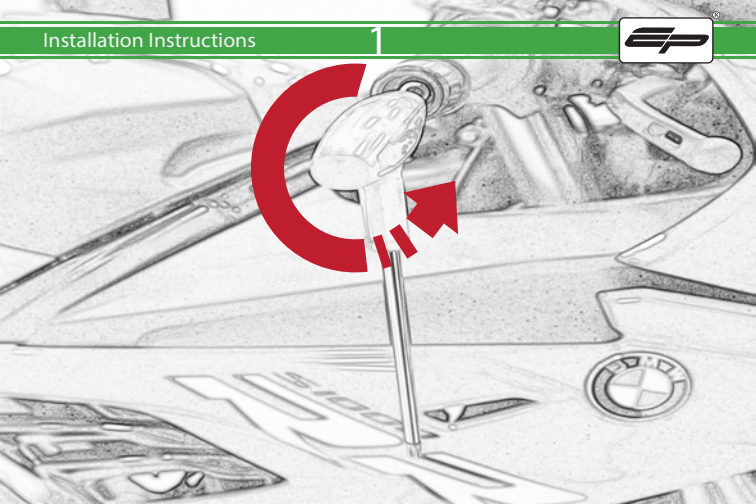


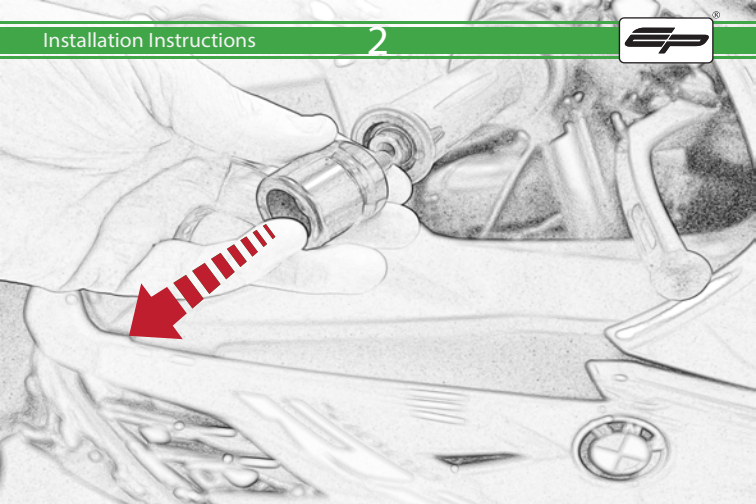

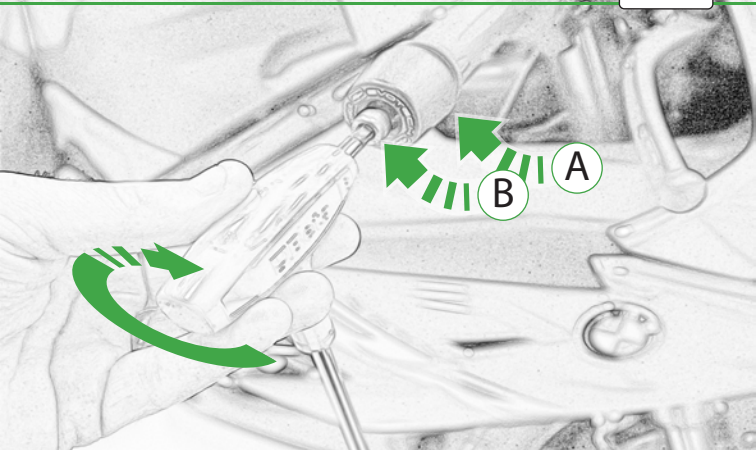

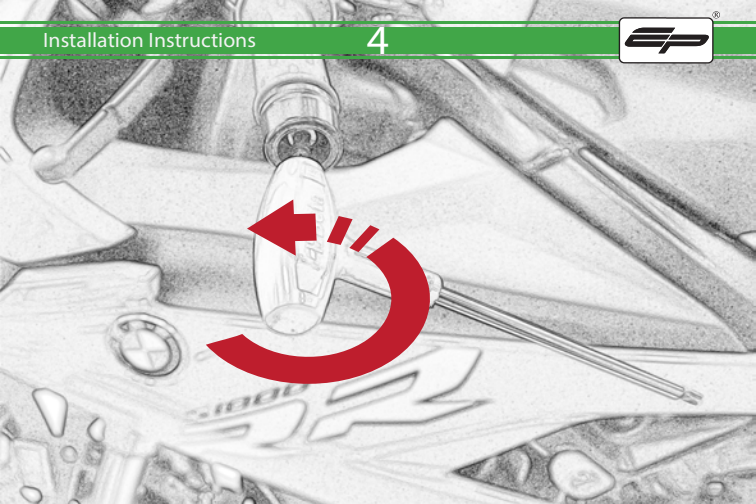

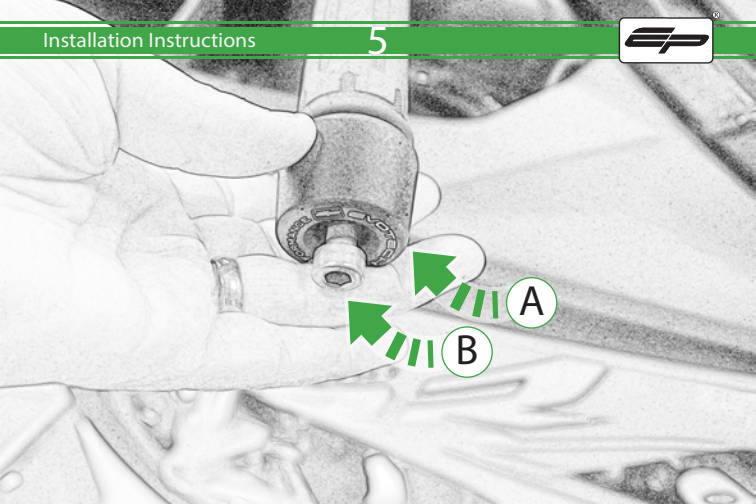

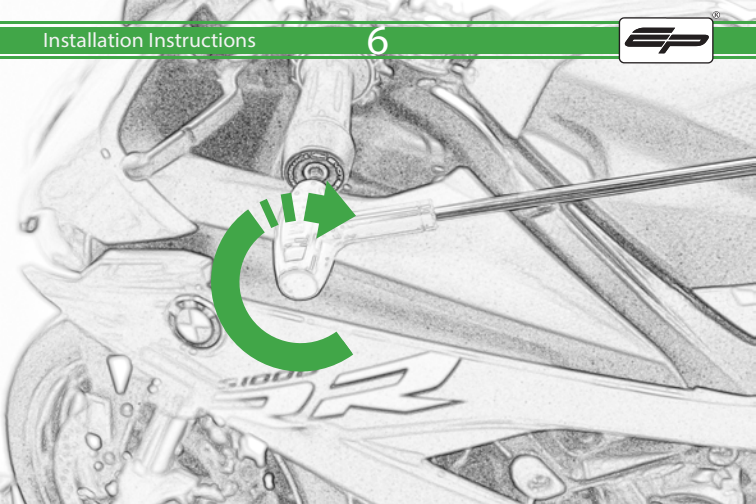



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com