

ORACLE®

FORD F150 LED OFF-ROAD MIRROR INSTALLATION GUIDE



TOOLS NEEDED: FLAT & PHILLIPS SCREWDRIVER

T20 TORX BIT



6MM / 8MM / 11MM SOCKETS

SCAN QR CODE FOR WIRING DIAGRAM



ORACLE

SCAN QR CODE TO WATCH INSTALL VIDEO



vimeo



REMOVING THE DOOR PANEL



1 USE A FLATHEAD SCREWDRIVER OR PANEL TOOL TO POP OFF THIS TRIM PIECE.

REMOVE THIS 8MM SCREW.



2 USE A FLATHEAD SCREWDRIVER OR PANEL TOOL TO POP OFF THIS TRIM PIECE.

REMOVE THIS 8MM SCREW.



3 REMOVE THIS 6MM SCREW.



4 REMOVE THIS 6MM SCREW.



5 YOU CAN NOW LIFT UP ON THE DOOR PANEL. THERE ARE STILL PARTS ATTACHED TO THE DOOR ITSELF. DO NOT REMOVE THE PANEL COMPLETELY.



6 DISCONNECT THE LOCKING MECHANISM.



7 DISCONNECT THESE (2) PLUGS.



8 PEEL BACK THIS COVER TO LOCATE THE (3) 11MM BOLTS.



9 DISCONNECT THIS PLUG.



10 REMOVE THE (3) 11MM NUTS.




11 DEPRESS THIS CLIP WITH YOUR THUMB.

INSTALLING THE ORACLE OFF-ROAD MIRROR ATTACHMENT:

IF YOU HAVE HEATED OR POWER MIRRORS BE SURE TO DISCONNECT.

BE SURE TO DISCONNECT PUDDLE LIGHT.

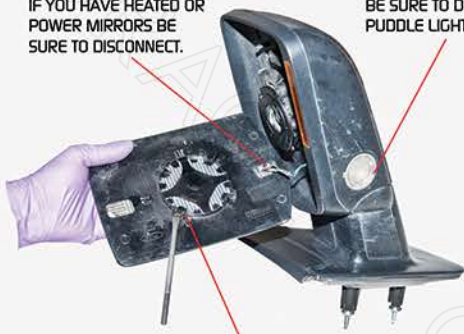

12 USE A FLATHEAD SCREWDRIVER TO DEPRESS THE (4) CLIPS ON THE GLASS.



13 REMOVE THE (4) T-20 TORX SCREWS.

START BY PRYING APART AT THIS LOCATION.



14 THIS STEP WILL TAKE PATIENCE BE CAREFUL AND TAKE YOUR TIME.

REMOVE THIS PIECE.



15

BY DEPRESSING THESE CLIPS.



16 ATTACH THE ORACLE OFF-ROAD MIRROR. MAKE SURE THE HOLES MATCH UP TO THE OPENINGS.

USE THE PROVIDED SCREWS & WASHERS TO SECURE THE ORACLE OFF-ROAD MIRROR TO THE STOCK HOUSING.



17



RUN THE WIRES THROUGH THIS OPENING.

18

AND OUT THE MIRROR THROUGH THIS OPENING.

SNAP THESE TWO DISCONNECTED PIECES TOGETHER.



19

THIS CORNER IS A LITTLE DIFFICULT TO SNAP BACK. TAKE YOUR TIME.



REINSTALL THE (4) T-20 TORX SCREWS.

20

APPLY AN EVEN AMOUNT OF PRESSURE TO SNAP THE GLASS BACK INTO PLACE.



ROUTING THE WIRES:



21 PRY THIS CLIP OUT A LITTLE BEFORE REPLACING MIRROR.



22 THE WIRES FOR THE MIRROR WILL RUN DOWN THE INSIDE OF THE DOOR PANEL. AND ROUTE THROUGH THE LEFT OPENING INSIDE THE DOOR HINGE.



23 DISCONNECT THE MOLEX PLUG. DEPRESS THE CLIP LOCATED AT THE BOTTOM OF THE MOLEX SOCKET. IT CAN NOW BE TWISTED AND REMOVED.



24 NOW ROUTE THE WIRES THROUGH THE BOTTOM OF THIS FLEXIBLE COVERING. AND THROUGH THE BOTTOM OF THE SOCKET. THE WIRES SHOULD NOW BE INSIDE OF THE CABIN. CONNECT TO ANY 12V POWER SOURCE TO POWER.