


HARLEY DAVIDSON 1250 PAN AMERICA '21-

M O U N T I N G I N S T R U C T I O N S

VIDEO

REF 20842

REAR MUDGUARD

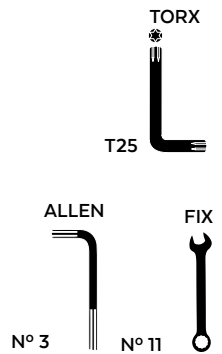

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Guardabarros	Mudguard	1	20842J/CM3
2		Soporte Cubrecadenas	Chain guard support	1	SOPOR-1P9-20842
3		Casquillo con valona M5	M5 bush with flange	2	CASQUI-----517
4		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	2	TORNI-AI----520
5		Silentblock Ø18xØ9xØ11x8	Ø18xØ9xØ11x8 silentblock	6	SILENBGONE--064
6		Casquillo con valona Ø15xØ9x7,5	Ø15 xØ9 x7,5 bush with flange	4	CASQUI-1A---324
7		Tornillo especial M6x14 Longitud Hexagonal 27mm (Rosca int M5x15)	M6x14 special screw hexagonal lenght 27 (Int.Thread M5x15)	1	TORNI-E-----763
8		Tornillo allen M5x25 ISO 7380 Ø11	M5x25 Ø11 ISO 7380 allen screw	2	TORNI-I7380-766
9		Casquillo Ø8,5 xØ13 x6	Ø8,5 xØ13 x6 arrowhead	1	CASQUI-----208
10		Casquillo Ø8 xØ13 x7,5	Ø8 xØ14 x7.5 arrowhead	1	CASQUI8147-0193
11		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493
12		Arandela de nylon M5	M5 nylon washer	2	ARNV00000000245
13		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	6	TAPON-----85


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE


LEFT SIDE

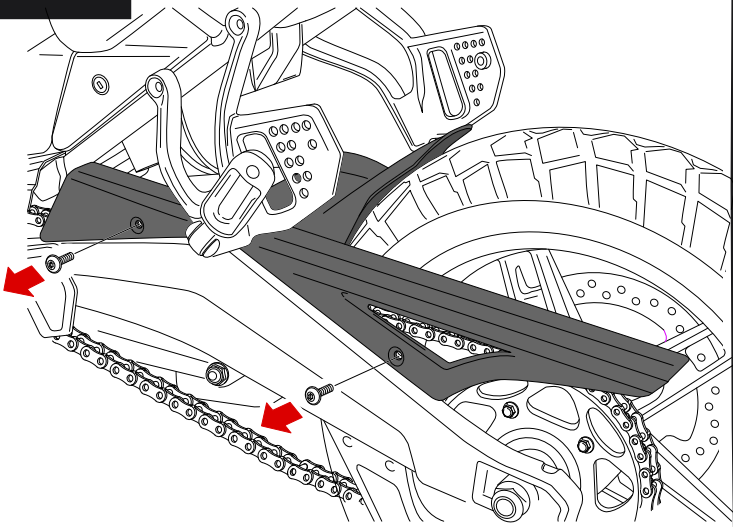

2

DISASSEMBLY
DESMONTAJE

RIGHT SIDE

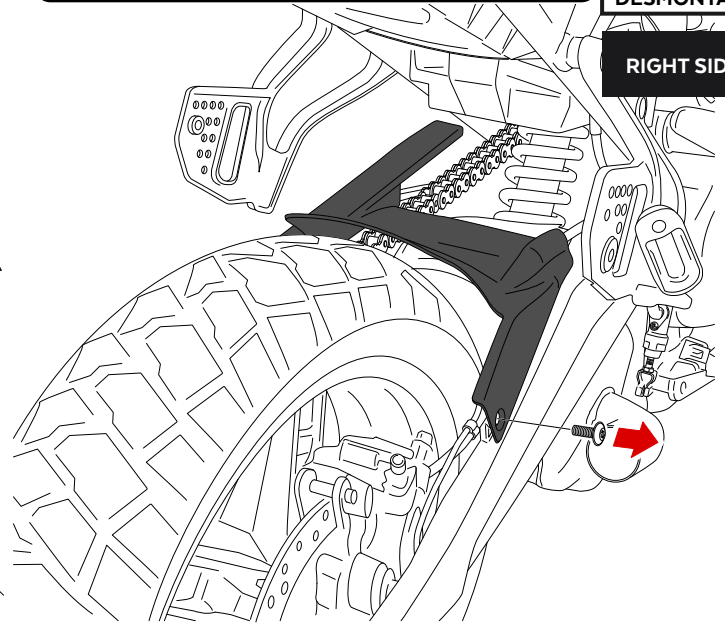


PARA FACILITAR EL MONTAJE DEL GUARDABARROS, SE RECOMIENDA DESMONTAR EL TUBO DE ESCAPE.
TO FACILITATE THE ASSEMBLY OF THE MUDGUARD, IT IS RECOMMENDED TO REMOVE THE EXHAUST PIPE

3


DISASSEMBLY
DESMONTAJE

RIGHT SIDE

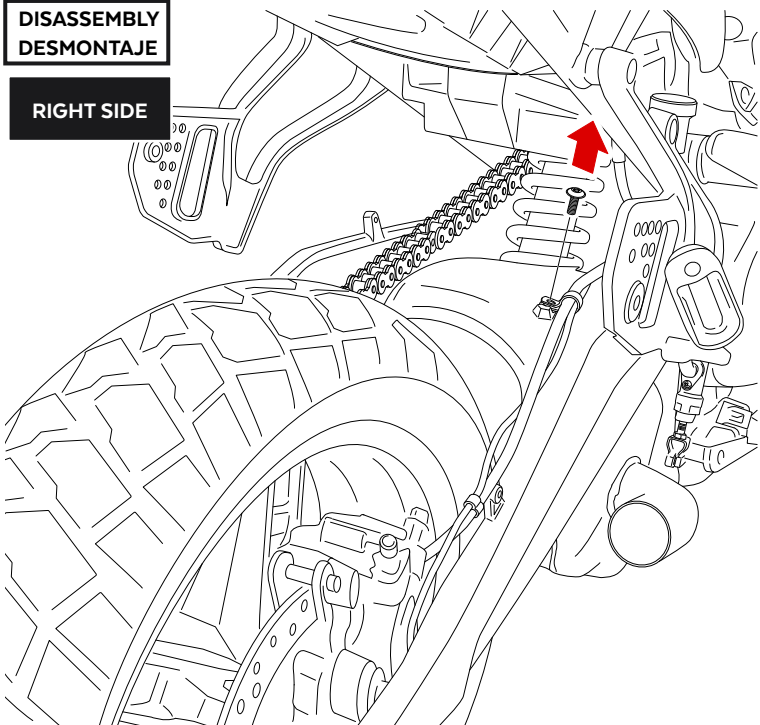

4

ASSEMBLY
MONTAJE

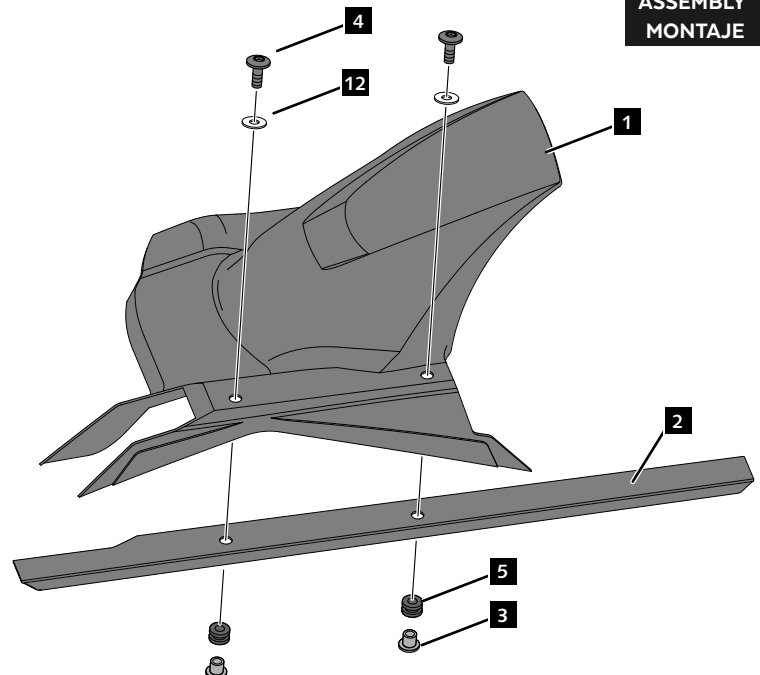


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE


LEFT SIDE

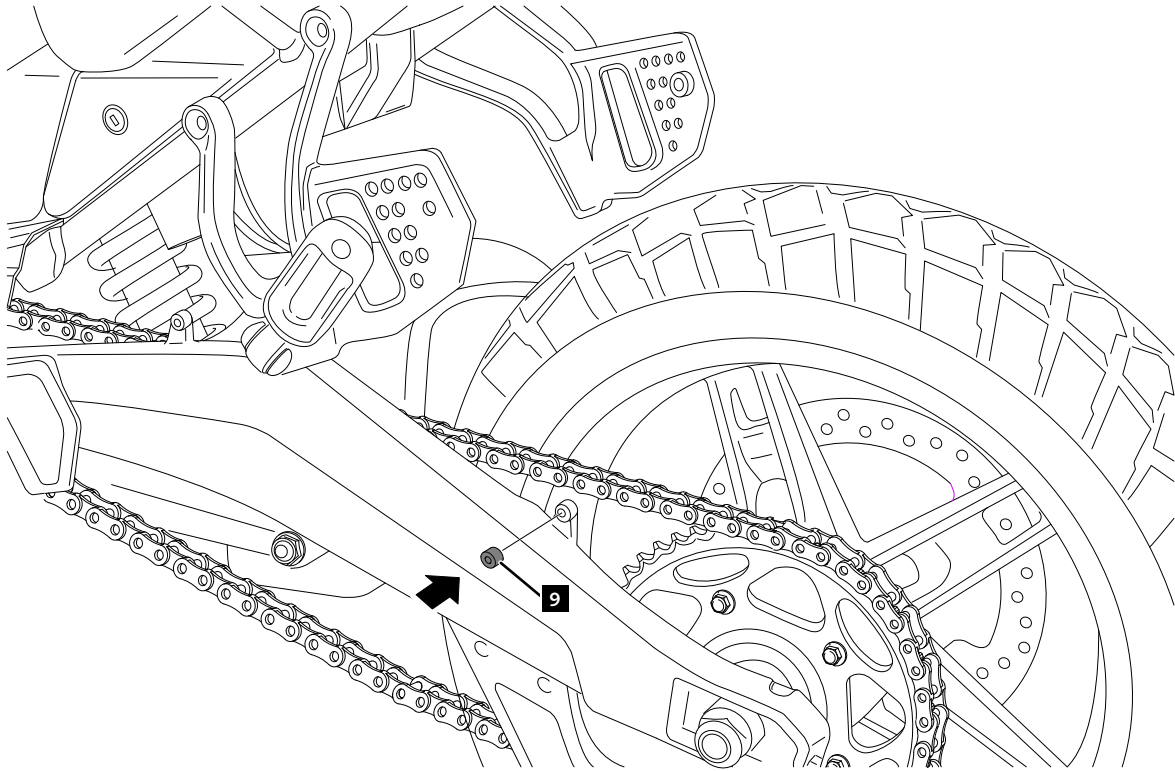

6

ASSEMBLY
MONTAJE

RIGHT SIDE

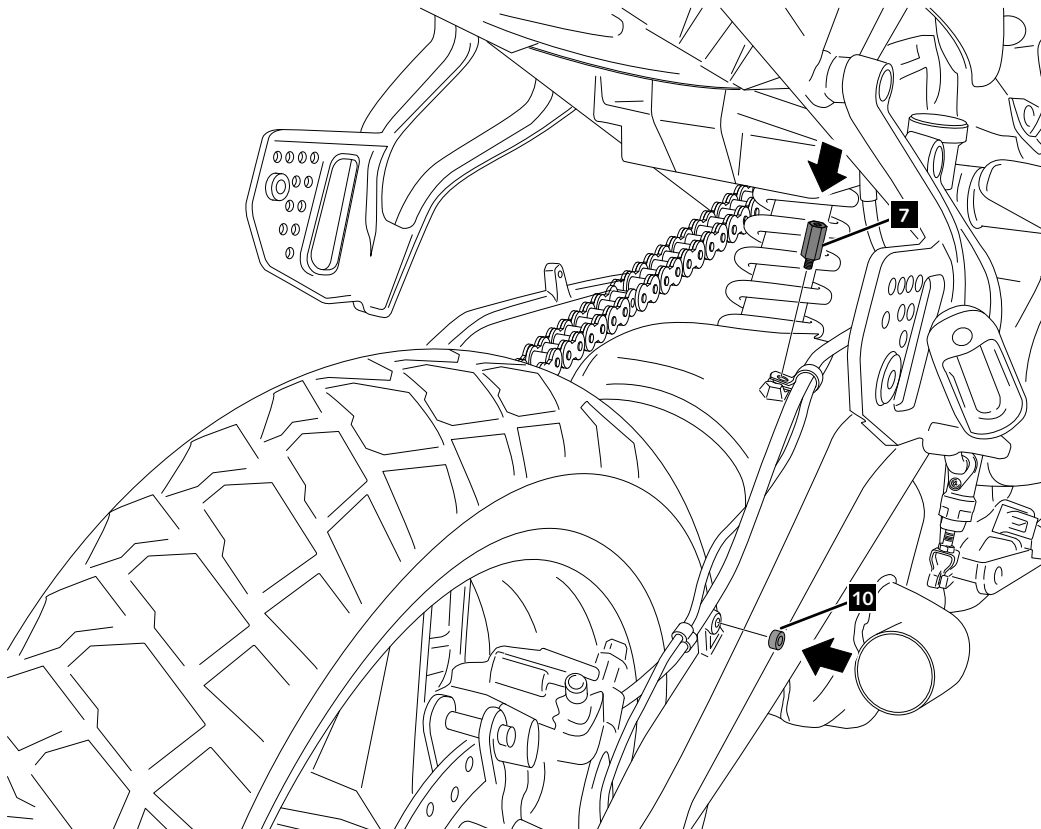


HARLEY DAVIDSON 1250 PAN AMERICA '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

7

ASSEMBLY
MONTAJE

LEFT SIDE

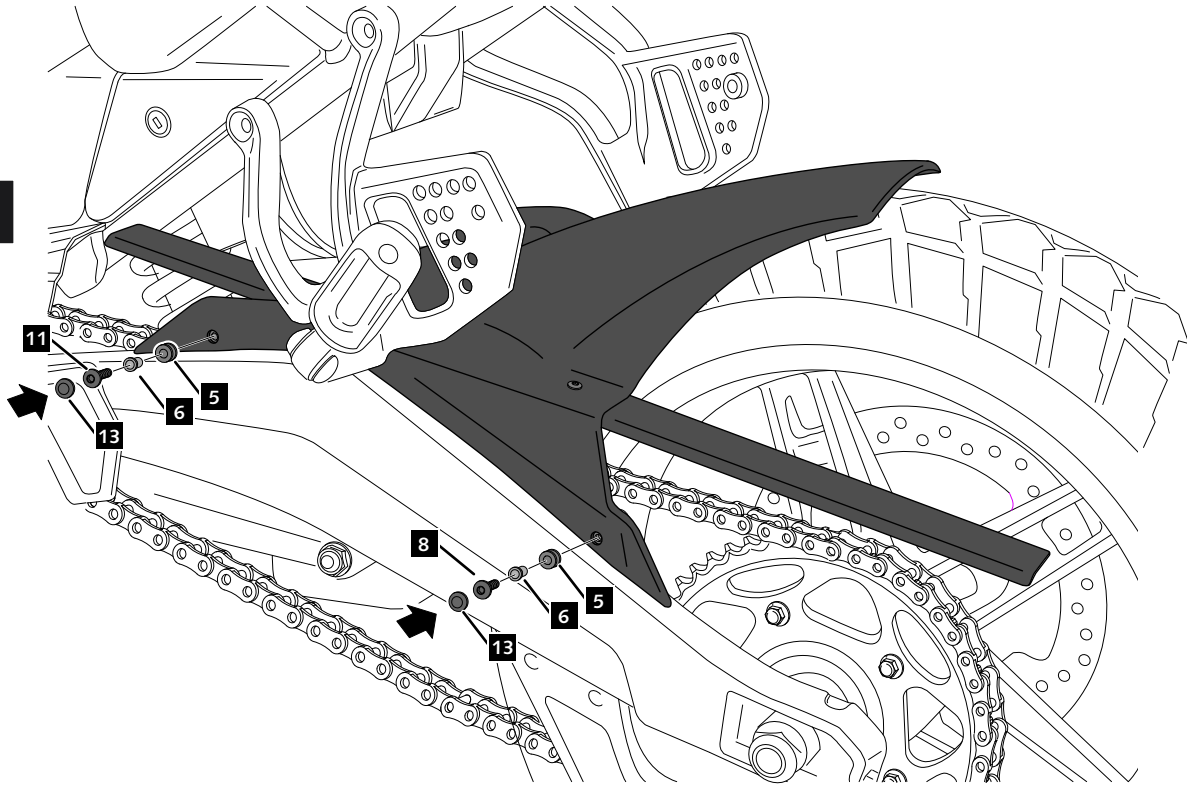

8

ASSEMBLY
MONTAJE

RIGHT SIDE

