



FITTING INSTRUCTIONS FOR RAD0260
RADIATOR GUARD
KTM 890R 2020-



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED OVER PAGE.

SOME PARTS MAY BE SHOWN FOR CLARITY OF INSTRUCTIONS ONLY.

DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING.

**IF IN ANY DOUBT WHEN FITTING OUR PRODUCTS, CONSULT ONE OF OUR DEALERS
OR HAVE FITTED BY A QUALIFIED TECHNICIAN.**

PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF
MOUNTING TO THE BIKE.

IN THE EVENT OF RUBBER WASHERS BEING USED TO HOLD COMPONENTS ONTO BOLTS,
THESE RUBBER WASHERS CAN BE THROWN AWAY.

DIGITAL COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FROM:


WWW.RG-RACING.COM



<u>TOOLS REQUIRED</u>	<u>GENERAL TORQUE SETTINGS</u>
<ul style="list-style-type: none"> • 4mm allen key • 10mm socket 	<p>M4 BOLT = 8Nm M5 BOLT = 12Nm M6 BOLT = 15Nm M8 BOLT = 20Nm M10 BOLT = 40Nm M12 BOLT = 40Nm</p>

LEGEND

ITEM NO.	DESCRIPTION	QTY
ITEM 1	RAD0260 RADIATOR GUARD	1
ITEM 2	M6 X 12 BUTTON HEAD BOLT	2
ITEM 3	M6 WASHER	2
ITEM 4	2.5MM CABLE TIES	4
ITEM 5	SELF-ADHESIVE FOAM 100mm	8

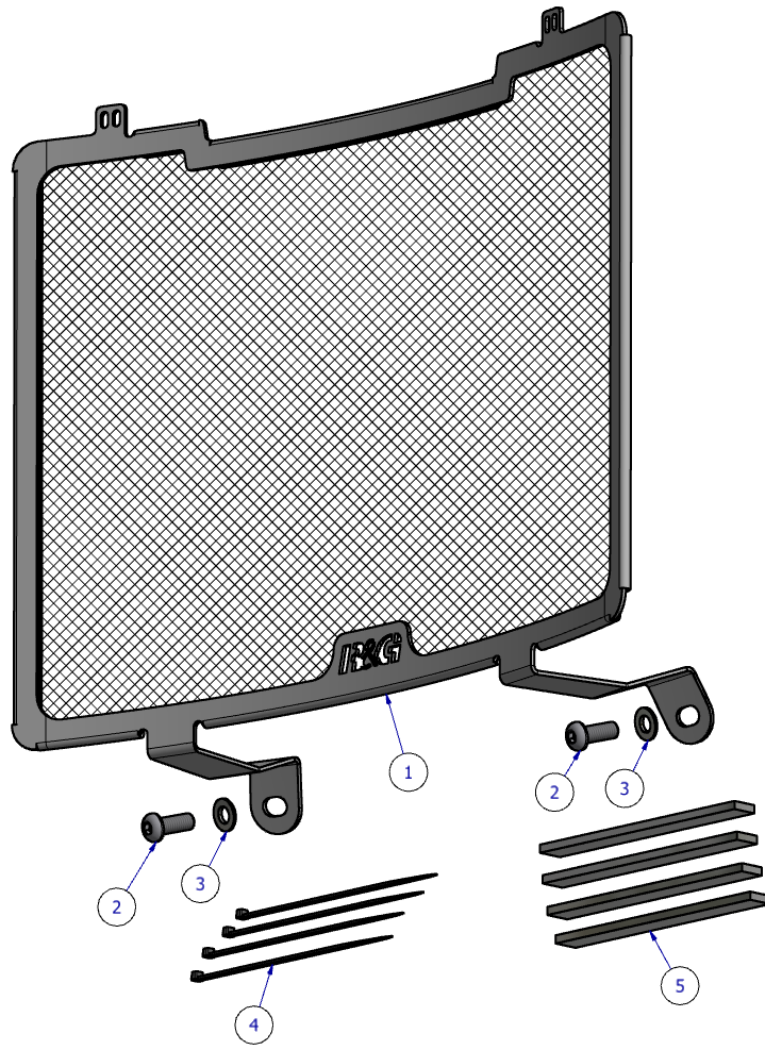

FITTING PICTURES



PICTURE 1



PICTURE 2



PICTURE 3

FITTING INSTRUCTIONS

- Remove the 2 hex bolts shown in picture 1 using a 10mm socket or torx tool.
- Cut the self-adhesive foam strips (**item 5**) into 10mm strips and affix these to the rear frame of the radiator guard so that the foam will sit between the radiator and radiator guard when mounted.
- Offer the rad guard (**item 1**) into position as shown in picture 2.
- Using one M6 bolt (**item 2**) and M6 washer (**item 3**) per side, affix the rad guard to the lower mounts of the radiator as shown in the assembly diagram.
- Pass one cable tie (**item 4**) per side through the radiator guard cable tie mounts and loop around the upper radiator mounts as shown in picture 3 to secure the top of the radiator guard.
- Check radiator guard is secure and bolts are tightened to the correct torque before riding.

ISSUE 1 - 07/11/2020 (DM)

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P - at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.


R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



NOTICE DE MONTAGE POUR RAD0260
PROTECTION RADIATEUR
KTM 890R 2020-

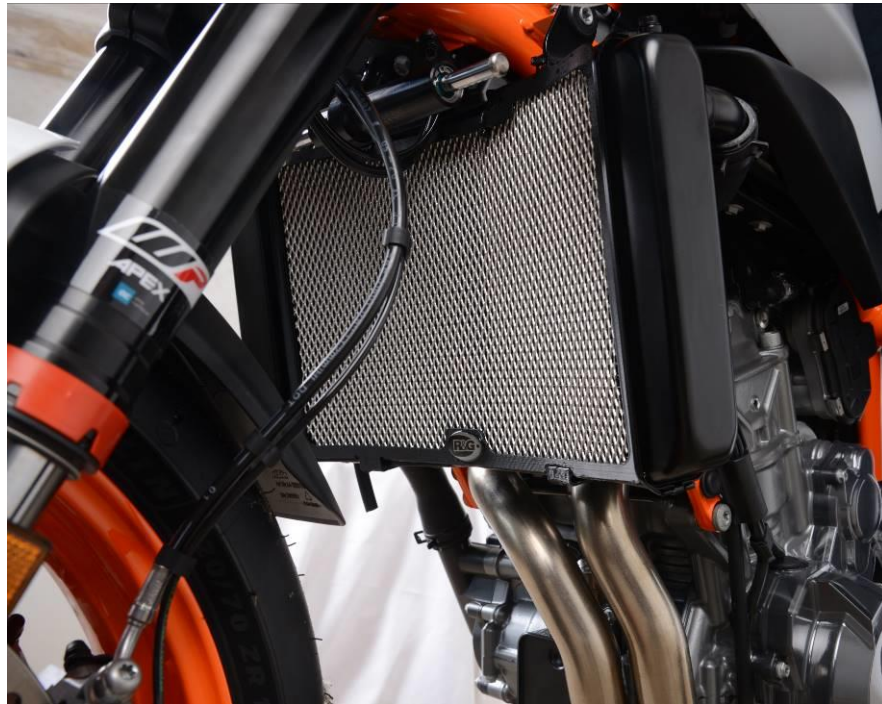

CE KIT CONTIENT LES ARTICLES ILLUSTRÉS ET ÉTIQUETÉS SUR LA PAGE.

CERTAINES PARTIES PEUVENT ÊTRE PRÉSENTES UNIQUEMENT POUR LA CLARTÉ DES INSTRUCTIONS.

NE PAS PROCÉDER AU MONTAGE TANT QUE VOUS N'ÊTES PAS SÛR QUE TOUTES LES PIÈCES SOIENT PRÉSENTES.

VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE CONTINUER.

EN CAS DE DOUTE LORS DU MONTAGE DE NOS PRODUITS, CONSULTEZ UN DE NOS REVENDUEURS OU FAITES APPEL À UN TECHNICIEN QUALIFIÉ.

VEUILLEZ NOTER QUE LA FAÇON DONT LE KIT EST EMBALLÉ NE REPRÉSENTE PAS NECESSAIREMENT LA MANIÈRE DE LE MONTER SUR LA MOTO.

SI DES RONDELLES EN CAOUTCHOUC SONT UTILISÉES POUR MAINTENIR LES COMPOSANTS SUR LES BOULONS, ELLES PEUVENT ÊTRE JETÉES.


NOTICE DISPONIBLE AU TÉLÉCHARGEMENT SUR :
WWW.RG-RACING.COM



<u>OUTILS REQUIS</u>	<u>VALEURS DE SERRAGE</u>
<ul style="list-style-type: none"> • Clé Allen 4mm • Clé à molette 10mm 	M4 BOULON = 8Nm M5 BOULON = 12Nm M6 BOULON = 15Nm M8 BOULON = 20Nm M10 BOULON = 40Nm M12 BOULON = 40Nm

LÉGENDE

ARTICLE NO.	DESCRIPTION	QTÉ
ARTICLE 1	RAD0260 PROTECTION RADIATEUR	1
ARTICLE 2	M6 X 12 BOULON	2
ARTICLE 3	M6 RONDELLE	2
ARTICLE 4	2.5MM COLLIERS DE SERRAGE	4
ARTICLE 5	MOUSSE AUTOCOLLANTE 100mm	8

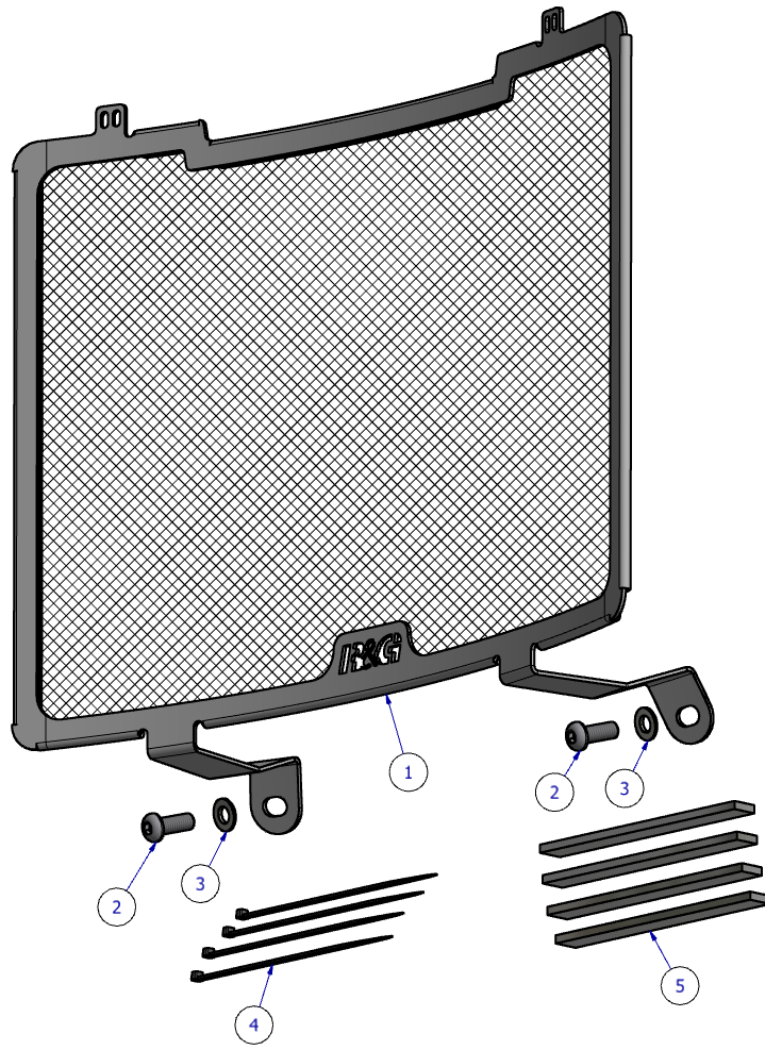

NOTICE DE MONTAGE



PHOTO 1



PHOTO 2



PHOTO 3

NOTICE DE MONTAGE

- Retirez les 2 boulons hexagonaux illustrés sur la photo 1 à l'aide d'une douille de 10 mm ou d'une clé Torx.
- Découpez les bandes de mousse autocollantes (article 5) en bandes de 10 mm et fixez-les sur le cadre arrière de la protection de radiateur de sorte que la mousse repose entre le radiateur et la protection de radiateur une fois montées.
- Présentez la protection radiateur (article 1) en position comme indiqué sur la photo 2.
- À l'aide d'un boulon M6 (article 2) et d'une rondelle M6 (article 3) par côté, fixez la protection radiateur sur les supports inférieurs du radiateur comme indiqué sur le schéma de montage.
- Faites passer un collier de serrage (article 4) par côté à travers les supports d'attache de câble de protection de radiateur et faites une boucle autour des supports de radiateur supérieurs comme indiqué sur la photo 3 pour fixer le haut de la protection de radiateur.
- Vérifiez que la protection du radiateur soit bien fixée et que les boulons soient serrés au bon couple avant de rouler.

ISSUE 1 – 07/11/2020 (DM)



MONTAGEANLEITUNG FÜR RAD0260
KÜHLERSCHUTZ
KTM 890R 2020-



ALLE KIT-TEILE SIND AUF DEN FOLGENDEN SEITEN ABGEBILDET UND GEKENNZEICHNET.

DIE ABGEBILDETEN TEILE DIENEN LEDIGLICH ZUR ERKLÄRUNG.

ÜBERPRÜFEN SIE ZUERST, DASS ALLE TEILE VORHANDEN SIND.

LESEN SIE DIE MONTAGEANLEITUNG KOMPLETT DURCH, BEVOR SIE ANFANGEN.

WENN SIE BEI DER MONTAGE DIESER PRODUKTES UNSICHER SIND, BITTE EINEN UNSERER HÄNDLER KONTAKTIEREN ODER DAS KIT VON EINEM QUALIFIZIERTEN ZWEIRAD-MECHANIKER MONTIEREN LASSEN.

DIE VERPACKUNG DER TEILE STELLT NICHT DIE REIHENFOLGE DER MONTAGE DAR.

HINWEIS FÜR KITS MIT PLASTIKUNTERLEGSCHIEBEN AN DEN SCHRAUBEN –
DIESE PLASTIK-UNTERLEGSCHIEBEN WERDEN NICHT FÜR DEN EINBAU BENÖTIGT!


**EINE DIGITALE VERSION DIESER MONTAGEANLEITUNG KANN AUF
FOLGENDER SEITE HERUNTERGELADEN WERDEN:
WWW.RG-RACING.COM**



<u>SIE BENÖTIGEN FOLGENDE WERKZEUGE</u>	<u>ALLG. ANZUGSDREHMOMENT</u>
<ul style="list-style-type: none"> • 4mm Inbusschlüssel • 10mm Steckschlüssel 	M4 SCHRAUBE = 8Nm M5 SCHRAUBE = 12Nm M6 SCHRAUBE = 15Nm M8 SCHRAUBE = 20Nm M10 SCHRAUBE = 40Nm M12 SCHRAUBE = 40Nm

LIEFERUMFANG

ARTIKEL NR.	BESCHREIBUNG	MENGE
ARTIKEL 1	RAD0260 KÜHLERSCHUTZ	1
ARTIKEL 2	M6 X 12 INBUSSCHRAUBE	2
ARTIKEL 3	M6 UNTERLEGSCHIEBE	2
ARTIKEL 4	2,5MM KABELBINDER	4
ARTIKEL 5	SELBSTKLEBENDER SCHAUMSTOFF 100mm	8

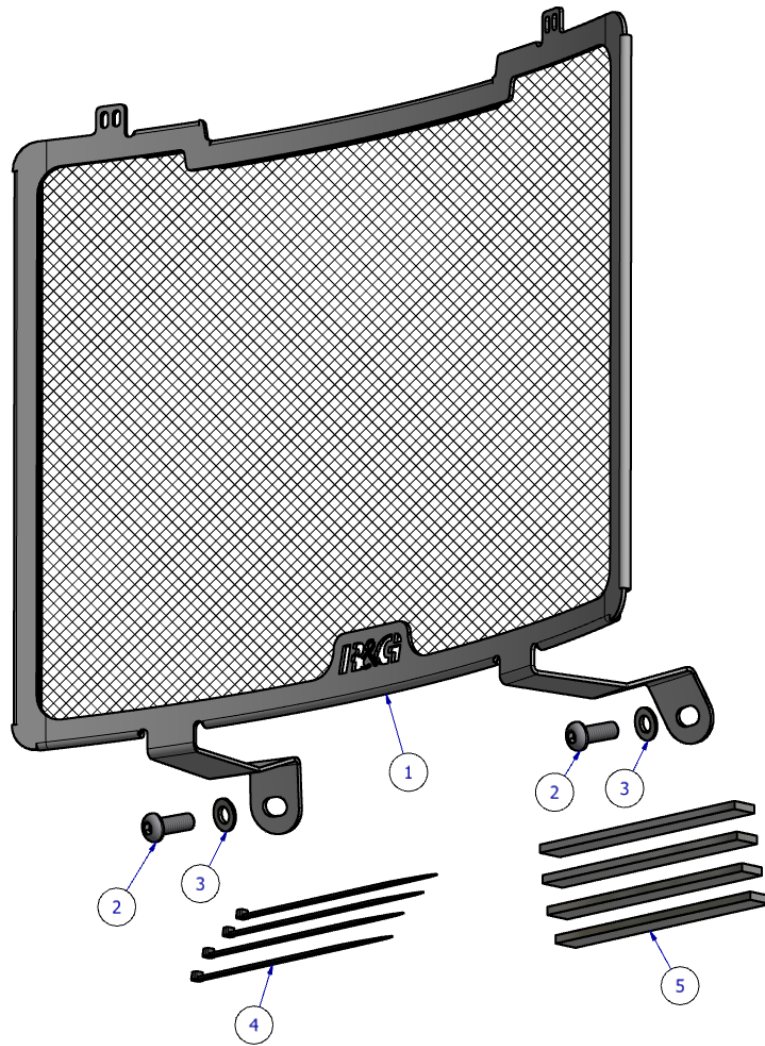

MONTAGE – BILDER



ABBILDUNG 1



ABBILDUNG 2



ABBILDUNG 3

MONTAGEANLEITUNG

- Entfernen Sie die 2 Sechskantschrauben, die in Abbildung abgebildet sind mit einem 10mm Steckschlüssel oder Torx-Schlüssel.
- Schneiden Sie die mitgelieferten Schaumstoffstreifen (**Artikel 5**) in 10 mm breite Streifen und kleben Sie diese auf der Rückseite des Kühlerschutzrahmens, so dass sie zwischen dem Kühlerschutz und dem Kühler angebracht sind.
- Den Kühlerschutz (**Artikel 1**) in Position bringen wie in Abbildung 2 abgebildet.
- Benutzen Sie eine M6 Schraube (**Artikel 2**) und eine M6 Unterlegscheibe (**Artikel 3**) an jeder Seite, um den Kühlerschutz an den unteren Halterungen des Kühlers zu montieren (wie in der Zeichnung abgebildet).
- Schieben Sie jeweils einen Kabelbinder (**Artikel 4**) pro Seite durch die jeweilige Halterung für den Kabelbinder, und den Kabelbinder dann um die oberen Kühler-Halterungen legen wie in Abbildung 3 abgebildet, um den Kühlerschutz oben zu befestigen.
- Stellen Sie sicher, dass der Kühlerschutz sicher montiert ist und alle Schrauben ordnungsgemäß und mit dem richtigen Anzugsdrehmoment festgezogen sind, bevor Sie mit dem Motorrad fahren.

AUSGABE 1 - 07/11/2020 (DM)