



W206 High Spec Ambient Light Installation

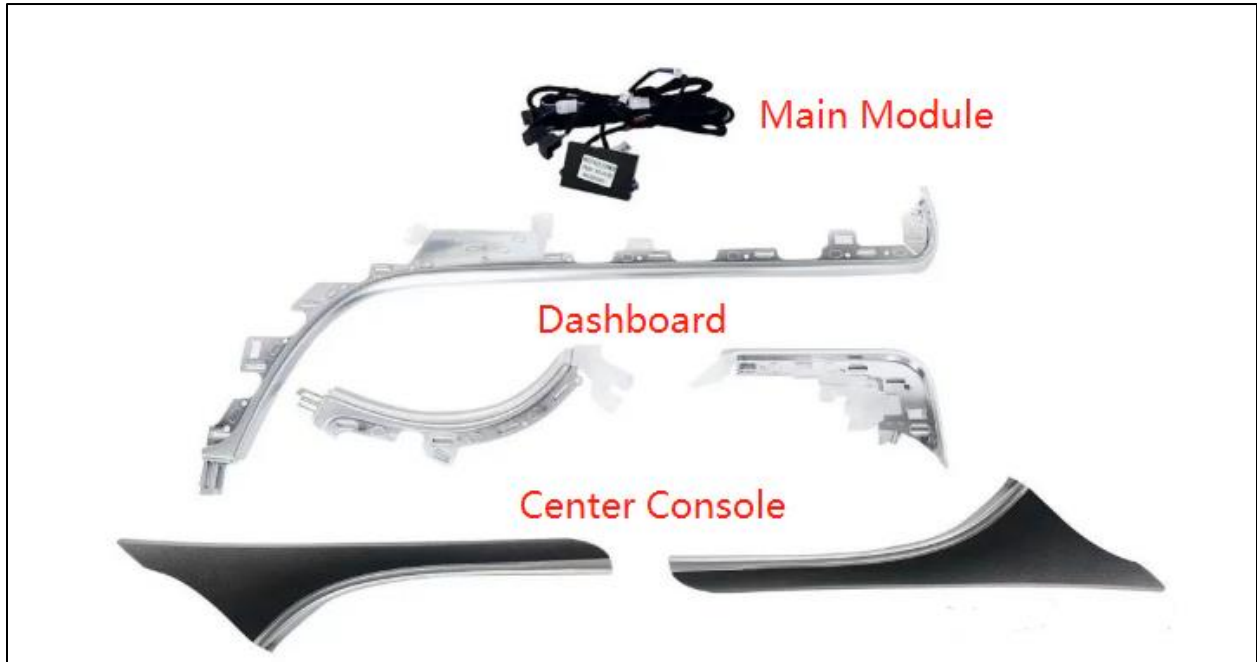

Wiring Diagram

1. Remove the cover.

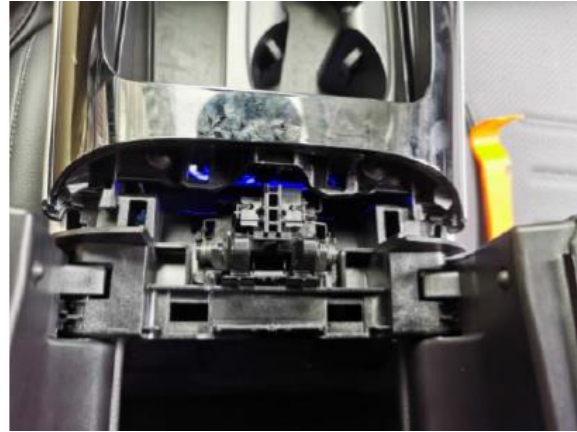

2. Remove the panel.




3. Remove the two screws.



4. Pull the screen from up to down. Unplug the connector and remove the screen.



5. Remove the 6 screws and take out the frame.

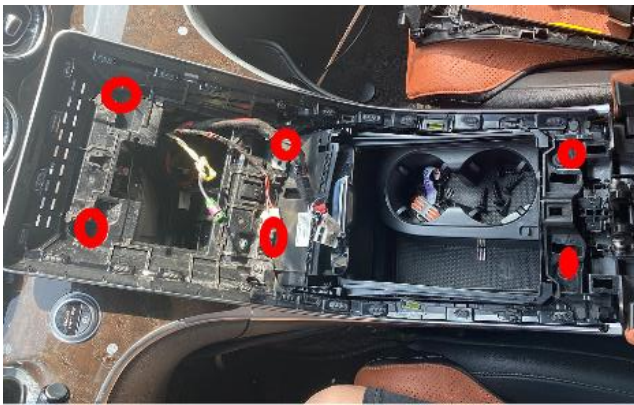

6. Remove the meter cover




7. Remove the two screws and take out the meter.



8. Remove the whole dashboard.



9. Remove the trim and cur the part.

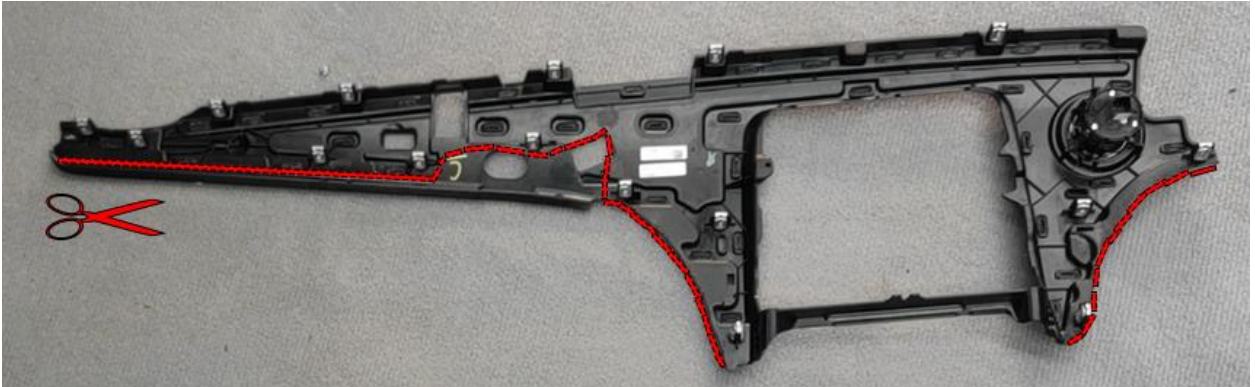


10. Solder or use the hot glue to fix the new trim.



11. Remove the center console trim and replace with the new trim.



12. Connect the module to the front footwell light.

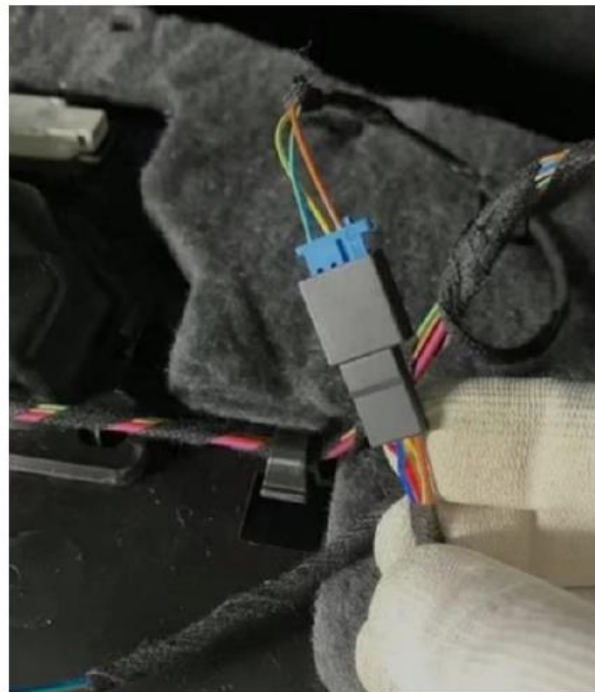

13. LED bulb position.

