


PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE  
SPEZIFISCHES STURZBUEGEL - PROTEGEMOTOR ESPECIFICO

# HONDA XRV 750 AfricaTwin

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

LATO SINISTRO  
LEFT SIDE  
COTE GAUCHE

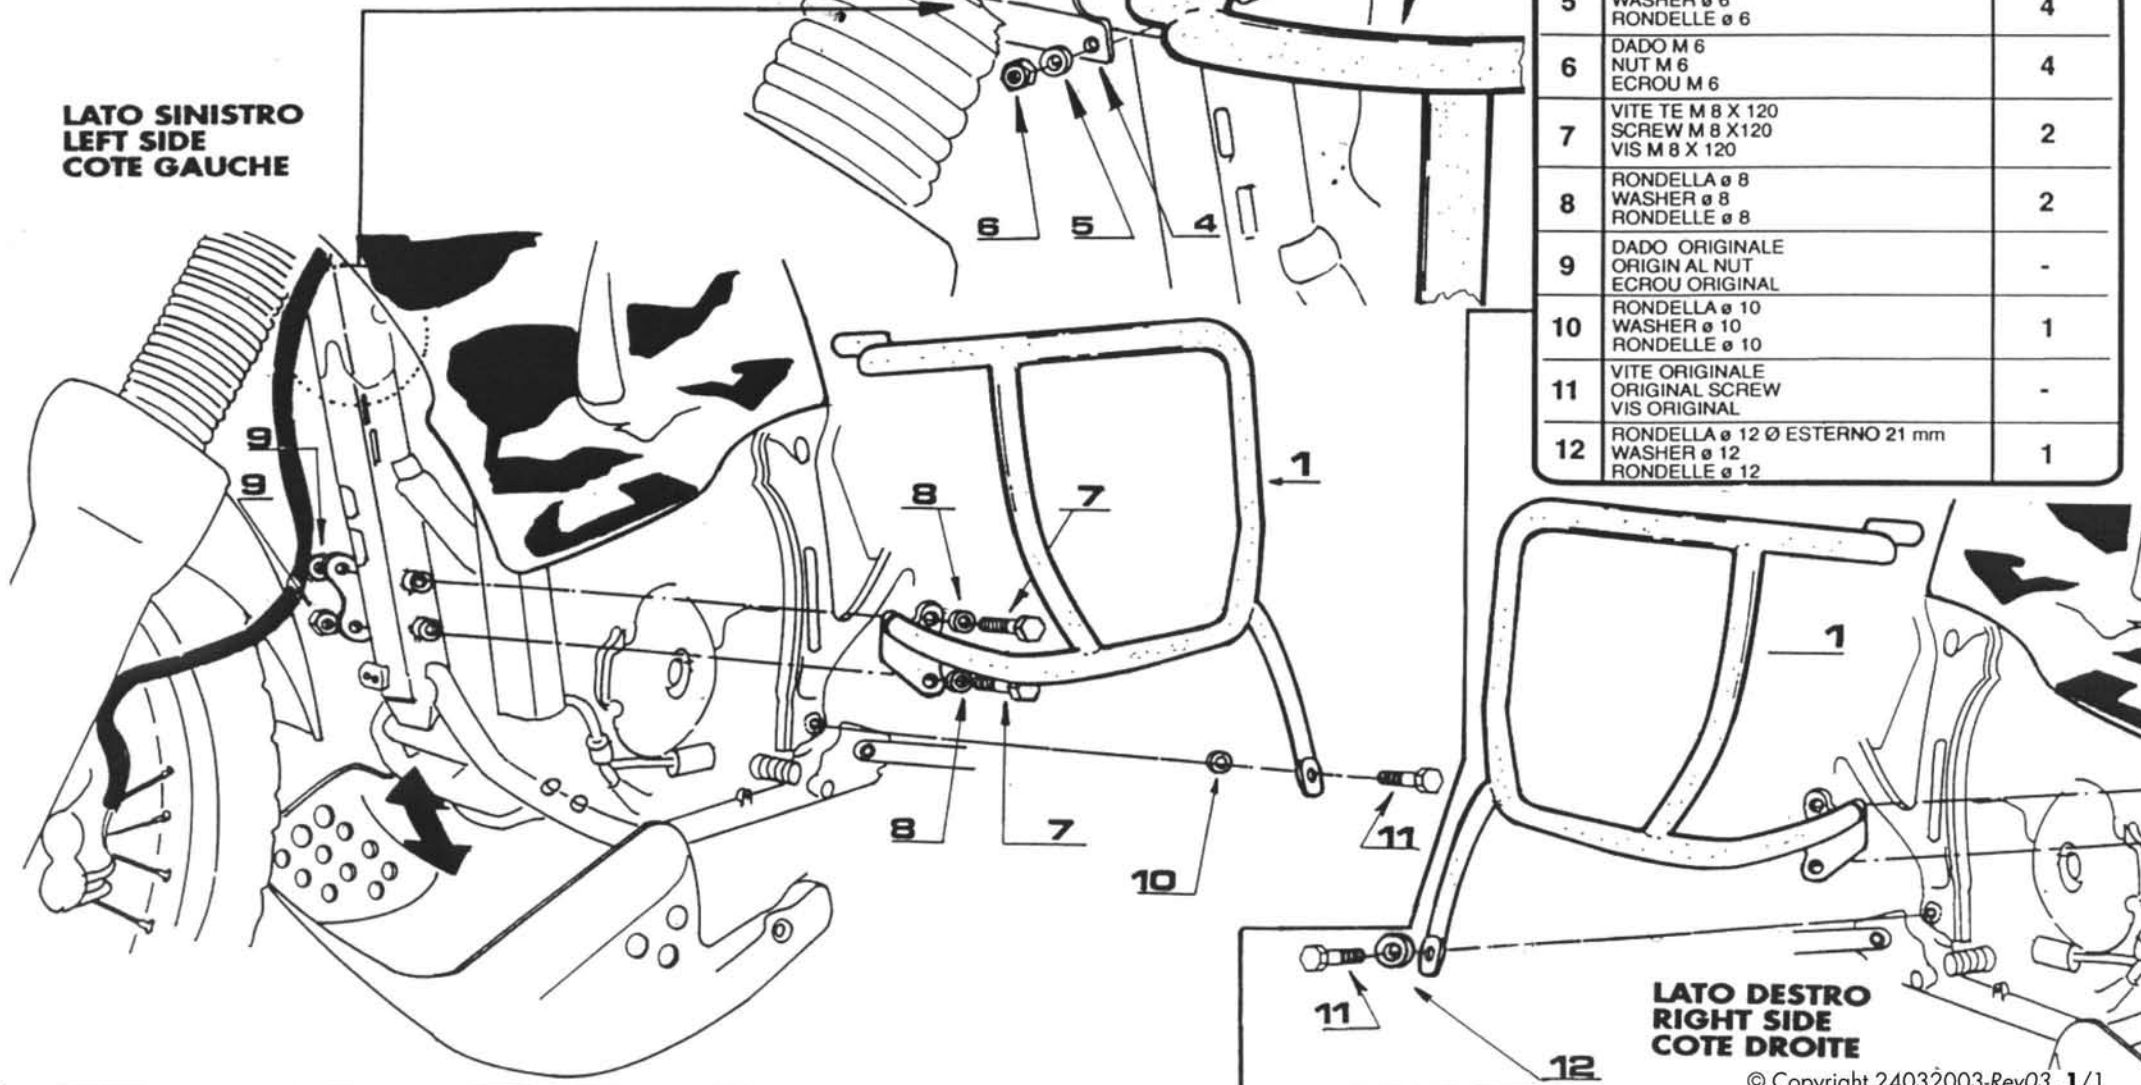

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE)
1	PARAMOTORE ENGINE GARD PARACARTER	2
2	CAVALLOTTO SPECIALE SPECIAL CRAMP CRAMPON SPECIAL	2
3	SUPPORTO SUPPORT SUPPORT	1
4	SUPPORTO SUPPORT SUPPORT	1
5	RONDELLA $\varnothing$ 6 WASHER $\varnothing$ 6 RONDELLE $\varnothing$ 6	4
6	DADO M 6 NUT M 6 ECROU M 6	4
7	VITE TE M 8 X 120 SCREW M 8 X 120 VIS M 8 X 120	2
8	RONDELLA $\varnothing$ 8 WASHER $\varnothing$ 8 RONDELLE $\varnothing$ 8	2
9	DADO ORIGINALE ORIGINAL NUT ECROU ORIGINAL	-
10	RONDELLA $\varnothing$ 10 WASHER $\varnothing$ 10 RONDELLE $\varnothing$ 10	1
11	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL	-
12	RONDELLA $\varnothing$ 12 $\varnothing$ ESTERNO 21 mm WASHER $\varnothing$ 12 RONDELLE $\varnothing$ 12	1

LATO DESTRO  
RIGHT SIDE  
COTE DROITE