

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

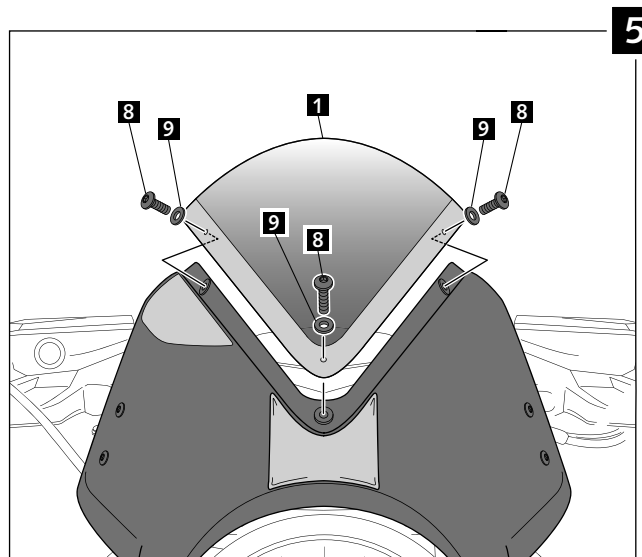
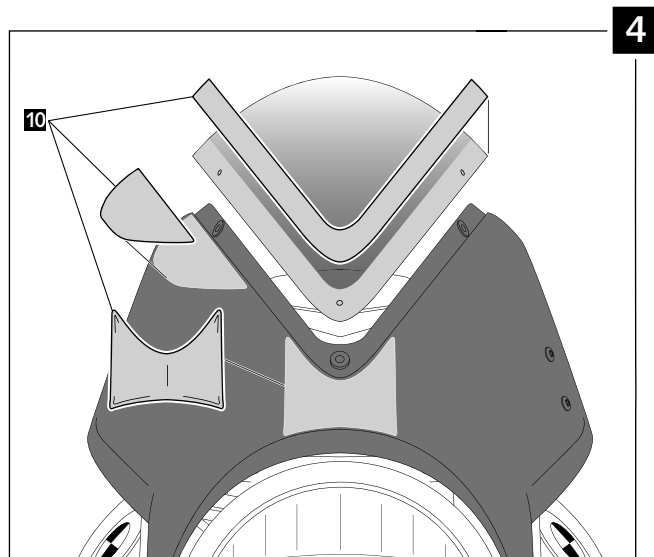
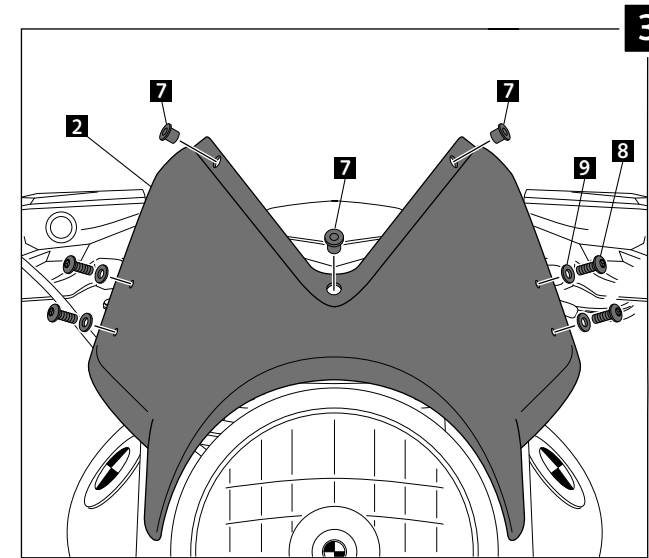
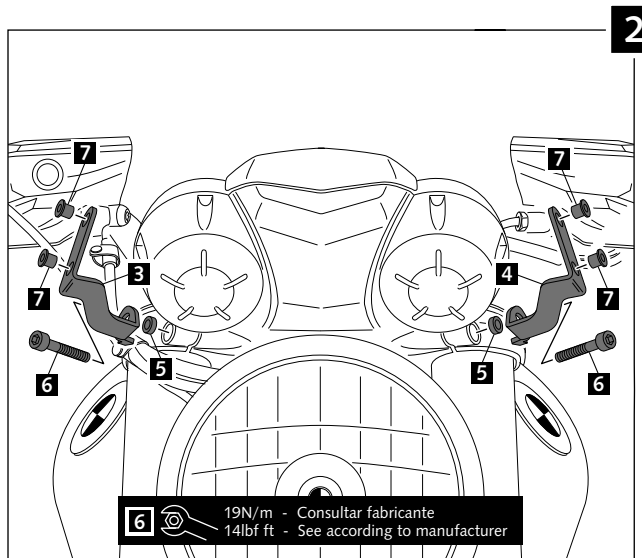
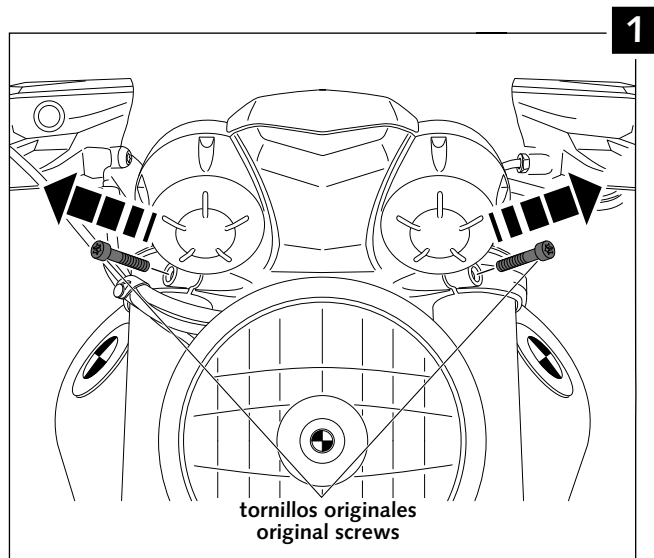
www.puig.tv - www.puigusa.com










INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

CÚPULA ADAPTABLE A – SCREEN FOR – WINDSCHUTZSCHEIBE FÜR BMW R NINE T / BMW R NINE T PURE

Mod. BLACK FAIRING
Ref.: 7012

Mod. CARBON FAIRING
Ref.: 7559



ID.	DESCRIPCIÓN / DESCRIPTION	QTY.
1	 Cúpula / Screen	1
2	 Carcasa / Fairing	1
3	 Soporte derecho / Right support	1
4	 Soporte izquierdo / Left support	1
5	 Casquillo Øint. 8,5 x Øext. 14x12 / Øinner 8,5 x Øouter 14x12 Arrowhead	2
6	 Tornillo Allen M8x40 DIN 912 / M8x40 DIN 912 Allen screw	2
7	 Silemblock M5 / M5 Silemblock	7
8	 Tornillo Allen M5x16 ISO 7380 / M5x16 ISO 7380 Allen screw	7
9	 Arandela Nylon M5x0,5 / M5x0,5 Nylon washer	7
10	Adhesivos / Stickers	1