



# MASTECH

## YAMAHA XTZ / TENERÉ 660 08 - UP

Montaje para Protector de Regulador

 Esp/Spa  Ing/Eng

**Nota:**

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

**Herramientas:**

Kit llaves rache + copas




### Kit Instalado



Ubicar el Protector MASTECH según se muestra en la imagen utilizando los tornillos originales de la moto.

### El Kit Contiene:

Protector de Regulador

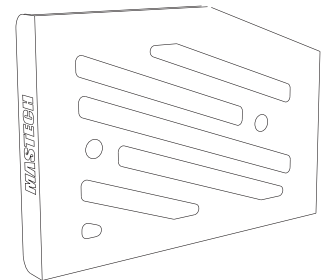

Cantidad: 1

*Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.*

**Calle 76 # 52D - 74 / Telefax: (57+4) 448 8428 / Medellín - Colombia**  
**www.mastechno.com**



# MASTECH

## YAMAHA XTZ / TENERÉ 660 08 - UP

### Assembly Instructions for Rectifier Cover



#### Note:

Do not tighten the screws until they are completely aligned with the holes.  
Before the installation, please verify through the manual that all pieces and parts are complete.

#### Tools Required

Ratchet and socket set




## Assembled Kit



Place the MASTECH Rectifier Cover as shown in the image and use the original bolts from the motorcycle to install the part.

## Parts Included:

### Rectifier Cover

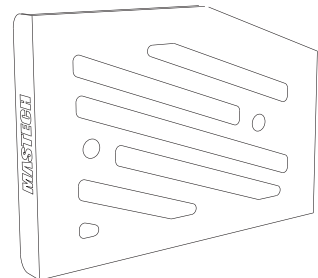

Cantidad: 1

*After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened*