




Mounting Suggestions Triumph Bonneville, T100, Scrambler, Thruxton 2001 – 2013 Bonneville SE 2012 One-Piece Seat

Removal of Stock Seat (Tools Needed 5mm Allen wrench)

1. Remove two stock 6mm Allen bolts from under the rear of the stock seat. These will be used to install your Mustang seat.
2. Lift the rear of the seat up and back to disengage the nose mount.



Triumph Bonneville T-100
2013 pictured

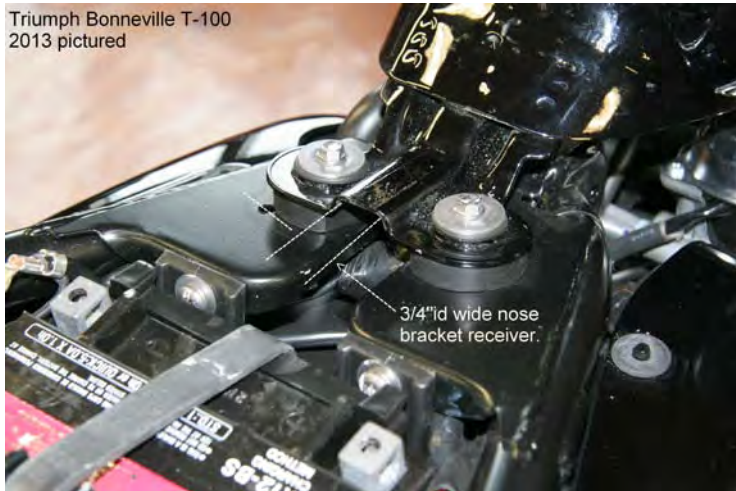

Installation of Mustang Seat

1. Insert the nose bracket of your Mustang seat into the frame receptacle, just as stock was installed.
2. Secure rear of seat with two stock Allen bolts.

Enjoy your new Mustang Seat!



These steps are guidelines to help you install your new Mustang product. If you need further assistance please call us at 800-243-1392, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to questions@mustangseats.com or visit our website at www.mustangseats.com.

For care and maintenance of our seats, please go to our website under "[Support](#)".

Ref: part #s 76827, 76828