

## Denali Light Mount Ural Sidecar Motorcycles

LAH.12.10000 Instructions Rev:00

### PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Distributed by:	
Twisted Throttle LLC 570 Moose Neck Rd Exeter, RI 02822	phone: 401.284.4200 fax: 401.223.6955 www.twistedthrottle.com




## Installation Instructions

Step 1

1  
Offset Bracket  
  
LAH.05.001  
Qty.....2

2  
Lens Head Screw  
  
M8x40.....ISO 7380  
Qty.....2

3  
Low Socket  
Head Cap Screw  
  
M8x12.....DIN 7984  
Qty.....2

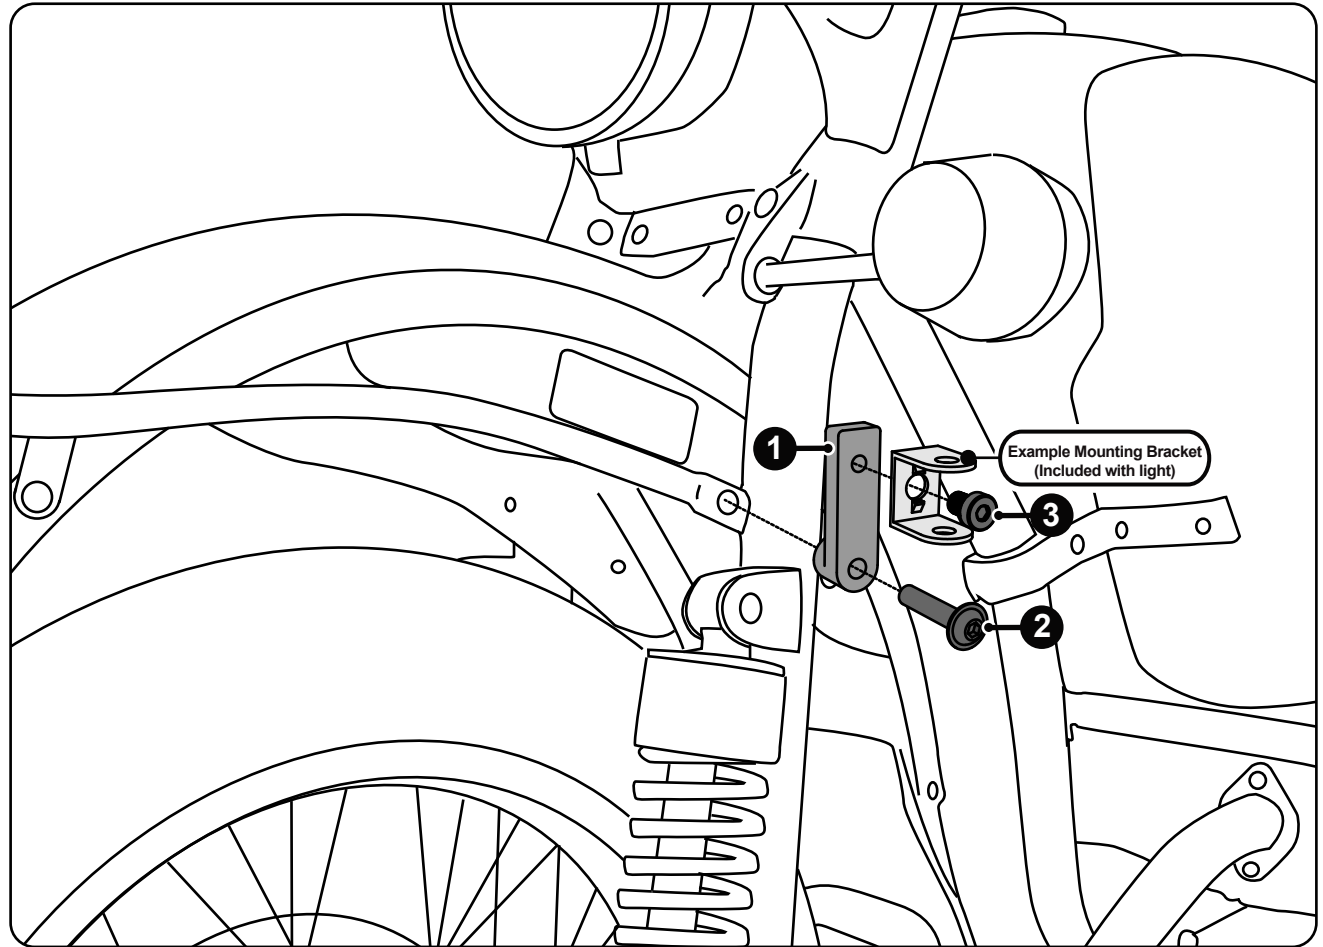

**Step One:** Remove the fender frame bolt and mount the offset bracket to this location using bolt (#2). Bolt the light hinge to the threaded hole on the offset bracket using bolt (#3).