




1. Please power off your Original monitor before installation



2. Pry the Center speaker cover out with the included Pry Tool

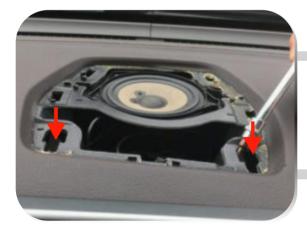

3. Remove the existing screws from original monitor



4. Remove the Original monitor carefully





5. Unplug the original monitor from the connector



6. Open the armrest box



7. Pry the decorated cover out with the included pry tool from arm rest box button.



8. Remove the left and right screws






9. Pry the central dash board and remove it with the included pry tool.



10. Remove the screws from original host.

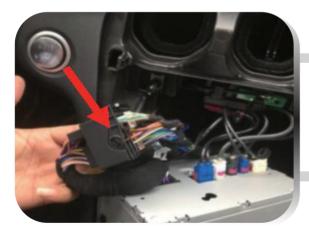

11. Remove and unplug the power harness from original host, and connect it to android player's harness. Please refer to wiring harness diagram to determine the wiring locations (Page 10).



12. Plug Audio-USB into USB port which is located in the arm rest box. Please refer to Wiring diagram to determin which USB to use (Page 10).





13. Connect original monitor LVDS cable with Android LVDS cable. Please refer to wiring diagram at Page10 to determine the cable location.



14. Assemble the stand for the Android monitor and place the cables well into the slots provided.





15. Connect the cables to the Android player. Please refer to wiring diagram at Page 10 to determine the cable location.

16. Pry the screw cover out on Android back cover, and lock the screws.





17. Installation Complete



It is recommended to install the microphone at the A-pillar, positioned close to the driver's location.


It is recommended to install the GPS antenna on the windscreen, specifically behind the rear-view mirror.





Troubleshoot NTG 5.0 sound issue



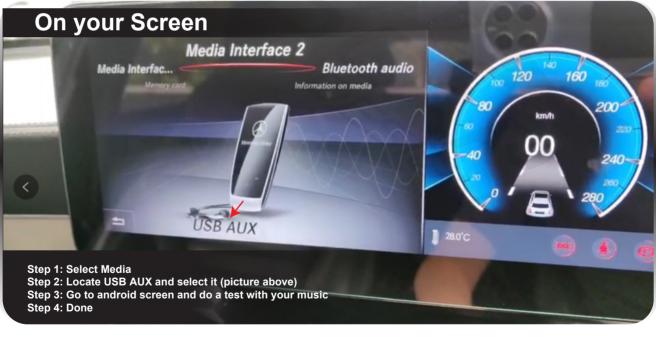



Technical Support:

- ompcardesign 💿
- www.dmpcardesign.com
- f) www.facebook.com/dmpcardesign
- +60 11-1095 6055 (Wendy)
 +60 17-607 1426 (Seven)



NTG 5.0 Setting instructions

Voice Setting

Audio transfer box (for AUX to USB) Operation Guide

Note: NTG 5.0 system does not have AUX functionality. Android machine requires an external audio transfer boxfor AUX to USB

1. After plugging the USB-AUX device into the USB interface of the original car, the host recognizes the USB-AUX device in the USB-AUX sources interface, as shown below:



2. Scroll and select USBAUX sources to enter the page below:





3. Then set the shortcut key, by long press the "* button on the "COMAND" panel. Afterward, you will enter the main interface as shown below.

4. Starting from the leftmost position, count to the "6th" item on the main interface and place the USB audio device shortcut there.



- Starting from the left, place the USB audio device shortcut in the 6th slot.

5. Return to the Android main interface then select: Settings - System - AUX position - set AUX Position to "6"



- The original car AUX position is set to "6"

6. If there is no sound after following the above settings, please check the volume of the machine and verify if the optical fiber cable is connected.



Sound settings


1.Settings---->Volume---->Android Volume/OEM Volume

2.Settings---->Android---->Sound





7. If the original car plug has an optical fiber plug but does not have a speaker cable, an additional small speaker is required.

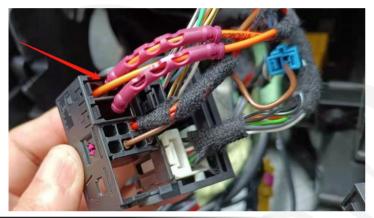


Car Display Setting

1. Car Display : Choose [5]-[8].

Settings—Factory Settings—password: 190627—Car Display: [5]-[8]



2. CAN Protocol : NTG5.0 does not need to set CAN protocol.

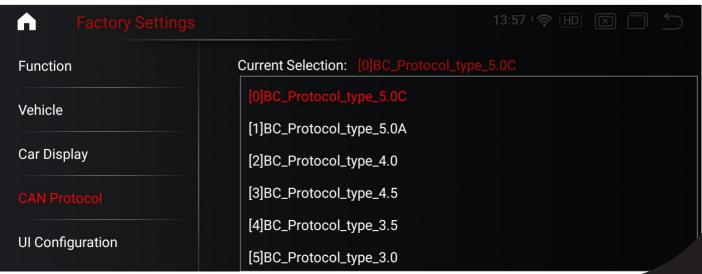



Troubleshoot Reverse camera issues on NTG 5.0

